

SECTION **IDX**
ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

Numerics	
3METER - Wiring diagram	DI-35
A	
A/C component layout	ATC-23
A/C compressor mounting	ATC-131
A/C compressor precaution	ATC-11
A/C compressor special service tool	ATC-15
A/C controller	ATC-108
A/C diagnostic work flow (auto A/C)	ATC-97
A/C evaporator	ATC-144
A/C HFC134a (R134a) system precaution	ATC-5
A/C HFC134a (R134a) system service procedure	ATC-129
A/C HFC134a (R134a) system service tools ...	ATC-16
A/C HFC134a system service equipment precaution ...	ATC-12
A/C lubricant (R134a)	ATC-24
A/C lubrication oil	ATC-150
A/C operational check	ATC-57
A/C self-diagnoses (auto A/C)	ATC-49 , ATC-97
A/C service data specification	ATC-150
A/C trouble diagnoses (auto A/C)	ATC-36
A/C, A - Wiring diagram	ATC-42
A/T fluid checking	AT-12 , AT-51 , MA-22
A/T fluid replacement	AT-12 , MA-24
A/T fluid temperature sensor	AT-130
A/T IND - Wiring diagram	DI-74
A/T self-diagnoses	AT-98
A/T shift lock system	AT-230
A/T shift lock system - Wiring diagram	AT-231
A/T trouble diagnoses	AT-41
A/T Wiring diagram AT - CAN	AT-101
A/T Wiring diagram AT - FTS	AT-131
A/T Wiring diagram AT - MAIN	AT-178
A/T Wiring diagram AT - MMSW	AT-165
A/T Wiring diagram AT - NONDTC	AT-184
A/T Wiring diagram AT - PNP/SW	AT-109
A/T Wiring diagram AT - STSIG	AT-104
A/T Wiring diagram AT - VSS A/T	AT-114
Accelerator control system	ACC-3
Accelerator pedal position (APP) sensor	EC-587 , EC-595 , EC-611
Accelerator pedal released position learning	EC-42
AF1B1-Wiring diagram	EC-464 , EC-472 , EC-480 , EC-489 , EC-499 , EC-508 , EC-520
AF1B2-Wiring diagram	EC-466 , EC-474 , EC-482 , EC-491 , EC-501 , EC-510 , EC-522
AF1HB1-Wiring diagram	EC-379
AF1HB2-Wiring diagram	EC-381
Air bag	SRS-3
Air bag disposal	SRS-54
Air bag precautions	SRS-3
Air bleeding (hydraulic clutch)	CL-7
Air bleeding for brake system	BR-10
Air cleaner and air duct	EM-14
Air cleaner filter replacement	MA-18
Air conditioner cut control	EC-28
Air flow meter - See Mass air flow sensor	EC-153 , EC-162
Air fuel ratio sensor 1	EC-462 , EC-470 , EC-478 , EC-487 , EC-496 , EC-505 , EC-517
Air fuel ratio sensor 1 heater	EC-378
Air mix. door motor	ATC-68 , ATC-123
Air spoiler, rear	EI-30
Ambient sensor	ATC-98 , ATC-110
Angular tightening application	EM-3
Antenna	AV-45
APPS1 - Wiring diagram	EC-589
APPS2 - Wiring diagram	EC-597
APPS3 - Wiring diagram	EC-613
ASC/BS - Wiring diagram	EC-556
ASC/SW - Wiring diagram	EC-548
ASCBOF - Wiring diagram	EC-653
ASCD	EC-687
ASCD (automatic speed control device)	ACS-2
ASCIND - Wiring diagram	EC-669
Ashtray illumination	LT-210
AT indicator lamp	DI-74
Audio	AV-6
AUDIO - Wiring diagram	AV-11
Auto air conditioner - Wiring diagram	ATC-42
Auto amp	ATC-109
Auto anti-dazzling inside mirror	GW-54
Automatic amplifier	ATC-59 , ATC-109
Axle	MA-29
Axle housing (rear)	RAX-8
B	
Back Door	BL-105 , BL-106
Back door	BL-105 , BL-106
Back door opener - See Back door	BL-110
BACK/L - Wiring diagram	LT-179
Back-up lamp	LT-179
Back-up lamp switch (M/T)	MT-12
Battery	SC-4
Battery/Starting/Charging System Tester	SC-6 , SC-15 , SC-23
BCM (Body control module)	BCS-3
Blower motor	ATC-75 , ATC-116
Blower unit	ATC-114
Bose speaker amp.	AV-6 , AV-7
Brake booster	BR-22
Brake fluid change	BR-9
Brake fluid level	MA-27
Brake fluid level and line check	BR-9
Brake hydraulic line	BR-11
Brake inspection	MA-27
Brake lines and cables inspection	MA-27
Brake master cylinder	BR-14
Brake pedal	BR-6
Brake switch	EC-581
BRK/SW - Wiring diagram	EC-582
Bulb specifications	LT-248
Bumper, front	EI-14

ALPHABETICAL INDEX

Bumper, rear [EI-17](#)

C

Camshaft [EM-76](#)
 Camshaft inspection [EM-78](#)
 Camshaft position sensor (PHASE) [EC-274](#)
 CAN - Wiring diagram [EC-139](#), [LAN-12](#), [LAN-39](#),
[LAN-63](#), [LAN-87](#)
 CAN (Controller Area Network) [LAN-5](#), [LAN-11](#),
[LAN-38](#), [LAN-62](#), [LAN-86](#)
 CAN communication . [EC-29](#), [EC-138](#), [AT-30](#), [AT-100](#),
[WT-11](#), [LT-9](#), [LT-40](#), [LT-146](#), [LT-186](#), [LT-237](#), [WW-10](#),
[LAN-5](#), [LAN-11](#), [LAN-38](#), [LAN-62](#), [LAN-86](#)
 Canister-See EVAP canister [EC-676](#)
 CHARGE - Wiring diagram [SC-22](#)
 Charging system [SC-21](#)
 Chassis and body maintenance [MA-22](#)
 CHIME - Wiring diagram [DI-81](#)
 Circuit breaker [PG-16](#)
 Clock [DI-96](#)
 CLOCK - Wiring diagram [DI-96](#)
 Closed loop control [EC-26](#)
 Clutch cover [CL-15](#)
 Clutch disc [CL-15](#)
 Clutch master cylinder [CL-8](#)
 Clutch operating cylinder [CL-11](#)
 Clutch pedal [CL-5](#)
 Clutch release bearing [CL-13](#)
 Clutch release mechanism [CL-13](#)
 Clutch withdrawal lever [CL-13](#)
 Coil spring (front) [FSU-10](#)
 Collision diagnosis [SRS-61](#)
 Combination lamp, front, removal and installation
[LT-65](#), [LT-140](#)
 Combination lamp, rear, removal and installation
[LT-206](#)
 Combination meter [DI-4](#)
 Combination meter removal and installation - See
 Instrument panel [IP-11](#)
 Combination switch [LT-167](#)
 Component Location (auto A/C) [ATC-39](#)
 Compression pressure [EM-92](#)
 Compressor special service tool [ATC-15](#)
 Condenser ... [ATC-139](#), [ATC-142](#), [ATC-143](#), [ATC-144](#),
[ATC-145](#)
 Console box - See Instrument panel [IP-10](#)
 CONSULT for VDC [BRC-108](#)
 Control units (terminal arrangement) [PG-82](#)
 Control valve (A/T) [AT-35](#)
 Controller Area Network (CAN) [LAN-5](#), [LAN-11](#),
[LAN-38](#), [LAN-62](#), [LAN-86](#)
 Converter housing installation [AT-265](#)
 COOL/F - Wiring diagram [EC-444](#)
 Cooling circuit (engine) [CO-7](#)
 Cooling fan [CO-19](#)
 Cooling fan motor [EC-452](#)
 Cowl top [EI-20](#)
 Cowl top cover [EI-20](#)

Crankcase ventilation system - See Positive crankcase
 ventilation [EC-685](#)
 Crankshaft position sensor (POS) [EC-267](#)
 Crash zone sensor [SRS-50](#)
 Cylinder head [EM-92](#)

D

D/LOCK - Wiring diagram [BL-26](#)
 Daytime light system [LT-68](#), [LT-105](#)
 Daytime running light - See Daytime light system
[LT-68](#), [LT-105](#)
 DEF - Wiring diagram [GW-60](#), [GW-64](#)
 Diagnosis sensor unit [SRS-53](#)
 Diagnostic trouble code (DTC) for OBD system .. [EC-8](#)
 Differential carrier assembly [RFD-12](#)
 Differential carrier disassembly [RFD-16](#)
 Differential gear oil replacement [MA-25](#)
 Direct clutch solenoid valve [AT-152](#), [AT-154](#)
 Display and amp.assembly [ATC-59](#)
 Door glass [GW-51](#)
 Door glass Fitting Adjustment(Front) [GW-53](#)
 Door lock [BL-103](#)
 Door mirror [GW-83](#)
 Door trim [EI-33](#)
 Door, front [BL-97](#), [BL-98](#), [GW-51](#)
 Drive belt [EM-12](#)
 Drive pinion diff. inspection [RFD-15](#)
 Drive pinion height [RFD-21](#), [RFD-24](#)
 Drive shaft (rear) [RAX-10](#)
 Driver air bag [SRS-41](#)
 DTRL - Wiring diagram [LT-73](#), [LT-110](#)
 Duct and grilles [ATC-125](#)

E

ECM power supply [EC-129](#), [EC-385](#)
 ECM/PW - Wiring diagram [EC-386](#)
 ECTS - Wiring diagram [EC-178](#)
 Electric throttle control actuator [EC-396](#), [EC-398](#)
 Electrical load signal circuit [EC-651](#)
 Electrical unit [PG-82](#)
 Electrical units location [PG-74](#)
 Electronic ignition (EI) system [EC-27](#)
 Engine control module (ECM) [EC-375](#)
 Engine control system diagram and chart [EC-22](#)
 Engine coolant [CO-9](#)
 Engine coolant temperature sensor (ECTS) ... [EC-176](#),
[EC-190](#)
 Engine oil [LU-6](#)
 Engine oil filter replacement [MA-19](#)
 Engine oil precautions [GI-7](#)
 Engine removal [EM-105](#)
 ETC1 - Wiring diagram [EC-399](#)
 ETC2 - Wiring diagram [EC-407](#)
 ETC3 - Wiring diagram [EC-411](#)
 EVAP canister [EC-676](#)
 EVAP canister purge volume control solenoid valve
[EC-301](#), [EC-529](#)

A
B
C
D
E
F
G
H
I
J
K
L

ALPHABETICAL INDEX

EVAP canister vent control valve [EC-308](#), [EC-537](#)
EVAP control system (small leak) diagnosis .. [EC-292](#),
[EC-339](#)
EVAP control system pressure sensor [EC-317](#),
[EC-320](#), [EC-329](#)
EVAP control system purge flow monitoring diagnosis
[EC-287](#)
EVAP vapor lines inspection [MA-21](#)
Evaporative emission (EVAP) system [EC-673](#)
Evaporator [ATC-144](#)
Exhaust manifold [EM-23](#)
Exhaust system [EX-3](#)
Exhaust system inspection [EX-3](#), [MA-22](#)
Expansion valve [ATC-145](#)

F

F/LID - Wiring diagram [BL-54](#)
F/PUMP - Wiring diagram [EC-639](#)
Final drive disassembly [RFD-16](#)
Final drive pre-inspection [RFD-15](#)
Final drive removal and installation [RFD-10](#)
Floor trim [EI-43](#)
Flow charts [GI-27](#)
Fluid temperature sensor (A/T) [AT-130](#)
Fluorescent leak detector [ATC-146](#)
Flywheel (clutch) [CL-15](#)
Flywheel runout(QR) [EM-139](#)
Front axle [FAX-4](#)
Front brake solenoid valve [AT-148](#), [AT-150](#)
Front bumper [EI-14](#)
Front combination lamp removal and installation [LT-65](#),
[LT-140](#)
Front door [BL-97](#), [BL-98](#), [GW-51](#)
Front passenger air bag [SRS-45](#)
Front seat belt [SB-4](#)
Front seat belt pre-tensioner [SB-2](#), [SRS-3](#), [SRS-52](#)
Front side air bag [SRS-46](#)
Front suspension [FSU-5](#)
Front washer [WW-4](#)
Front wiper [WW-4](#)
FTTS - Wiring diagram [EC-238](#), [EC-243](#)
Fuel cut control (at no load high engine speed) . [EC-28](#)
Fuel filter replacement [FL-4](#)
Fuel gauge [DI-4](#)
Fuel level sensor [EC-357](#), [EC-359](#), [EC-361](#)
Fuel lid opener, electric [BL-53](#)
Fuel line inspection [FL-3](#), [MA-17](#)
Fuel precautions [GI-5](#)
Fuel pressure check [EC-45](#)
Fuel pressure release [EC-45](#)
Fuel pump [EC-638](#)
Fuel pump and gauge [FL-4](#)
Fuel system [FL-3](#)
Fuel tank [FL-10](#)
Fuel tank temperature sensor [EC-236](#), [EC-242](#)
Fuel tank vacuum relief valve [EC-676](#)
FUELB1 - Wiring diagram [EC-221](#), [EC-230](#)
FUELB2 - Wiring diagram [EC-222](#), [EC-231](#)

Fuse [PG-16](#)
Fuse and fusible link box [PG-89](#)
Fusible link [PG-16](#)

G

Gauges [DI-4](#)
Glass [GW-11](#), [GW-51](#)
GPS antenna [AV-50](#)
Ground distribution [PG-31](#)

H

H/LAMP - Wiring diagram [LT-11](#), [LT-42](#)
Harness connector [PG-80](#)
Harness layout [PG-47](#)
Hazard warning lamp [LT-143](#)
Headlamp [LT-7](#), [LT-38](#)
Headlamp removal and installation [LT-65](#), [LT-140](#)
Headlining - See Roof trim [EI-44](#), [EI-45](#)
Heated oxygen sensor 2 (bank 1) [EC-199](#), [EC-208](#),
[EC-415](#), [EC-426](#)
Heated oxygen sensor 2 (bank 2) [EC-199](#), [EC-208](#),
[EC-415](#), [EC-426](#)
Heated oxygen sensor 2 heater (bank 1) [EC-144](#)
Heated oxygen sensor 2 heater (bank 2) [EC-144](#)
Heated seat [SE-57](#)
Heater and cooling unit (Heater core) [ATC-118](#)
HFC134a (R134a) system precaution [ATC-5](#)
HFC134a (R134a) system service procedure [ATC-129](#)
HFC134a (R134a) system service tools [ATC-16](#)
HFC134a system service equipment precaution
[ATC-12](#)
High & low reverse clutch solenoid valve [AT-156](#),
[AT-158](#)
Hood [BL-13](#)
Hood lock system [BL-16](#)
Horn [WW-55](#)
HORN - Wiring diagram [WW-55](#)

I

IATS - Wiring diagram [EC-172](#)
Idle air volume learning [EC-43](#)
Idle mixture ratio [EC-31](#)
Idle speed [EC-31](#)
Idle speed control (ISC) [EC-365](#), [EC-367](#)
Ignition coil [EM-33](#), [EC-620](#)
Ignition control system [EC-620](#)
Ignition timing [EC-31](#)
IGNSYS - Wiring diagram [EC-621](#)
ILL - Wiring diagram [LT-239](#)
Illumination [LT-236](#)
In vehicle sensor [ATC-100](#), [ATC-111](#)
INJECT - Wiring diagram [EC-633](#)
Injector [EC-632](#)
Input clutch solenoid valve [AT-144](#), [AT-146](#)
Instrument panel [IP-10](#)
Intake air temperature sensor [EC-170](#), [EC-194](#)

ALPHABETICAL INDEX

Intake door control linkage adjustment [ATC-74](#)
 Intake door motor [ATC-72](#), [ATC-117](#)
 Intake manifold [EM-21](#)
 Intake manifold collector [EM-16](#)
 Intake sensor [ATC-106](#), [ATC-113](#)
 Intake valve timing control (Bank 1) [EC-141](#)
 Intake valve timing control (Bank 2) [EC-141](#)
 Intake valve timing control solenoid valve (Bank 1)
[EC-389](#)
 Intake valve timing control solenoid valve (Bank 2)
[EC-389](#)
 Integrated homelink transmitter [BL-177](#)
 Interior [EI-35](#)
 Interior lamp [LT-211](#)
 IPDM (Intelligent power distribution module engine
 room) [PG-17](#)
 IVCB1 - Wiring diagram [EC-390](#)
 IVCB2 - Wiring diagram [EC-392](#)
 IVIS (Infiniti vehicle immobilizer system) precautions ...
[GI-3](#)

K

KEYLES - Wiring diagram [BL-67](#)
 Knock sensor (KS) [EC-262](#)
 KS - Wiring diagram [EC-263](#)

L

LAN system circuit [ATC-61](#)
 License lamp [LT-184](#)
 Line pressure solenoid valve [AT-123](#)
 Line pressure test (A/T) [AT-52](#)
 Liquid gasket application [LU-2](#), [CO-2](#)
 Location of electrical units [PG-74](#)
 Lock, door [BL-103](#)
 Low coast brake solenoid valve [AT-160](#), [AT-162](#)
 Low tire pressure warning system [WT-9](#)
 Lubricant (R134a) A/C [ATC-6](#), [ATC-24](#)
 Lubrication circuit (engine) [LU-4](#)
 Lubrication oil A/C [ATC-150](#)

M

M/ANT - Wiring diagram [AV-46](#)
 M/T major overhaul [MT-27](#)
 M/T oil replacement [MT-10](#)
 M/T removal and installation [MT-19](#)
 MAFS - Wiring diagram [EC-156](#), [EC-164](#)
 Magnet clutch [ATC-80](#)
 MAIN - Wiring diagram [EC-129](#)
 Maintenance (engine) [MA-14](#)
 Manual transmission oil replacement [MA-22](#)
 Mass air flow sensor (MAFS) [EC-153](#), [EC-162](#)
 Master cylinder (clutch) [CL-8](#)
 Meter [DI-4](#)
 METER - Wiring diagram [DI-9](#)
 MIL data link connectors circuit [EC-671](#)
 MIL/DL - Wiring diagram [EC-671](#)

MIRROR - Wiring diagram [GW-82](#)
 Mirror, door [GW-83](#)
 Mirror, out side [GW-83](#)
 Misfire [EC-255](#)
 Mode door control linkage adjustment [ATC-67](#)
 Mode door motor [ATC-65](#), [ATC-122](#)
 Molding - See Exterior [EI-22](#), [EI-26](#)
 Multiport fuel injection (MFI) system [EC-25](#)
 Multiport fuel injection precautions [GI-6](#)

N

NATS - Wiring diagram [BL-161](#)
 NAVI - Wiring diagram [AV-64](#)
 Navigation system [AV-49](#)
 NVH troubleshooting (BR) [BR-5](#)
 NVIS (Nissan vehicle immobilizer system) [BL-158](#)
 NVIS (Nissan vehicle immobilizer system) precautions
[GI-3](#)

O

O2H2B1 - Wiring diagram [EC-146](#)
 O2H2B2 - Wiring diagram [EC-148](#)
 O2S2B1 - Wiring diagram .. [EC-201](#), [EC-211](#), [EC-418](#),
[EC-429](#)
 O2S2B2 - Wiring diagram .. [EC-203](#), [EC-213](#), [EC-420](#),
[EC-431](#)
 Oil cooler (engine) [LU-10](#)
 Oil filter [LU-9](#)
 Oil pan (engine) [EM-27](#)
 Oil pressure (engine) [LU-7](#)
 Oil pump (engine) [LU-12](#)
 Oil pump regulator valve (engine) [LU-12](#)
 Oil seal replacement (front of final drive) [RFD-6](#)
 Oil seal replacement (side of final drive) [RFD-8](#)
 Operating cylinder (clutch) [CL-11](#)
 ORVR (On-board Refueling Vapor Recovery) . [EC-680](#)
 Out side mirror [GW-83](#)
 Overheat [EC-440](#)

P

P/SCKT - Wiring diagram [WW-53](#)
 Park/Neutral position switch [EC-573](#)
 Park/neutral position switch (A/T) [AT-108](#)
 Parking brake control [PB-3](#)
 Parking lamp [LT-184](#)
 PCV (positive crankcase ventilation) [EC-685](#)
 PGC/V - Wiring diagram [EC-303](#), [EC-531](#)
 PHSB1 - Wiring diagram [EC-275](#)
 PHSB2 - Wiring diagram [EC-277](#)
 Pinion bearing preload diff. [RFD-30](#)
 Pinion gear height diff. [RFD-24](#)
 PNP/SW - Wiring diagram [EC-575](#)
 POS - Wiring diagram [EC-268](#)
 POWER - Wiring diagram [PG-5](#)
 Power door lock [BL-21](#)
 Power socket [WW-53](#)

A
B
C
D
E
F
G
H
I
J
K
L

ALPHABETICAL INDEX

Power steering fluid level	PS-6 , MA-29	Seat belt, front	SB-4
Power steering gear	PS-17	SEN/PW - Wiring diagram	EC-458
Power steering oil pump	PS-29	SHIFT - Wiring diagram	AT-231
Power steering system bleeding	PS-6	Shift lock system	AT-230
Power supply routing	PG-4	Shift schedule	AT-328
Power window	GW-18	Shock absorber (front)	FSU-10
PRE/SE - Wiring diagram	EC-322 , EC-331	Shock absorber (rear)	RSU-9
Precautions for Leak detection dye	ATC-14	Side air bag (satellite) sensor	SRS-51
Precautions (General)	GI-4	Side bearing preload diff.	RFD-23
Pressure plate - See Clutch cover	CL-15	Side flange installation diff.	RFD-9
Pressure switch 1	AT-150 , AT-170	Side trim	EI-35
Pressure switch 2	AT-162	SMJ (super multiple junction)	PG-84
Pressure switch 3	AT-146 , AT-172	Spark plug	EM-34
Pressure switch 5	AT-154 , AT-174	Spark plug replacement	MA-20
Pressure switch 6	AT-158 , AT-176	Specification value	EC-124
Pressure test (A/T)	AT-52	Speedometer	DI-4
Propeller shaft	PR-5	Spiral cable	SRS-43
Propeller shaft inspection	MA-24	SRS - See Supplemental Restraint System	SRS-6
Propeller shaft on vehicle service	PR-5	SRS - Wiring diagram	SRS-12
Propeller shaft vibration	PR-5	SRS Trouble diagnoses	SRS-8
PS/SEN - Wiring diagram	EC-370	Stabilizer bar (rear)	RSU-16

R

Radiator	CO-12	Stall test (A/T)	AT-51
Radio - See Audio	AV-6	Standardized relay	PG-86
Rear axle	RAX-6	START - Wiring diagram	SC-12
Rear bumper	EI-17	Starter	SC-10
Rear combination lamp removal and installation	LT-206	Starting system	SC-10
Rear cover packing replacement diff.	RFD-31	Steering gear and linkage inspection	MA-28
Rear suspension	RSU-5	Steering linkage	PS-17
Rear washer	WW-38	Steering wheel and column	PS-8 , PS-10
Rear window defogger	GW-56	Steering wheel turning force	PS-8
Rear wiper	WW-38	Stop lamp	LT-173
Refrigerant connection precaution	ATC-6	Stop lamp switch	EC-581
Refrigerant discharging evacuating charging	ATC-129	STOP/L - Wiring diagram	LT-175
Refrigerant general precaution	ATC-6	Sunload sensor	ATC-103 , ATC-112
Refrigerant lines	ATC-129	Supplemental Restraint System	SRS-6
Refrigerant pressure sensor	EC-645 , ATC-86 , ATC-143	Supplemental restraint system - Wiring diagram	SRS-12
Refrigeration cycle	ATC-19	Suspension	MA-29
Release bearing (clutch)	CL-13	Symbols and abbreviations	GI-10 , GI-23
Remote keyless entry system	BL-61		
Removal and installation (A/T)	AT-263		
Reverse lamp switch (M/T) - See Back-up lamp switch (M/T)	MT-12		
Revolution sensor (A/T)	AT-112		
Ring gear diff. inspection	RFD-15		
Rocker cover	EM-42		
Room lamp - See Interior lamp	LT-211		
ROOM/L - Wiring diagram	LT-215		
RP/SEN - Wiring diagram	EC-646		

S

SEAT - Wiring diagram	SE-12	Tachometer	DI-4
Seat belt inspection	SB-8	Tail lamp	LT-184
Seat belt pre-tensioner disposal	SRS-54	TAIL/L - Wiring diagram	LT-188
		TCM circuit diagram	AT-50
		TCM inspection table	AT-85
		Three way catalyst	EM-23
		Three way catalyst function (Bank 1)	EC-283
		Three way catalyst function (Bank 2)	EC-283
		Three way catalyst precautions	GI-5
		Throttle body	EM-20
		Throttle control motor	EC-410
		Throttle control motor relay	EC-405
		Throttle position sensor (TPS)	EC-182 , EC-247 , EC-453 , EC-455 , EC-603
		Throwout bearing - See Clutch release bearing	CL-13
		Thrust washer selection diff.	RFD-22
		Tie-rod	PS-17

T

ALPHABETICAL INDEX

Timing chain	EM-55	Wheel sensor (VDC)	BRC-143
Tire rotation	WT-8 , MA-27	Wheel sensors (ABS)	BRC-38
Tooth contact diff.	RFD-27	Wheel sensors (TCS)	BRC-83
Torque converter installation	AT-264 , AT-265	WINDOW - Wiring diagram	GW-23
Torque convertor clutch solenoid valve	AT-119 , AT-121	Window, door	GW-51
TPS1 - Wiring diagram	EC-249	Windshield	GW-11
TPS2 - Wiring diagram	EC-184	WIP/R - Wiring diagram	WW-40
TPS3 - Wiring diagram	EC-605	WIPER - Wiring diagram	WW-12
Transverse link (front)	FSU-13	Wiper, front	WW-4
Triple meter	DI-30	Wiper, rear	WW-38
TRNSCV - Wiring diagram	BL-177	Wiring Diagram (Cell code) list	PG-71
Trouble diagnoses	GI-11	Wiring diagrams	GI-15
Trunk lid	BL-112	Withdrawal lever (clutch)	CL-13
Turbine revolution sensor	AT-135	WT-T/WARN - Wiring diagram	WT-13
TURN - Wiring diagram	LT-148		
Turn signal lamp	LT-143		
Tyre pressure monitoring system - trouble diagnoses ..	WT-12		
Tyre pressure monitoring system - wiring diagram	WT-13		

U

Unified meter and A/C amp.	DI-54
Upper link (front susp.)	FSU-14

V

Vacuum hose (brake system)	BR-24
Vacuum hose drawing (Engine control)	EC-23
Valve clearance	EM-84
Valve guide	EM-100
Valve lifter	EM-80
Valve seat	EM-102
Valve spring	EM-103
Vanity mirror lamp	LT-207
VDC -Wiring diagram	BRC-99
Vehicle security (theft warning) system	BL-129
Vehicle speed sensor (VSS)	EC-363
VEHSEC - Wiring diagram	BL-134
VENT/V - Wiring diagram	EC-310 , EC-539
VIN registration	EC-42

W

WARN - Wiring diagram	DI-63
Warning chime	DI-77
Warning lamps	DI-62
Washer, front	WW-4
Washer, rear	WW-38
Water pump	CO-21
Water temperature gauge	DI-4
Wheel alignment (front)	FSU-6
Wheel alignment (rear)	RSU-5
Wheel balance	WT-7 , MA-25
Wheel bearing (front)	FAX-4
Wheel bearing (rear)	RAX-6
Wheel hub (front)	FAX-4
Wheel hub (rear)	RAX-6

A
B
C
D
E
F
G
H
I
J
K
L