

SECTION **IDX**  
ALPHABETICAL INDEX

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L

IDX

# ALPHABETICAL INDEX

## A

A/C air flow ..... [ATC-31](#)  
A/C component layout ..... [ATC-21](#)  
A/C compressor clutch removal and installation .....  
[ATC-153](#)  
A/C compressor mounting ..... [ATC-152](#)  
A/C compressor precaution ..... [ATC-13](#)  
A/C compressor special service tool ..... [ATC-16](#)  
A/C control operation (auto A/C) ..... [ATC-28](#)  
A/C diagnostic work flow (auto A/C) ..... [ATC-113](#)  
A/C evaporator ..... [ATC-164](#)  
A/C HFC134a (R134a) system precaution ..... [ATC-6](#)  
A/C HFC134a (R134a) system service procedure .....  
[ATC-149](#)  
A/C HFC134a (R134a) system service tools ... [ATC-16](#)  
A/C HFC134a system service equipment precaution ...  
[ATC-13](#)  
A/C lubricant (R134a) ..... [ATC-22](#)  
A/C lubrication oil ..... [ATC-170](#)  
A/C operational check ..... [ATC-76](#)  
A/C self-diagnoses (auto A/C) ..... [ATC-68](#), [ATC-113](#)  
A/C service data specification ..... [ATC-170](#)  
A/C system description (auto A/C) ..... [ATC-25](#)  
A/C trouble diagnoses (auto A/C) ..... [ATC-55](#)  
A/C, A - Wiring diagram ..... [ATC-61](#)  
ABS - Wiring diagram ..... [BRC-36](#)  
Accelerator control system ..... [ACC-2](#)  
Accelerator pedal position (APP) sensor ..... [EC-569](#),  
[EC-575](#), [EC-589](#)  
Accelerator pedal released position learning ..... [EC-63](#)  
Air bag ..... [SRS-3](#)  
Air bag disposal ..... [SRS-50](#)  
Air bag precautions ..... [SRS-3](#), [AP-2](#)  
Air bleeding for brake system ..... [BR-12](#)  
Air cleaner and air duct ..... [EM-14](#)  
Air cleaner filter replacement ..... [MA-17](#)  
Air conditioner cut control ..... [EC-29](#)  
Air flow meter - See Mass air flow sensor ..... [EC-183](#),  
[EC-191](#)  
Air mix. door motor ..... [ATC-87](#), [ATC-143](#)  
Ambient sensor ..... [ATC-115](#), [ATC-128](#)  
Angular tightening application ..... [EM-3](#)  
APPS1 - Wiring diagram ..... [EC-571](#)  
APPS2 - Wiring diagram ..... [EC-577](#)  
APPS3 - Wiring diagram ..... [EC-591](#)  
ASC/BS - Wiring diagram ..... [EC-541](#)  
ASC/SW - Wiring diagram ..... [EC-534](#)  
ASCBOF - Wiring diagram ..... [EC-641](#)  
ASCD ..... [EC-666](#)  
ASCD (automatic speed control device) ..... [ACS-2](#)  
ASCIND - Wiring diagram ..... [EC-648](#)  
AUDIO - Wiring diagram ..... [AV-12](#)  
Auto air conditioner - Wiring diagram ..... [ATC-61](#)  
Auto amp ..... [ATC-127](#)  
Auto anti-dazzling inside mirror ..... [GW-63](#), [GW-64](#)  
Automatic amplifier ..... [ATC-66](#), [ATC-78](#), [ATC-127](#)  
Automatic transmission fluid replacement ..... [MA-24](#)  
AV and NAVI control unit ..... [AV-115](#)

AV communication line ..... [AV-95](#), [AV-161](#)  
AWD - Wiring diagram ..... [TF-45](#)  
Axle ..... [MA-29](#)

## B

Back Door ..... [BL-136](#), [BL-137](#)  
Back door ..... [BL-136](#), [BL-137](#)  
Back door opener - See Back door ..... [BL-141](#)  
BACK/L - Wiring diagram ..... [LT-268](#)  
Back-up lamp ..... [LT-268](#)  
Battery ..... [SC-4](#)  
Battery/Starting/Charging System Tester [SC-6](#), [SC-12](#),  
[SC-20](#)  
Blower motor ..... [ATC-93](#), [ATC-135](#)  
Blower unit ..... [ATC-133](#)  
Board computer ..... [AV-63](#)  
Bose speaker amp. .... [AV-8](#)  
Brake booster ..... [BR-22](#)  
Brake fluid change ..... [BR-11](#)  
Brake fluid level ..... [MA-27](#)  
Brake fluid level and line check ..... [BR-11](#)  
Brake hydraulic line ..... [BR-13](#)  
Brake inspection ..... [MA-27](#)  
Brake lines and cables inspection ..... [MA-27](#)  
Brake master cylinder ..... [BR-15](#)  
Brake pedal ..... [BR-6](#)  
Brake switch ..... [EC-564](#)  
BRK/SW - Wiring diagram ..... [EC-565](#)  
Bulb specifications ..... [LT-364](#)  
Bumper, front ..... [EI-14](#)  
Bumper, rear ..... [EI-17](#)

## C

Camshaft ..... [EM-70](#)  
Camshaft inspection ..... [EM-72](#)  
Camshaft position sensor (PHASE) ..... [EC-328](#)  
CAN - Wiring diagram ..... [EC-160](#), [LAN-36](#), [LAN-65](#),  
[LAN-96](#), [LAN-125](#), [LAN-159](#), [LAN-190](#), [LAN-226](#),  
[LAN-260](#), [LAN-295](#), [LAN-326](#), [LAN-358](#), [LAN-389](#),  
[LAN-425](#), [LAN-457](#), [LAN-494](#), [LAN-529](#), [LAN-566](#),  
[LAN-597](#), [LAN-630](#), [LAN-661](#), [LAN-697](#), [LAN-730](#),  
[LAN-767](#), [LAN-803](#), [LAN-840](#), [LAN-873](#), [LAN-908](#),  
[LAN-941](#), [LAN-978](#), [LAN-1013](#), [LAN-1052](#), [LAN-1089](#)  
CAN (Controller Area Network) . [WT-10](#), [BL-26](#), [BL-80](#),  
[GW-67](#), [SE-18](#), [LAN-12](#), [LAN-34](#), [LAN-63](#), [LAN-94](#),  
[LAN-123](#), [LAN-157](#), [LAN-188](#), [LAN-224](#), [LAN-258](#),  
[LAN-293](#), [LAN-324](#), [LAN-356](#), [LAN-387](#), [LAN-423](#),  
[LAN-455](#), [LAN-492](#), [LAN-527](#), [LAN-564](#), [LAN-595](#),  
[LAN-628](#), [LAN-659](#), [LAN-695](#), [LAN-728](#), [LAN-765](#),  
[LAN-801](#), [LAN-838](#), [LAN-871](#), [LAN-906](#), [LAN-939](#),  
[LAN-976](#), [LAN-1011](#), [LAN-1050](#), [LAN-1087](#)  
CAN communication [EC-30](#), [EC-159](#), [CVT-20](#), [CVT-30](#),  
[CVT-76](#), [TF-33](#), [TF-63](#), [WT-10](#), [BRC-9](#), [BRC-56](#),  
[BRC-76](#), [BL-26](#), [BL-80](#), [GW-67](#), [SE-18](#), [LAN-12](#),  
[LAN-34](#), [LAN-63](#), [LAN-94](#), [LAN-123](#), [LAN-157](#),  
[LAN-188](#), [LAN-224](#), [LAN-258](#), [LAN-293](#), [LAN-324](#),  
[LAN-356](#), [LAN-387](#), [LAN-423](#), [LAN-455](#), [LAN-492](#),

# ALPHABETICAL INDEX

<a href="#">LAN-527</a> , <a href="#">LAN-564</a> , <a href="#">LAN-595</a> , <a href="#">LAN-628</a> , <a href="#">LAN-659</a> , <a href="#">LAN-695</a> , <a href="#">LAN-728</a> , <a href="#">LAN-765</a> , <a href="#">LAN-801</a> , <a href="#">LAN-838</a> , <a href="#">LAN-871</a> , <a href="#">LAN-906</a> , <a href="#">LAN-939</a> , <a href="#">LAN-976</a> , <a href="#">LAN-1011</a> , <a href="#">LAN-1050</a> , <a href="#">LAN-1087</a>			
Canister-See EVAP canister .....	<a href="#">EC-655</a>		
CHARGE - Wiring diagram .....	<a href="#">SC-19</a>		
Charging system .....	<a href="#">SC-18</a>		
Chassis and body maintenance .....	<a href="#">MA-22</a>		
CHIME - Wiring diagram .....	<a href="#">DI-100</a>		
CIGAR - Wiring diagram .....	<a href="#">WW-75</a>		
Circuit breaker .....	<a href="#">PG-15</a>		
Closed loop control .....	<a href="#">EC-26</a>		
Collision diagnosis .....	<a href="#">SRS-57</a>		
Combination lamp, front, removal and installation .....	<a href="#">LT-101</a>		
Combination lamp, rear, removal and installation .....	<a href="#">LT-304</a>		
Combination meter .....	<a href="#">DI-4</a>		
Combination meter removal and installation - See Instrument panel .....	<a href="#">IP-11</a>		
Combination switch .....	<a href="#">LT-251</a>		
COMM - Wiring diagram .....	<a href="#">AV-95</a> , <a href="#">AV-161</a>		
Component Location (auto A/C) .....	<a href="#">ATC-58</a>		
Compression pressure .....	<a href="#">EM-84</a>		
Compressor clutch removal and installation ..	<a href="#">ATC-153</a>		
Compressor special service tool .....	<a href="#">ATC-16</a>		
Condenser .....	<a href="#">ATC-163</a>		
Console box - See Instrument panel .....	<a href="#">IP-10</a>		
Console box lamp .....	<a href="#">LT-363</a>		
Control units (terminal arrangement) .....	<a href="#">PG-82</a>		
Control valve (CVT) .....	<a href="#">CVT-44</a>		
Controller Area Network (CAN) <a href="#">WT-10</a> , <a href="#">BL-26</a> , <a href="#">BL-80</a> , <a href="#">GW-67</a> , <a href="#">SE-18</a> , <a href="#">LAN-12</a> , <a href="#">LAN-34</a> , <a href="#">LAN-63</a> , <a href="#">LAN-94</a> , <a href="#">LAN-123</a> , <a href="#">LAN-157</a> , <a href="#">LAN-188</a> , <a href="#">LAN-224</a> , <a href="#">LAN-258</a> , <a href="#">LAN-293</a> , <a href="#">LAN-324</a> , <a href="#">LAN-356</a> , <a href="#">LAN-387</a> , <a href="#">LAN-423</a> , <a href="#">LAN-455</a> , <a href="#">LAN-492</a> , <a href="#">LAN-527</a> , <a href="#">LAN-564</a> , <a href="#">LAN-595</a> , <a href="#">LAN-628</a> , <a href="#">LAN-659</a> , <a href="#">LAN-695</a> , <a href="#">LAN-728</a> , <a href="#">LAN-765</a> , <a href="#">LAN-801</a> , <a href="#">LAN-838</a> , <a href="#">LAN-871</a> , <a href="#">LAN-906</a> , <a href="#">LAN-939</a> , <a href="#">LAN-976</a> , <a href="#">LAN-1011</a> , <a href="#">LAN-1050</a> , <a href="#">LAN-1087</a>			
Converter housing installation .....	<a href="#">CVT-203</a>		
COOL/F - Wiring diagram .....	<a href="#">EC-499</a>		
Coolant replacementVQ35DE .....	<a href="#">CO-8</a> , <a href="#">MA-15</a>		
Cooling circuit (engine) .....	<a href="#">CO-7</a>		
Cooling fan motor .....	<a href="#">EC-507</a>		
Cowl top .....	<a href="#">EI-21</a>		
Cowl top cover .....	<a href="#">EI-21</a>		
Crankcase ventilation system - See Positive crankcase ventilation .....	<a href="#">EC-664</a>		
Crankshaft position sensor (POS) .....	<a href="#">EC-322</a>		
Crash zone sensor .....	<a href="#">SRS-46</a>		
CVT air breather hose .....	<a href="#">CVT-190</a>		
CVT control system .....	<a href="#">CVT-17</a>		
CVT cross-sectional view .....	<a href="#">CVT-16</a>		
CVT Electrical parts location .....	<a href="#">CVT-54</a>		
CVT fluid checking .....	<a href="#">CVT-14</a> , <a href="#">CVT-56</a> , <a href="#">MA-22</a>		
CVT fluid cooler valve .....	<a href="#">CVT-193</a>		
CVT fluid replacement .....	<a href="#">CVT-15</a> , <a href="#">MA-23</a>		
CVT fluid temperature sensor .....	<a href="#">CVT-90</a>		
CVT hydraulic control system .....	<a href="#">CVT-18</a>		
CVT indicator .....	<a href="#">DI-72</a>		
CVT self-diagnoses .....	<a href="#">CVT-70</a> , <a href="#">CVT-75</a>		
CVT shift lock system .....	<a href="#">CVT-184</a>		
CVT shift lock system - Wiring diagram .....	<a href="#">CVT-185</a>		
CVT trouble diagnoses .....	<a href="#">CVT-49</a>		
CVTIND - Wiring diagram .....	<a href="#">DI-72</a>		
Cylinder head .....	<a href="#">EM-84</a>		
<b>D</b>			
Daytime light system .....	<a href="#">LT-103</a>		
Daytime running light - See Daytime light system .....	<a href="#">LT-103</a>		
Diagnosis sensor unit .....	<a href="#">SRS-49</a>		
Diagnostic trouble code (DTC) for OBD system ..	<a href="#">EC-8</a>		
Diagnostic trouble code (DTC) inspection priority chart <a href="#">CVT-49</a>			
Differential side oil seal .....	<a href="#">CVT-191</a>		
Display and amp.assembly .....	<a href="#">ATC-66</a> , <a href="#">ATC-78</a>		
Door glass .....	<a href="#">GW-58</a> , <a href="#">GW-61</a>		
Door glass Fitting Adjustment(Front) .....	<a href="#">GW-60</a>		
Door glass Fitting Adjustment(Rear) .....	<a href="#">GW-62</a>		
Door lock .....	<a href="#">BL-129</a>		
Door mirror .....	<a href="#">GW-112</a>		
Door trim .....	<a href="#">EI-30</a>		
Door, front .....	<a href="#">BL-125</a> , <a href="#">GW-58</a>		
Door, rear .....	<a href="#">BL-125</a> , <a href="#">GW-61</a>		
Drive belt .....	<a href="#">EM-11</a>		
Drive shaft .....	<a href="#">MA-29</a>		
Drive shaft (rear) .....	<a href="#">RAX-7</a>		
Driver air bag .....	<a href="#">SRS-36</a>		
DTRL - Wiring diagram .....	<a href="#">LT-128</a>		
Duct and grilles .....	<a href="#">ATC-145</a>		
<b>E</b>			
ECM power supply .....	<a href="#">EC-152</a> , <a href="#">EC-425</a>		
ECM/PW - Wiring diagram .....	<a href="#">EC-426</a>		
ECTS - Wiring diagram .....	<a href="#">EC-205</a>		
Electric sunroof .....	<a href="#">RF-10</a>		
Electric throttle control actuator .....	<a href="#">EC-436</a> , <a href="#">EC-438</a>		
Electrical load signal circuit .....	<a href="#">EC-639</a>		
Electrical unit .....	<a href="#">PG-82</a>		
Electrical units location .....	<a href="#">PG-75</a>		
Electronic ignition (EI) system .....	<a href="#">EC-27</a>		
EMNT - Wiring diagram .....	<a href="#">EC-630</a>		
Engine control module (ECM) .....	<a href="#">EC-422</a>		
Engine control system diagram and chart .....	<a href="#">EC-22</a>		
Engine coolant .....	<a href="#">CO-8</a>		
Engine coolant temperature sensor (ECTS) ...	<a href="#">EC-203</a> , <a href="#">EC-215</a>		
Engine mounting control (Front) .....	<a href="#">EC-629</a>		
Engine oil .....	<a href="#">LU-6</a>		
Engine oil filter replacement .....	<a href="#">MA-19</a>		
Engine oil precautions .....	<a href="#">GI-7</a>		
Engine removal .....	<a href="#">EM-95</a>		
ETC1 - Wiring diagram .....	<a href="#">EC-439</a>		
ETC2 - Wiring diagram .....	<a href="#">EC-446</a>		
ETC3 - Wiring diagram .....	<a href="#">EC-450</a>		

# ALPHABETICAL INDEX

EVAP canister ..... [EC-655](#)  
EVAP canister purge volume control solenoid valve ....  
[EC-356](#), [EC-517](#)  
EVAP canister vent control valve ..... [EC-363](#), [EC-525](#)  
EVAP control system (small leak) diagnosis .. [EC-346](#),  
[EC-387](#)  
EVAP control system pressure sensor ..... [EC-370](#),  
[EC-373](#), [EC-379](#)  
EVAP control system purge flow monitoring diagnosis  
[EC-341](#)  
EVAP vapor lines inspection ..... [MA-21](#)  
Evaporative emission (EVAP) system ..... [EC-652](#)  
Evaporator ..... [ATC-164](#)  
Exhaust manifold ..... [EM-22](#)  
Exhaust system ..... [EX-3](#)  
Exhaust system inspection ..... [EX-3](#), [MA-22](#)  
Expansion valve ..... [ATC-165](#)

## F

F/FOG - Wiring diagram ..... [LT-204](#)  
F/PUMP - Wiring diagram ..... [EC-624](#)  
Floor trim ..... [EI-34](#)  
Flow charts ..... [GI-26](#)  
Fluid temperature sensor (CVT) ..... [CVT-90](#)  
Fluorescent leak detector ..... [ATC-166](#)  
Fog lamp, front ..... [LT-181](#)  
Front axle ..... [FAX-5](#)  
Front bumper ..... [EI-14](#)  
Front combination lamp removal and installation .....  
[LT-101](#)  
Front disc brake ..... [BR-27](#)  
Front door ..... [BL-125](#), [BL-129](#), [GW-58](#)  
Front fog lamp ..... [LT-181](#)  
Front passenger air bag ..... [SRS-40](#)  
Front seat ..... [SE-122](#)  
Front seat belt ..... [SB-4](#)  
Front seat belt pre-tensioner .... [SB-2](#), [SRS-3](#), [SRS-48](#)  
Front side air bag ..... [SRS-42](#)  
Front suspension ..... [FSU-5](#)  
FTTS - Wiring diagram ..... [EC-297](#), [EC-301](#)  
Fuel cut control (at no load high engine speed) . [EC-29](#)  
Fuel gauge ..... [DI-4](#)  
Fuel injector and fuel tube ..... [EM-38](#)  
Fuel level sensor ..... [EC-405](#), [EC-407](#), [EC-409](#)  
Fuel line inspection ..... [FL-3](#), [MA-17](#)  
Fuel precautions ..... [GI-5](#)  
Fuel pressure check ..... [EC-66](#)  
Fuel pressure release ..... [EC-66](#)  
Fuel pump ..... [EC-623](#)  
Fuel pump and gauge ..... [FL-5](#)  
Fuel system ..... [FL-3](#)  
Fuel tank ..... [FL-9](#)  
Fuel tank temperature sensor ..... [EC-295](#), [EC-300](#)  
Fuel tank vacuum relief valve ..... [EC-655](#)  
FUELB1 - Wiring diagram ..... [EC-280](#), [EC-289](#)  
FUELB2 - Wiring diagram ..... [EC-281](#), [EC-290](#)  
Fuse ..... [PG-15](#)  
Fuse and fusible link box ..... [PG-88](#)

Fusible link ..... [PG-15](#)

## G

Gauges ..... [DI-4](#)  
Glass ..... [GW-11](#), [GW-58](#), [GW-61](#)  
Glove box lamp ..... [LT-363](#)  
GPS antenna ..... [AV-114](#)  
Grille - See Exterior ..... [EI-20](#)  
Ground distribution ..... [PG-47](#)

## H

H/AIM - Wiring diagram ..... [LT-178](#)  
H/LAMP - Wiring diagram ..... [LT-34](#), [LT-83](#)  
Harness connector ..... [PG-79](#)  
Harness layout ..... [PG-56](#)  
Hazard warning lamp ..... [LT-213](#)  
Headlamp aiming control ..... [LT-178](#)  
Headlamp leveler - See Headlamp aiming control .....  
[LT-178](#)  
Headlamp removal and installation ..... [LT-101](#)  
Headlining - See Roof trim ..... [EI-36](#)  
Heated oxygen sensor 1 (bank 1) .... [EC-223](#), [EC-233](#),  
[EC-246](#), [EC-454](#), [EC-460](#)  
Heated oxygen sensor 1 (bank 2) .... [EC-223](#), [EC-233](#),  
[EC-246](#), [EC-454](#), [EC-460](#)  
Heated oxygen sensor 1 heater (bank 1) ..... [EC-165](#)  
Heated oxygen sensor 1 heater (bank 2) ..... [EC-165](#)  
Heated oxygen sensor 2 (bank 1) .... [EC-256](#), [EC-266](#),  
[EC-467](#), [EC-479](#)  
Heated oxygen sensor 2 (bank 2) .... [EC-256](#), [EC-266](#),  
[EC-467](#), [EC-479](#)  
Heated oxygen sensor 2 heater (bank 1) ..... [EC-174](#)  
Heated oxygen sensor 2 heater (bank 2) ..... [EC-174](#)  
Heated seat ..... [SE-117](#)  
Heater and cooling unit (Heater core) ..... [ATC-138](#)  
HFC134a (R134a) system precaution ..... [ATC-6](#)  
HFC134a (R134a) system service procedure [ATC-149](#)  
HFC134a (R134a) system service tools ..... [ATC-16](#)  
HFC134a system service equipment precaution .....  
[ATC-13](#)  
Hood ..... [BL-13](#)  
Horn ..... [WW-73](#)  
HORN - Wiring diagram ..... [WW-73](#)  
HSEAT - Wiring diagram ..... [SE-119](#)

## I

IATS - Wiring diagram ..... [EC-200](#)  
Idle air volume learning ..... [EC-64](#)  
Idle mixture ratio ..... [EC-53](#)  
Idle speed ..... [EC-53](#)  
Idle speed control (ISC) ..... [EC-413](#), [EC-415](#)  
Ignition coil ..... [EM-35](#), [EC-596](#)  
Ignition control system ..... [EC-596](#)  
Ignition key hole illumination ..... [LT-331](#)  
Ignition timing ..... [EC-53](#)  
IGNSYS - Wiring diagram ..... [EC-597](#)

# ALPHABETICAL INDEX

Illumination control ..... [LT-363](#)  
 In vehicle sensor ..... [ATC-118](#), [ATC-129](#)  
 INF/D - Wiring diagram ..... [AV-90](#)  
 INJECT - Wiring diagram ..... [EC-618](#)  
 Injector ..... [EC-617](#)  
 Input/Output signal of TCM ..... [CVT-40](#)  
 Instrument panel ..... [IP-10](#)  
 Intake air temperature sensor ..... [EC-198](#), [EC-218](#)  
 Intake door control linkage adjustment ..... [ATC-92](#)  
 Intake door motor ..... [ATC-90](#), [ATC-136](#)  
 Intake manifold ..... [EM-20](#)  
 Intake manifold collector ..... [EM-16](#)  
 Intake sensor ..... [ATC-124](#), [ATC-131](#)  
 Intake valve timing control (Bank 1) ..... [EC-162](#)  
 Intake valve timing control (Bank 2) ..... [EC-162](#)  
 Intake valve timing control solenoid valve (Bank 1) .....  
[EC-429](#)  
 Intake valve timing control solenoid valve (Bank 2) .....  
[EC-429](#)  
 Integrated homelink transmitter ..... [BL-205](#)  
 Interior ..... [EI-32](#)  
 Interior lamp ..... [LT-309](#)  
 IPDM (Intelligent power distribution module engine  
 room) ..... [PG-16](#)  
 IVCB1 - Wiring diagram ..... [EC-430](#)  
 IVCB2 - Wiring diagram ..... [EC-432](#)  
 IVIS (Infiniti vehicle immobilizer system) precautions ...  
[GI-3](#)

## J

Joint connector (J/C) ..... [PG-81](#)

## K

Knock sensor (KS) ..... [EC-317](#)  
 KS - Wiring diagram ..... [EC-318](#)

## L

LAN system circuit ..... [ATC-81](#)  
 Line pressure and secondary pressure control ..... [CVT-40](#)  
 Line pressure solenoid valve ..... [CVT-120](#)  
 Liquid gasket application ..... [LU-2](#), [CO-2](#)  
 Location of electrical units ..... [PG-75](#)  
 Lock-up and select control ..... [CVT-42](#)  
 Low tire pressure warning system ..... [WT-8](#)  
 Lubricant (R134a) A/C ..... [ATC-7](#), [ATC-22](#)  
 Lubrication circuit (engine) ..... [LU-4](#)  
 Lubrication oil A/C ..... [ATC-170](#)

## M

MAFS - Wiring diagram ..... [EC-186](#), [EC-193](#)  
 Magnet clutch ..... [ATC-98](#), [ATC-153](#)  
 MAIN - Wiring diagram ..... [EC-152](#)  
 Maintenance (engine) ..... [MA-13](#)  
 Major overhaul (Transfer) ..... [TF-18](#)  
 Mass air flow sensor (MAFS) ..... [EC-183](#), [EC-191](#)

Master cylinder (brake) ..... [BR-15](#)  
 Meter ..... [DI-4](#)  
 METER - Wiring diagram ..... [DI-10](#)  
 MIL data link connectors circuit ..... [EC-650](#)  
 MIL/DL - Wiring diagram ..... [EC-650](#)  
 Mirror, door ..... [GW-112](#)  
 Mirror, out side ..... [GW-112](#)  
 Misfire ..... [EC-311](#)  
 Mode door control linkage adjustment ..... [ATC-86](#)  
 Mode door motor ..... [ATC-84](#), [ATC-142](#)  
 Molding - See Exterior ..... [EI-23](#), [EI-26](#), [EI-28](#)  
 Multiport fuel injection (MFI) system ..... [EC-25](#)  
 Multiport fuel injection precautions ..... [GI-6](#)

## N

NATS - Wiring diagram ..... [BL-190](#)  
 NAVI - Wiring diagram ..... [AV-153](#)  
 Navigation system ..... [AV-113](#)  
 Nissan torque demand (NTD) control system ... [EC-28](#)  
 NVH troubleshooting (BR) ..... [BR-5](#)  
 NVH troubleshooting (Transfer) ..... [TF-8](#)  
 NVIS (Nissan vehicle immobilizer system) ..... [BL-187](#)  
 NVIS (Nissan vehicle immobilizer system) precautions  
[GI-3](#)

## O

O2H1B1 - Wiring diagram ..... [EC-167](#)  
 O2H1B2 - Wiring diagram ..... [EC-169](#)  
 O2H2B1 - Wiring diagram ..... [EC-176](#)  
 O2H2B2 - Wiring diagram ..... [EC-178](#)  
 O2S1B1 - Wiring diagram ... [EC-225](#), [EC-236](#), [EC-249](#)  
 O2S1B2 - Wiring diagram ... [EC-227](#), [EC-238](#), [EC-251](#)  
 O2S2B1 - Wiring diagram .. [EC-258](#), [EC-269](#), [EC-470](#),  
[EC-482](#)  
 O2S2B2 - Wiring diagram .. [EC-260](#), [EC-271](#), [EC-472](#),  
[EC-484](#)  
 Oil cooler (engine) ..... [LU-10](#)  
 Oil filter ..... [LU-9](#)  
 Oil pan (engine) ..... [EM-26](#)  
 Oil pressure (engine) ..... [LU-6](#)  
 Oil pump (engine) ..... [LU-12](#)  
 Oil pump regulator valve (engine) ..... [LU-12](#)  
 Oil seal replacement (front of final drive) ..... [RFD-7](#)  
 ORVR (On-board Refueling Vapor Recovery) . [EC-659](#)  
 Out side mirror ..... [GW-112](#)  
 Overheat ..... [EC-495](#)

## P

P/SCKT - Wiring diagram ..... [WW-71](#)  
 Park/Neutral position switch ..... [EC-550](#)  
 Park/neutral position switch (CVT) ..... [CVT-85](#)  
 Parking brake control ..... [PB-3](#)  
 PCV (positive crankcase ventilation) ..... [EC-664](#)  
 Personal lamp ..... [LT-307](#), [LT-330](#)  
 PGC/V - Wiring diagram ..... [EC-358](#), [EC-519](#)  
 PHSB1 - Wiring diagram ..... [EC-329](#)



# ALPHABETICAL INDEX

PHSB2 - Wiring diagram .....	<a href="#">EC-331</a>	SEN/PW - Wiring diagram .....	<a href="#">EC-513</a>
PNP/SW - Wiring diagram .....	<a href="#">EC-552</a>	SHIFT - Wiring diagram .....	<a href="#">CVT-185</a>
POS - Wiring diagram .....	<a href="#">EC-323</a>	Shift control .....	<a href="#">CVT-41</a>
POWER - Wiring diagram .....	<a href="#">PG-4</a>	Shift control system .....	<a href="#">CVT-182</a>
Power seat .....	<a href="#">SE-112</a>	Shift schedule .....	<a href="#">CVT-62</a>
Power socket .....	<a href="#">WW-71</a>	Side air bag (satellite) sensor .....	<a href="#">SRS-47</a>
Power steering fluid level .....	<a href="#">PS-6</a> , <a href="#">MA-28</a>	Side curtain air bag .....	<a href="#">SRS-44</a>
Power steering gear .....	<a href="#">PS-14</a>	Side trim .....	<a href="#">EI-32</a>
Power steering hydraulic pressure .....	<a href="#">PS-28</a>	SMJ (super multiple junction) .....	<a href="#">PG-84</a>
Power steering oil pump .....	<a href="#">PS-28</a>	Spark plug .....	<a href="#">EM-36</a>
Power steering system bleeding .....	<a href="#">PS-6</a>	Spark plug replacement .....	<a href="#">MA-20</a>
Power supply routing .....	<a href="#">PG-3</a>	Specification value .....	<a href="#">EC-147</a>
Power window .....	<a href="#">GW-17</a>	Speedometer .....	<a href="#">DI-4</a>
PRE/SE - Wiring diagram .....	<a href="#">EC-375</a> , <a href="#">EC-381</a>	Spiral cable .....	<a href="#">SRS-38</a>
Precautions for Leak detection dye .....	<a href="#">ATC-15</a>	Spot lamp .....	<a href="#">LT-330</a>
Precautions (General) .....	<a href="#">GI-4</a>	SROOF - Wiring diagram .....	<a href="#">RF-13</a>
Pressure test (CVT) .....	<a href="#">CVT-57</a>	SRS - See Supplemental Restraint System .....	<a href="#">SRS-5</a>
Propeller shaft .....	<a href="#">PR-4</a>	SRS Trouble diagnoses .....	<a href="#">SRS-7</a>
Propeller shaft on vehicle service .....	<a href="#">PR-4</a>	Stabilizer bar (rear) .....	<a href="#">RSU-16</a>
PS/SEN - Wiring diagram .....	<a href="#">EC-418</a>	Stall Test .....	<a href="#">CVT-56</a>

## R

Radiator .....	<a href="#">CO-12</a>
Rear axle .....	<a href="#">RAX-5</a>
Rear bumper .....	<a href="#">EI-17</a>
Rear combination lamp removal and installation .....	<a href="#">LT-304</a>
Rear disc brake .....	<a href="#">BR-33</a>
Rear door .....	<a href="#">BL-125</a> , <a href="#">GW-61</a>
Rear seat .....	<a href="#">SE-129</a>
Rear seat belt .....	<a href="#">SB-6</a>
Rear suspension .....	<a href="#">RSU-5</a>
Rear washer .....	<a href="#">WW-53</a>
Rear window defogger .....	<a href="#">GW-65</a>
Refrigerant connection precaution .....	<a href="#">ATC-8</a>
Refrigerant discharging evacuating charging .....	<a href="#">ATC-149</a>
Refrigerant general precaution .....	<a href="#">ATC-7</a>
Refrigerant lines .....	<a href="#">ATC-149</a>
Refrigerant pressure sensor .....	<a href="#">EC-634</a> , <a href="#">ATC-103</a> , <a href="#">ATC-164</a>
Refrigeration cycle .....	<a href="#">ATC-20</a>
Removal and installation (Transfer) .....	<a href="#">TF-12</a>
Rocker cover .....	<a href="#">EM-43</a>
Room lamp - See Interior lamp .....	<a href="#">LT-309</a>
ROOM/L - Wiring diagram .....	<a href="#">LT-314</a>
RP/SEN - Wiring diagram .....	<a href="#">EC-635</a>

## S

Seal - See Exterior .....	<a href="#">EI-25</a>
SEAT - Wiring diagram .....	<a href="#">SE-114</a>
Seat belt inspection .....	<a href="#">SB-7</a>
Seat belt pre-tensioner disposal .....	<a href="#">SRS-50</a>
Seat belt, front .....	<a href="#">SB-4</a>
Seat belt, rear .....	<a href="#">SB-6</a>
Seat, front .....	<a href="#">SE-122</a>
Seat, rear .....	<a href="#">SE-129</a>
Self-diagnosis (Transfer) .....	<a href="#">TF-53</a>

SEN/PW - Wiring diagram .....	<a href="#">EC-513</a>
SHIFT - Wiring diagram .....	<a href="#">CVT-185</a>
Shift control .....	<a href="#">CVT-41</a>
Shift control system .....	<a href="#">CVT-182</a>
Shift schedule .....	<a href="#">CVT-62</a>
Side air bag (satellite) sensor .....	<a href="#">SRS-47</a>
Side curtain air bag .....	<a href="#">SRS-44</a>
Side trim .....	<a href="#">EI-32</a>
SMJ (super multiple junction) .....	<a href="#">PG-84</a>
Spark plug .....	<a href="#">EM-36</a>
Spark plug replacement .....	<a href="#">MA-20</a>
Specification value .....	<a href="#">EC-147</a>
Speedometer .....	<a href="#">DI-4</a>
Spiral cable .....	<a href="#">SRS-38</a>
Spot lamp .....	<a href="#">LT-330</a>
SROOF - Wiring diagram .....	<a href="#">RF-13</a>
SRS - See Supplemental Restraint System .....	<a href="#">SRS-5</a>
SRS Trouble diagnoses .....	<a href="#">SRS-7</a>
Stabilizer bar (rear) .....	<a href="#">RSU-16</a>
Stall Test .....	<a href="#">CVT-56</a>
Standardized relay .....	<a href="#">PG-85</a>
START - Wiring diagram .....	<a href="#">SC-11</a>
Starter .....	<a href="#">SC-10</a>
Starting system .....	<a href="#">SC-10</a>
Steering gear and linkage inspection .....	<a href="#">MA-28</a>
Steering linkage .....	<a href="#">PS-14</a>
Steering wheel and column .....	<a href="#">PS-8</a> , <a href="#">PS-10</a>
Steering wheel turning force .....	<a href="#">PS-8</a>
Step lamp .....	<a href="#">LT-267</a>
Stop lamp .....	<a href="#">LT-265</a>
Stop lamp switch .....	<a href="#">EC-564</a>
STOP/L - Wiring diagram .....	<a href="#">LT-265</a>
Sun roof, electric .....	<a href="#">RF-10</a>
Sunload sensor .....	<a href="#">ATC-121</a> , <a href="#">ATC-130</a>
Sunroof .....	<a href="#">RF-10</a> , <a href="#">RF-36</a>
Supplemental Restraint System .....	<a href="#">SRS-5</a>
Suspension .....	<a href="#">MA-29</a>
Symbols and abbreviations .....	<a href="#">GI-9</a> , <a href="#">GI-22</a>

## T

Tachometer .....	<a href="#">DI-4</a>
TCM circuit diagram .....	<a href="#">CVT-55</a>
TCM function .....	<a href="#">CVT-19</a>
TCM inspection table .....	<a href="#">CVT-63</a>
Three way catalyst .....	<a href="#">EM-22</a>
Three way catalyst function (Bank 1) .....	<a href="#">EC-336</a>
Three way catalyst function (Bank 2) .....	<a href="#">EC-336</a>
Three way catalyst precautions .....	<a href="#">GI-5</a>
Throttle body .....	<a href="#">EM-19</a>
Throttle control motor .....	<a href="#">EC-449</a>
Throttle control motor relay .....	<a href="#">EC-444</a>
Throttle position sensor (TPS) .....	<a href="#">EC-208</a> , <a href="#">EC-304</a> , <a href="#">EC-508</a> , <a href="#">EC-510</a> , <a href="#">EC-582</a>
Tie-rod .....	<a href="#">PS-14</a>
Timing chain .....	<a href="#">EM-54</a>
Tire rotation .....	<a href="#">MA-26</a>
Torque converter installation .....	<a href="#">CVT-203</a>
Torque convertor clutch solenoid valve .....	<a href="#">CVT-112</a>

