

SECTION **IDX**  
ALPHABETICAL INDEX

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L

IDX

# ALPHABETICAL INDEX

## A

A/C air flow ..... [ATC-31](#)  
A/C component layout ..... [ATC-21](#)  
A/C compressor clutch removal and installation .....  
[ATC-133](#)  
A/C compressor mounting ..... [ATC-132](#)  
A/C compressor precaution ..... [ATC-13](#)  
A/C compressor special service tool ..... [ATC-16](#)  
A/C control operation (auto A/C) ..... [ATC-28](#)  
A/C diagnostic work flow (auto A/C) ..... [ATC-94](#)  
A/C evaporator ..... [ATC-144](#)  
A/C HFC134a (R134a) system precaution ..... [ATC-6](#)  
A/C HFC134a (R134a) system service procedure .....  
[ATC-129](#)  
A/C HFC134a (R134a) system service tools ... [ATC-17](#)  
A/C HFC134a system service equipment precaution ...  
[ATC-13](#)  
A/C lubricant (R134a) ..... [ATC-22](#)  
A/C lubrication oil ..... [ATC-150](#)  
A/C operational check ..... [ATC-55](#)  
A/C self-diagnoses (auto A/C) ..... [ATC-47](#), [ATC-94](#)  
A/C service data specification ..... [ATC-150](#)  
A/C system description (auto A/C) ..... [ATC-25](#)  
A/C trouble diagnoses (auto A/C) ..... [ATC-34](#)  
A/C, A - Wiring diagram ..... [ATC-40](#)  
ABS - Wiring diagram ..... [BRC-14](#)  
Accelerator control system ..... [ACC-3](#)  
Accelerator pedal position (APP) sensor ..... [EC-568](#),  
[EC-574](#), [EC-588](#)  
Accelerator pedal released position learning ..... [EC-43](#)  
AF1B1-Wiring diagram ..... [EC-451](#), [EC-459](#), [EC-467](#),  
[EC-476](#), [EC-486](#), [EC-495](#), [EC-507](#)  
AF1B2-Wiring diagram ..... [EC-453](#), [EC-461](#), [EC-469](#),  
[EC-478](#), [EC-488](#), [EC-497](#), [EC-509](#)  
AF1HB1-Wiring diagram ..... [EC-366](#)  
AF1HB2-Wiring diagram ..... [EC-368](#)  
Air bag ..... [SRS-3](#)  
Air bag disposal ..... [SRS-51](#)  
Air bag precautions ..... [SRS-3](#), [AP-2](#)  
Air bleeding for brake system ..... [BR-12](#)  
Air cleaner and air duct ..... [EM-14](#)  
Air cleaner filter replacement ..... [MA-17](#)  
Air conditioner cut control ..... [EC-29](#)  
Air flow meter - See Mass air flow sensor ..... [EC-155](#),  
[EC-163](#)  
Air fuel ratio sensor 1 ..... [EC-449](#), [EC-457](#), [EC-465](#),  
[EC-474](#), [EC-483](#), [EC-492](#), [EC-504](#)  
Air fuel ratio sensor 1 heater ..... [EC-364](#)  
Air mix. door motor ..... [ATC-67](#), [ATC-123](#)  
Ambient sensor ..... [ATC-96](#), [ATC-109](#)  
Angular tightening application ..... [EM-3](#)  
APPS1 - Wiring diagram ..... [EC-570](#)  
APPS2 - Wiring diagram ..... [EC-576](#)  
APPS3 - Wiring diagram ..... [EC-590](#)  
ASC/BS - Wiring diagram ..... [EC-540](#)  
ASC/SW - Wiring diagram ..... [EC-533](#)  
ASCBOF - Wiring diagram ..... [EC-640](#)  
ASCD ..... [EC-665](#)

ASCD (automatic speed control device) ..... [ACS-2](#)  
ASCIND - Wiring diagram ..... [EC-647](#)  
AUDIO - Wiring diagram ..... [AV-12](#)  
Auto air conditioner - Wiring diagram ..... [ATC-40](#)  
Auto amp ..... [ATC-108](#)  
Auto anti-dazzling inside mirror ..... [GW-63](#), [GW-64](#)  
Automatic amplifier ..... [ATC-45](#), [ATC-57](#), [ATC-108](#)  
Automatic transmission fluid replacement ..... [MA-24](#)  
AV and NAVI control unit ..... [AV-105](#)  
AV communication line ..... [AV-84](#), [AV-130](#)  
AWD - Wiring diagram ..... [TF-17](#)  
AWD control unit inspection table ..... [TF-22](#)  
Axle ..... [MA-29](#)

## B

Back Door ..... [BL-92](#), [BL-93](#)  
Back door ..... [BL-92](#), [BL-93](#)  
Back door opener - See Back door ..... [BL-97](#)  
BACK/L - Wiring diagram ..... [LT-146](#)  
Back-up lamp ..... [LT-146](#)  
Battery ..... [SC-4](#)  
Battery/Starting/Charging System Tester [SC-6](#), [SC-11](#),  
[SC-19](#)  
BCM (Body control module) ..... [BCS-3](#)  
Blower motor ..... [ATC-73](#), [ATC-115](#)  
Blower unit ..... [ATC-113](#)  
Board computer ..... [AV-74](#)  
Boring/horning cylinder block ..... [EM-132](#)  
Bose speaker amp. .... [AV-6](#)  
Brake booster ..... [BR-22](#)  
Brake fluid change ..... [BR-11](#)  
Brake fluid level ..... [MA-27](#)  
Brake fluid level and line check ..... [BR-11](#)  
Brake hydraulic line ..... [BR-13](#)  
Brake inspection ..... [MA-27](#)  
Brake lines and cables inspection ..... [MA-27](#)  
Brake master cylinder ..... [BR-15](#)  
Brake pedal ..... [BR-6](#)  
Brake switch ..... [EC-563](#)  
BRK/SW - Wiring diagram ..... [EC-564](#)  
Bulb specifications ..... [LT-204](#)  
Bumper, front ..... [EI-14](#)  
Bumper, rear ..... [EI-17](#)

## C

Camshaft ..... [EM-77](#)  
Camshaft inspection ..... [EM-79](#)  
Camshaft position sensor (PHASE) ..... [EC-268](#)  
CAN - Wiring diagram ..... [EC-141](#), [LAN-25](#), [LAN-54](#),  
[LAN-83](#), [LAN-117](#), [LAN-151](#), [LAN-184](#), [LAN-217](#),  
[LAN-291](#), [LAN-323](#), [LAN-355](#), [LAN-391](#), [LAN-427](#),  
[LAN-462](#), [LAN-498](#), [LAN-538](#)  
CAN (Controller Area Network) ... [WT-9](#), [BL-25](#), [BL-56](#),  
[GW-67](#), [RF-13](#), [SE-18](#), [LAN-23](#), [LAN-52](#), [LAN-81](#),  
[LAN-115](#), [LAN-149](#), [LAN-182](#), [LAN-215](#), [LAN-289](#),  
[LAN-321](#), [LAN-353](#), [LAN-389](#), [LAN-425](#), [LAN-460](#),  
[LAN-496](#), [LAN-536](#)

# ALPHABETICAL INDEX

CAN communication [EC-30](#), [EC-140](#), [CVT-22](#), [CVT-71](#),  
[TF-13](#), [TF-33](#), [WT-9](#), [BRC-34](#), [BL-25](#), [BL-56](#), [GW-67](#),  
[RF-13](#), [SE-18](#), [LAN-23](#), [LAN-52](#), [LAN-81](#), [LAN-115](#),  
[LAN-149](#), [LAN-182](#), [LAN-215](#), [LAN-289](#), [LAN-321](#),  
[LAN-353](#), [LAN-389](#), [LAN-425](#), [LAN-460](#), [LAN-496](#),  
[LAN-536](#)  
Canister-See EVAP canister ..... [EC-654](#)  
CHARGE - Wiring diagram ..... [SC-18](#)  
Charging system ..... [SC-17](#)  
Chassis and body maintenance ..... [MA-22](#)  
CHIME - Wiring diagram ..... [DI-63](#)  
CIGAR - Wiring diagram ..... [WW-59](#)  
Circuit breaker ..... [PG-16](#)  
Closed loop control ..... [EC-26](#)  
Collision diagnosis ..... [SRS-58](#)  
Combination lamp, front, removal and installation .....  
[LT-65](#)  
Combination lamp, rear, removal and installation .....  
[LT-165](#)  
Combination meter ..... [DI-4](#)  
Combination meter removal and installation - See  
Instrument panel ..... [IP-11](#)  
COMM - Wiring diagram ..... [AV-84](#), [AV-130](#)  
COMPAS - Wiring diagram ..... [DI-41](#)  
Compass ..... [DI-39](#)  
Component Location (auto A/C) ..... [ATC-37](#)  
Compression pressure ..... [EM-93](#)  
Compressor clutch removal and installation .. [ATC-133](#)  
Compressor special service tool ..... [ATC-16](#)  
Condenser ..... [ATC-143](#)  
Connecting rod ..... [EM-129](#)  
Connecting rod bearing clearance ..... [EM-133](#)  
Connecting rod bushing clearance ..... [EM-129](#)  
Console box - See Instrument panel ..... [IP-10](#)  
Console box lamp ..... [LT-203](#)  
CONSULT-II Reference value (CVT) ..... [CVT-59](#)  
Control units (terminal arrangement) ..... [PG-64](#)  
Control valve (CVT) ..... [CVT-26](#)  
Controller Area Network (CAN) .. [WT-9](#), [BL-25](#), [BL-56](#),  
[GW-67](#), [RF-13](#), [SE-18](#), [LAN-23](#), [LAN-52](#), [LAN-81](#),  
[LAN-115](#), [LAN-149](#), [LAN-182](#), [LAN-215](#), [LAN-289](#),  
[LAN-321](#), [LAN-353](#), [LAN-389](#), [LAN-425](#), [LAN-460](#),  
[LAN-496](#), [LAN-536](#)  
COOL/F - Wiring diagram ..... [EC-431](#)  
Coolant replacement ..... [MA-14](#)  
Coolant replacementVQ35DE ..... [CO-9](#)  
Cooling circuit (engine) ..... [CO-7](#)  
Cooling fan ..... [CO-20](#)  
Cooling fan motor ..... [EC-439](#)  
Cowl top ..... [EI-21](#)  
Cowl top cover ..... [EI-21](#)  
Crankcase ventilation system - See Positive crankcase  
ventilation ..... [EC-663](#)  
Crankshaft ..... [EM-133](#)  
Crankshaft position sensor (POS) ..... [EC-262](#)  
Crash zone sensor ..... [SRS-47](#)  
CVT air breather hose ..... [CVT-217](#)  
CVT control system ..... [CVT-19](#)  
CVT cross-sectional view ..... [CVT-18](#)

CVT Electrical parts location ..... [CVT-37](#), [CVT-38](#)  
CVT fluid checking ..... [CVT-14](#), [CVT-40](#), [MA-22](#)  
CVT fluid cooler cleaning ..... [CVT-15](#)  
CVT fluid cooler valve ..... [CVT-220](#)  
CVT fluid replacement ..... [CVT-15](#), [MA-23](#)  
CVT fluid temperature sensor ..... [CVT-88](#)  
CVT hydraulic control system ..... [CVT-20](#)  
CVT indicator ..... [DI-54](#)  
CVT self-diagnoses ..... [CVT-62](#), [CVT-70](#)  
CVT shift lock system ..... [CVT-211](#)  
CVT shift lock system - Wiring diagram ..... [CVT-212](#)  
CVT trouble diagnoses ..... [CVT-31](#)  
CVTIND - Wiring diagram ..... [DI-54](#)  
Cylinder block ..... [EM-110](#)  
Cylinder head ..... [EM-93](#)  
Cylinder head bolt tightening ..... [EM-96](#)

## D

Daytime light system ..... [LT-67](#)  
Daytime running light - See Daytime light system [LT-67](#)  
Diagnosis sensor unit ..... [SRS-50](#)  
Diagnostic trouble code (DTC) for OBD system .. [EC-8](#)  
Diagnostic trouble code (DTC) inspection priority chart  
[CVT-31](#)  
Differential side oil seal ..... [CVT-218](#)  
Display and amp.assembly ..... [ATC-45](#), [ATC-57](#)  
Door glass ..... [GW-58](#), [GW-61](#)  
Door glass Fitting Adjustment(Front) ..... [GW-60](#)  
Door glass Fitting Adjustment(Rear) ..... [GW-62](#)  
Door lock ..... [BL-85](#)  
Door mirror ..... [GW-90](#)  
Door trim ..... [EI-30](#)  
Door, front ..... [BL-81](#), [GW-58](#)  
Door, rear ..... [BL-81](#), [GW-61](#)  
Drive belt ..... [EM-11](#)  
Drive shaft ..... [MA-29](#)  
Drive shaft (rear) ..... [RAX-7](#)  
Driver air bag ..... [SRS-37](#)  
DTRL - Wiring diagram ..... [LT-71](#)  
Duct and grilles ..... [ATC-125](#)

## E

ECM power supply ..... [EC-131](#), [EC-373](#)  
ECM/PW - Wiring diagram ..... [EC-374](#)  
ECTS - Wiring diagram ..... [EC-177](#)  
Electric sunroof ..... [RF-10](#)  
Electric throttle control actuator ..... [EM-19](#), [EC-384](#),  
[EC-386](#)  
Electrical load signal circuit ..... [EC-638](#)  
Electrical unit ..... [PG-64](#)  
Electrical units location ..... [PG-58](#)  
Electronic ignition (EI) system ..... [EC-27](#)  
EMNT - Wiring diagram ..... [EC-629](#)  
Engine control module (ECM) ..... [EC-361](#)  
Engine control system diagram and chart ..... [EC-22](#)  
Engine coolant ..... [CO-9](#)  
Engine coolant temperature sensor (ECTS) ... [EC-175](#),

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
IDX

# ALPHABETICAL INDEX

[EC-187](#)  
Engine mounting control (Front) ..... [EC-628](#)  
Engine oil ..... [LU-6](#)  
Engine oil filter replacement ..... [MA-19](#)  
Engine oil precautions ..... [GI-7](#)  
Engine oil replacement ..... [MA-18](#)  
Engine removal ..... [EM-105](#)  
ETC1 - Wiring diagram ..... [EC-387](#)  
ETC2 - Wiring diagram ..... [EC-394](#)  
ETC3 - Wiring diagram ..... [EC-398](#)  
EVAP canister ..... [EC-654](#)  
EVAP canister purge volume control solenoid valve ....  
[EC-294](#), [EC-516](#)  
EVAP canister vent control valve ..... [EC-301](#), [EC-524](#)  
EVAP control system (small leak) diagnosis .. [EC-285](#),  
[EC-326](#)  
EVAP control system pressure sensor ..... [EC-308](#),  
[EC-311](#), [EC-318](#)  
EVAP control system purge flow monitoring diagnosis  
[EC-280](#)  
EVAP vapor lines inspection ..... [MA-21](#)  
Evaporative emission (EVAP) system ..... [EC-651](#)  
Evaporator ..... [ATC-144](#)  
Exhaust manifold ..... [EM-23](#)  
Exhaust system ..... [EX-3](#)  
Exhaust system inspection ..... [EX-3](#), [MA-22](#)  
Expansion valve ..... [ATC-145](#)

## F

F/FOG - Wiring diagram ..... [LT-109](#)  
F/PUMP - Wiring diagram ..... [EC-623](#)  
Floor trim ..... [EI-34](#)  
Flow charts ..... [GI-26](#)  
Fluid temperature sensor (CVT) ..... [CVT-88](#)  
Fluorescent leak detector ..... [ATC-146](#)  
Fog lamp, front ..... [LT-107](#)  
Front axle ..... [FAX-5](#)  
Front bumper ..... [EI-14](#)  
Front combination lamp removal and installation [LT-65](#)  
Front disc brake ..... [BR-27](#)  
Front door ..... [BL-81](#), [BL-85](#), [GW-58](#)  
Front fog lamp ..... [LT-107](#)  
Front passenger air bag ..... [SRS-41](#)  
Front seat ..... [SE-102](#)  
Front seat belt ..... [SB-3](#)  
Front seat belt pre-tensioner .... [SB-2](#), [SRS-3](#), [SRS-49](#)  
Front side air bag ..... [SRS-43](#)  
Front suspension ..... [FSU-5](#)  
FTTS - Wiring diagram ..... [EC-234](#), [EC-239](#)  
Fuel cut control (at no load high engine speed) . [EC-29](#)  
Fuel gauge ..... [DI-4](#)  
Fuel injection system (Bank 1) ..... [EC-215](#), [EC-224](#)  
Fuel injection system (Bank 2) ..... [EC-215](#), [EC-224](#)  
Fuel injector and fuel tube ..... [EM-40](#)  
Fuel level sensor ..... [EC-344](#), [EC-346](#), [EC-348](#)  
Fuel line inspection ..... [FL-3](#), [MA-17](#)  
Fuel precautions ..... [GI-5](#)  
Fuel pressure check ..... [EC-45](#)

Fuel pressure release ..... [EC-45](#)  
Fuel pump ..... [EC-622](#)  
Fuel pump and gauge ..... [FL-4](#)  
Fuel system ..... [FL-3](#)  
Fuel tank ..... [FL-9](#)  
Fuel tank temperature sensor ..... [EC-232](#), [EC-238](#)  
Fuel tank vacuum relief valve ..... [EC-654](#)  
FUELB1 - Wiring diagram ..... [EC-217](#), [EC-226](#)  
FUELB2 - Wiring diagram ..... [EC-218](#), [EC-227](#)  
Fuse ..... [PG-16](#)  
Fuse and fusible link box ..... [PG-70](#)  
Fusible link ..... [PG-16](#)

## G

Gauges ..... [DI-4](#)  
Glass ..... [GW-11](#), [GW-58](#), [GW-61](#)  
Glove box lamp ..... [LT-203](#)  
GPS antenna ..... [AV-104](#)  
Grille - See Exterior ..... [EI-20](#)  
Ground distribution ..... [PG-30](#)

## H

H/AIM - Wiring diagram ..... [LT-104](#)  
H/LAMP - Wiring diagram ..... [LT-11](#), [LT-41](#)  
Harness connector ..... [PG-62](#)  
Harness layout ..... [PG-39](#)  
Hazard warning lamp ..... [LT-119](#)  
Headlamp aiming control ..... [LT-104](#)  
Headlamp leveler - See Headlamp aiming control .....  
[LT-104](#)  
Headlamp removal and installation ..... [LT-65](#)  
Headlining - See Roof trim ..... [EI-36](#)  
Heated oxygen sensor 2 (bank 1) .... [EC-195](#), [EC-204](#),  
[EC-402](#), [EC-413](#)  
Heated oxygen sensor 2 (bank 2) .... [EC-195](#), [EC-204](#),  
[EC-402](#), [EC-413](#)  
Heated oxygen sensor 2 heater (bank 1) ..... [EC-146](#)  
Heated oxygen sensor 2 heater (bank 2) ..... [EC-146](#)  
Heated seat ..... [SE-97](#)  
Heater and cooling unit (Heater core) ..... [ATC-118](#)  
HFC134a (R134a) system precaution ..... [ATC-6](#)  
HFC134a (R134a) system service procedure [ATC-129](#)  
HFC134a (R134a) system service tools ..... [ATC-17](#)  
HFC134a system service equipment precaution .....  
[ATC-13](#)  
Hood ..... [BL-12](#)  
Horn ..... [WW-57](#)  
HORN - Wiring diagram ..... [WW-57](#)  
HSEAT - Wiring diagram ..... [SE-99](#)

## I

IATS - Wiring diagram ..... [EC-172](#)  
Idle air volume learning ..... [EC-43](#)  
Idle mixture ratio ..... [EC-32](#)  
Idle speed ..... [EC-32](#)  
Idle speed control (ISC) ..... [EC-352](#), [EC-354](#)

# ALPHABETICAL INDEX

Ignition coil ..... [EM-37](#), [EC-595](#)  
Ignition control system ..... [EC-595](#)  
Ignition key hole illumination ..... [LT-193](#)  
Ignition timing ..... [EC-32](#)  
IGNSYS - Wiring diagram ..... [EC-596](#)  
Illumination control ..... [LT-203](#)  
In vehicle sensor ..... [ATC-99](#), [ATC-110](#)  
INF/D - Wiring diagram ..... [AV-79](#)  
INJECT - Wiring diagram ..... [EC-617](#)  
Injector ..... [EC-616](#)  
Input/Output signal of TCM ..... [CVT-22](#)  
Instrument panel ..... [IP-10](#)  
Intake air temperature sensor ..... [EC-170](#), [EC-190](#)  
Intake door control linkage adjustment ..... [ATC-72](#)  
Intake door motor ..... [ATC-70](#), [ATC-116](#)  
Intake manifold ..... [EM-21](#)  
Intake manifold collector ..... [EM-16](#)  
Intake sensor ..... [ATC-105](#), [ATC-112](#)  
Intake valve timing control (Bank 1) ..... [EC-143](#)  
Intake valve timing control (Bank 2) ..... [EC-143](#)  
Intake valve timing control solenoid valve (Bank 1) .....  
[EC-377](#)  
Intake valve timing control solenoid valve (Bank 2) .....  
[EC-377](#)  
Integrated homelink transmitter ..... [BL-138](#)  
Interior ..... [EI-32](#)  
Interior lamp ..... [LT-170](#)  
IPDM (Intelligent power distribution module engine  
room) ..... [PG-17](#)  
IVCB1 - Wiring diagram ..... [EC-378](#)  
IVCB2 - Wiring diagram ..... [EC-380](#)  
IVIS (Infiniti vehicle immobilizer system) precautions ...  
[GI-3](#)

## K

Knock sensor (KS) ..... [EC-257](#)  
KS - Wiring diagram ..... [EC-258](#)

## L

LAN system circuit ..... [ATC-60](#)  
Line pressure and secondary pressure control ..... [CVT-23](#)  
Line pressure solenoid valve ..... [CVT-116](#), [CVT-121](#)  
Liquid gasket application ..... [EM-4](#), [LU-2](#)  
Location of electrical units ..... [PG-58](#)  
Lock-up and select control ..... [CVT-25](#)  
Lock-up select solenoid valve ..... [CVT-166](#)  
Low tire pressure warning system ..... [WT-7](#)  
Lubricant (R134a) A/C ..... [ATC-7](#), [ATC-22](#)  
Lubrication circuit (engine) ..... [LU-4](#)  
Lubrication oil A/C ..... [ATC-150](#)

## M

MAFS - Wiring diagram ..... [EC-158](#), [EC-165](#)  
Magnet clutch ..... [ATC-78](#), [ATC-133](#)  
MAIN - Wiring diagram ..... [EC-131](#)  
Maintenance (engine) ..... [MA-13](#)

Major overhaul (Transfer) ..... [TF-53](#)  
Mass air flow sensor (MAFS) ..... [EC-155](#), [EC-163](#)  
Master cylinder (brake) ..... [BR-15](#)  
Meter ..... [DI-4](#)  
METER - Wiring diagram ..... [DI-10](#)  
MIL data link connectors circuit ..... [EC-649](#)  
MIL/DL - Wiring diagram ..... [EC-649](#)  
Mirror, door ..... [GW-90](#)  
Mirror, out side ..... [GW-90](#)  
Misfire ..... [EC-250](#)  
Mode door control linkage adjustment ..... [ATC-66](#)  
Mode door motor ..... [ATC-64](#), [ATC-122](#)  
Molding - See Exterior ..... [EI-23](#), [EI-26](#), [EI-28](#)  
Multiport fuel injection (MFI) system ..... [EC-25](#)  
Multiport fuel injection precautions ..... [GI-6](#)

## N

NATS - Wiring diagram ..... [BL-123](#)  
NAVI - Wiring diagram ..... [AV-122](#)  
Navigation system ..... [AV-103](#)  
Nissan torque demand (NTD) control system .... [EC-28](#)  
NVH troubleshooting (BR) ..... [BR-5](#)  
NVH troubleshooting (EM) ..... [EM-9](#)  
NVH troubleshooting (Transfer) ..... [TF-8](#)  
NVIS (Nissan vehicle immobilizer system) ..... [BL-120](#)  
NVIS (Nissan vehicle immobilizer system) precautions  
[GI-3](#)

## O

O2H2B1 - Wiring diagram ..... [EC-148](#)  
O2H2B2 - Wiring diagram ..... [EC-150](#)  
O2S2B1 - Wiring diagram .. [EC-197](#), [EC-207](#), [EC-405](#),  
[EC-416](#)  
O2S2B2 - Wiring diagram .. [EC-199](#), [EC-209](#), [EC-407](#),  
[EC-418](#)  
Oil cooler (engine) ..... [LU-10](#)  
Oil filter ..... [LU-9](#)  
Oil pan (engine) ..... [EM-28](#)  
Oil pressure (engine) ..... [LU-7](#)  
Oil pump (engine) ..... [LU-12](#)  
Oil pump regulator valve (engine) ..... [LU-12](#)  
Oil seal replacement (engine) ..... [EM-90](#)  
Oil seal replacement (front of final drive) ..... [RFD-8](#)  
ORVR (On-board Refueling Vapor Recovery) . [EC-658](#)  
Out side mirror ..... [GW-90](#)  
Overheat ..... [EC-427](#)  
Oversize piston ..... [EM-131](#)

## P

P/SCKT - Wiring diagram ..... [WW-55](#)  
Park/Neutral position switch ..... [EC-549](#)  
Park/neutral position switch (CVT) ..... [CVT-80](#)  
Parking brake control ..... [PB-3](#)  
PCV (positive crankcase ventilation) ..... [EC-663](#)  
Personal lamp ..... [LT-168](#), [LT-192](#)  
PGC/V - Wiring diagram ..... [EC-296](#), [EC-518](#)



# ALPHABETICAL INDEX

|  |   |
|--|---|
| PHSB1 - Wiring diagram .....             | <a href="#">EC-269</a>                            |
| PHSB2 - Wiring diagram .....             | <a href="#">EC-271</a>                            |
| Piston assembly .....                    | <a href="#">EM-122</a>                            |
| Piston pin inspection .....              | <a href="#">EM-127</a>                            |
| Piston ring inspection .....             | <a href="#">EM-128</a>                            |
| Piston to bore clearance .....           | <a href="#">EM-131</a>                            |
| PNP/SW - Wiring diagram .....            | <a href="#">EC-551</a>                            |
| POS - Wiring diagram .....               | <a href="#">EC-263</a>                            |
| POWER - Wiring diagram .....             | <a href="#">PG-4</a>                              |
| Power seat .....                         | <a href="#">SE-91</a>                             |
| Power socket .....                       | <a href="#">WW-55</a>                             |
| Power steering fluid level .....         | <a href="#">PS-6</a> , <a href="#">MA-28</a>      |
| Power steering gear .....                | <a href="#">PS-14</a>                             |
| Power steering hydraulic pressure .....  | <a href="#">PS-28</a>                             |
| Power steering oil pump .....            | <a href="#">PS-28</a>                             |
| Power steering system bleeding .....     | <a href="#">PS-6</a>                              |
| Power supply routing .....               | <a href="#">PG-3</a>                              |
| Power window .....                       | <a href="#">GW-17</a>                             |
| PRE/SE - Wiring diagram .....            | <a href="#">EC-313</a> , <a href="#">EC-320</a>   |
| Precautions for Leak detection dye ..... | <a href="#">ATC-15</a>                            |
| Precautions (General) .....              | <a href="#">GI-4</a>                              |
| Pressure control solenoid valve A .....  | <a href="#">CVT-116</a> , <a href="#">CVT-121</a> |
| Pressure control solenoid valve B .....  | <a href="#">CVT-124</a> , <a href="#">CVT-127</a> |
| Pressure test (CVT) .....                | <a href="#">CVT-42</a>                            |
| Primary pressure sensor .....            | <a href="#">CVT-145</a>                           |
| Primary Speed Sensor .....               | <a href="#">CVT-93</a>                            |
| Propeller shaft .....                    | <a href="#">PR-4</a>                              |
| Propeller shaft on vehicle service ..... | <a href="#">PR-4</a>                              |
| PS/SEN - Wiring diagram .....            | <a href="#">EC-357</a>                            |

## R

|  |  |
|--|--|
| Radiator .....                                       | <a href="#">CO-13</a>  |
| Rear axle .....                                      | <a href="#">RAX-5</a>  |
| Rear bumper .....                                    | <a href="#">EI-17</a>  |
| Rear combination lamp removal and installation ..... | <a href="#">LT-165</a>   |
| Rear disc brake .....                                | <a href="#">BR-33</a>  |
| Rear door .....                                      | <a href="#">BL-81</a> , <a href="#">GW-61</a>                                |
| Rear seat .....                                      | <a href="#">SE-109</a>   |
| Rear seat belt .....                                 | <a href="#">SB-5</a>   |
| Rear suspension .....                                | <a href="#">RSU-5</a>  |
| Rear washer .....                                    | <a href="#">WW-37</a>  |
| Rear window defogger .....                           | <a href="#">GW-65</a>  |
| Refrigerant connection precaution .....              | <a href="#">ATC-8</a>  |
| Refrigerant discharging evacuating charging .....    | <a href="#">ATC-129</a>  |
| Refrigerant general precaution .....                 | <a href="#">ATC-7</a>  |
| Refrigerant lines .....                              | <a href="#">ATC-129</a>  |
| Refrigerant pressure sensor .....                    | <a href="#">EC-633</a> , <a href="#">ATC-83</a> ,<br><a href="#">ATC-144</a> |
| Refrigeration cycle .....                            | <a href="#">ATC-20</a>   |
| Removal and installation (Transfer) .....            | <a href="#">TF-51</a>  |
| Road test .....                                      | <a href="#">CVT-44</a>   |
| Rocker cover .....                                   | <a href="#">EM-46</a>  |
| Room lamp - See Interior lamp .....                  | <a href="#">LT-170</a>   |
| ROOM/L - Wiring diagram .....                        | <a href="#">LT-175</a>   |
| RP/SEN - Wiring diagram .....                        | <a href="#">EC-634</a>   |

## S

|  |   |
|--|---|
| Seal - See Exterior .....                            | <a href="#">EI-25</a>                             |
| Seat belt inspection .....                           | <a href="#">SB-6</a>                              |
| Seat belt pre-tensioner disposal .....               | <a href="#">SRS-51</a>                            |
| Seat belt, front .....                               | <a href="#">SB-3</a>                              |
| Seat belt, rear .....                                | <a href="#">SB-5</a>                              |
| Seat, front .....                                    | <a href="#">SE-102</a>                            |
| Seat, rear .....                                     | <a href="#">SE-109</a>                            |
| Second position switch .....                         | <a href="#">CVT-178</a>                           |
| Secondary pressure sensor .....                      | <a href="#">CVT-137</a>                           |
| Secondary Speed Sensor .....                         | <a href="#">CVT-98</a>                            |
| Self-diagnosis (Transfer) .....                      | <a href="#">TF-24</a>                             |
| SEN/PW - Wiring diagram .....                        | <a href="#">EC-445</a>                            |
| SHIFT - Wiring diagram .....                         | <a href="#">CVT-212</a>                           |
| Shift control .....                                  | <a href="#">CVT-23</a>                            |
| Shift control system .....                           | <a href="#">CVT-207</a>                           |
| Shift schedule .....                                 | <a href="#">CVT-55</a> , <a href="#">CVT-231</a>  |
| Side air bag (satellite) sensor .....                | <a href="#">SRS-48</a>                            |
| Side curtain air bag .....                           | <a href="#">SRS-45</a>                            |
| Side trim .....                                      | <a href="#">EI-32</a>                             |
| SMJ (super multiple junction) .....                  | <a href="#">PG-66</a>                             |
| Spark plug .....                                     | <a href="#">EM-38</a>                             |
| Spark plug replacement .....                         | <a href="#">MA-19</a>                             |
| Specification value .....                            | <a href="#">EC-126</a>                            |
| Speedometer .....                                    | <a href="#">DI-4</a>                              |
| Spiral cable .....                                   | <a href="#">SRS-39</a>                            |
| Spot lamp .....                                      | <a href="#">LT-192</a>                            |
| SROOF - Wiring diagram .....                         | <a href="#">RF-14</a>                             |
| SRS - See Supplemental Restraint System .....        | <a href="#">SRS-5</a>                             |
| SRS - Wiring diagram .....                           | <a href="#">SRS-11</a>                            |
| SRS Trouble diagnoses .....                          | <a href="#">SRS-7</a>                             |
| Stabilizer bar (rear) .....                          | <a href="#">RSU-16</a>                            |
| Stall Test .....                                     | <a href="#">CVT-40</a>                            |
| Standardized relay .....                             | <a href="#">PG-67</a>                             |
| START - Wiring diagram .....                         | <a href="#">SC-10</a>                             |
| Starter .....  | <a href="#">SC-9</a>                              |
| Starting system .....                                | <a href="#">SC-9</a>                              |
| Steering gear and linkage inspection .....           | <a href="#">MA-28</a>                             |
| Steering linkage .....                               | <a href="#">PS-14</a>                             |
| Steering wheel and column .....                      | <a href="#">PS-8</a> , <a href="#">PS-10</a>      |
| Steering wheel turning force .....                   | <a href="#">PS-8</a>                              |
| Step lamp .....                                      | <a href="#">LT-145</a>                            |
| Step motor .....                                     | <a href="#">CVT-172</a> , <a href="#">CVT-176</a> |
| Stop lamp .....                                      | <a href="#">LT-143</a>                            |
| Stop lamp switch .....                               | <a href="#">EC-563</a>                            |
| STOP/L - Wiring diagram .....                        | <a href="#">LT-143</a>                            |
| Sun roof, electric .....                             | <a href="#">RF-10</a>                             |
| Sunload sensor .....                                 | <a href="#">ATC-102</a> , <a href="#">ATC-111</a> |
| Sunroof .....  | <a href="#">RF-10</a> , <a href="#">RF-38</a>     |
| Supplemental Restraint System .....                  | <a href="#">SRS-5</a>                             |
| Supplemental restraint system - Wiring diagram ..... | <a href="#">SRS-11</a>                            |
| Suspension .....                                     | <a href="#">MA-29</a>                             |
| Symbols and abbreviations .....                      | <a href="#">GI-9</a> , <a href="#">GI-22</a>      |

## T

|                  |                      |
|------------------|----------------------|
| Tachometer ..... | <a href="#">DI-4</a> |
|------------------|----------------------|

# ALPHABETICAL INDEX

|  |  |                                     |                              |
|--|--|-------------------------------------|------------------------------|
| TCM circuit diagram .....                              | <a href="#">CVT-39</a>                                 | Warning lamps .....                 | <a href="#">DI-43</a>        |
| TCM function .....                                     | <a href="#">CVT-21</a>                                 | Water pump .....                    | <a href="#">CO-22</a>        |
| TCM inspection table .....                             | <a href="#">CVT-56</a>                                 | Water temperature gauge .....       | <a href="#">DI-4</a>         |
| Thermostat .....                                       | <a href="#">CO-27</a>                                  | Wheel alignment (front) .....       | <a href="#">FSU-5</a>        |
| Three way catalyst .....                               | <a href="#">EM-23</a>                                  | Wheel alignment (rear) .....        | <a href="#">RSU-5</a>        |
| Three way catalyst function (Bank 1) .....             | <a href="#">EC-276</a>                                 | Wheel balance .....                 | <a href="#">WT-5, MA-25</a>  |
| Three way catalyst function (Bank 2) .....             | <a href="#">EC-276</a>                                 | Wheel bearing (front) .....         | <a href="#">FAX-5</a>        |
| Three way catalyst precautions .....                   | <a href="#">GI-5</a>                                   | Wheel bearing (rear) .....          | <a href="#">RAX-5</a>        |
| Throttle control motor .....                           | <a href="#">EC-397</a>                                 | Wheel hub (front) .....             | <a href="#">FAX-5</a>        |
| Throttle control motor relay .....                     | <a href="#">EC-392</a>                                 | Wheel hub (rear) .....              | <a href="#">RAX-5</a>        |
| Throttle position sensor (TPS) .....                   | <a href="#">EC-180, EC-243, EC-440, EC-442, EC-581</a> | Wheel sensor (VDC) .....            | <a href="#">BRC-104</a>      |
| Tie-rod .....  | <a href="#">PS-14</a>                                  | Wheel sensors (ABS) .....           | <a href="#">BRC-42</a>       |
| Timing chain .....                                     | <a href="#">EM-58</a>                                  | WINDOW - Wiring diagram .....       | <a href="#">GW-23</a>        |
| Tire rotation .....                                    | <a href="#">MA-26</a>                                  | Window, door .....                  | <a href="#">GW-58, GW-61</a> |
| Top tether strap child restraint .....                 | <a href="#">SB-9</a>                                   | Windshield .....                    | <a href="#">GW-11</a>        |
| Torque converter installation .....                    | <a href="#">CVT-228, CVT-229</a>                       | WIP/R - Wiring diagram .....        | <a href="#">WW-39</a>        |
| Torque convertor clutch solenoid valve .....           | <a href="#">CVT-108, CVT-113</a>                       | WIPER - Wiring diagram .....        | <a href="#">WW-12</a>        |
| TPS1 - Wiring diagram .....                            | <a href="#">EC-245</a>                                 | Wiper and washer .....              | <a href="#">WW-4</a>         |
| TPS2 - Wiring diagram .....                            | <a href="#">EC-182</a>                                 | Wiring diagram - CVT - CAN .....    | <a href="#">CVT-72</a>       |
| TPS3 - Wiring diagram .....                            | <a href="#">EC-583</a>                                 | Wiring diagram - CVT - FTS .....    | <a href="#">CVT-89</a>       |
| Transverse link (front) .....                          | <a href="#">FSU-12</a>                                 | Wiring diagram - CVT - L/USSV ..... | <a href="#">CVT-167</a>      |
| TRNSCV - Wiring diagram .....                          | <a href="#">BL-138</a>                                 | Wiring diagram - CVT - LPSV .....   | <a href="#">CVT-117</a>      |
| Trouble diagnoses .....                                | <a href="#">GI-10</a>                                  | Wiring diagram - CVT - MMSW .....   | <a href="#">CVT-133</a>      |
| Turbocharger .....                                     | <a href="#">CO-2</a>                                   | Wiring diagram - CVT - NONDTC ..... | <a href="#">CVT-182</a>      |
| TURN - Wiring diagram .....                            | <a href="#">LT-123</a>                                 | Wiring diagram - CVT - PNP/SW ..... | <a href="#">CVT-82</a>       |
| Turn signal lamp .....                                 | <a href="#">LT-119</a>                                 | Wiring diagram - CVT - POWER .....  | <a href="#">CVT-154</a>      |
| Tyre pressure monitoring system - trouble diagnoses .. | <a href="#">WT-10</a>                                  | Wiring diagram - CVT - PRIPS .....  | <a href="#">CVT-146</a>      |
| Tyre pressure monitoring system - wiring diagram ..... | <a href="#">WT-11</a>                                  | Wiring diagram - CVT - PRSCVT ..... | <a href="#">CVT-94</a>       |

## U

|                                 |                       |
|---------------------------------|-----------------------|
| Unified meter and A/C amp. .... | <a href="#">DI-31</a> |
|---------------------------------|-----------------------|

## V

|   |  |
|---|--|
| Vacuum hose drawing (Engine control) .....      | <a href="#">EC-23</a>                  |
| Valve clearance .....                           | <a href="#">EM-85</a>                  |
| Valve guide .....                               | <a href="#">EM-101</a>                 |
| Valve lifter .....                              | <a href="#">EM-81</a>                  |
| Valve seat .....                                | <a href="#">EM-103</a>                 |
| Valve spring .....                              | <a href="#">EM-104</a>                 |
| Vanity mirror lamp .....                        | <a href="#">LT-166</a>                 |
| Variable induction air control system (VIAS) .. | <a href="#">EC-558, EC-607</a>         |
| Vehicle security (theft warning) system .....   | <a href="#">BL-98</a>                  |
| Vehicle speed sensor (VSS) .....                | <a href="#">EC-350, EC-554, EC-556</a> |
| VEHSEC - Wiring diagram .....                   | <a href="#">BL-103</a>                 |
| VENT/V - Wiring diagram .....                   | <a href="#">EC-303, EC-526</a>         |
| VIAS - Wiring diagram .....                     | <a href="#">EC-609</a>                 |
| VIAS/V - Wiring diagram .....                   | <a href="#">EC-559</a>                 |

## W

|                             |                       |
|-----------------------------|-----------------------|
| WARN - Wiring diagram ..... | <a href="#">DI-44</a> |
| Warning chime .....         | <a href="#">DI-60</a> |

|                                       |                         |
|---------------------------------------|-------------------------|
| Wiring diagram - CVT - CAN .....      | <a href="#">CVT-72</a>  |
| Wiring diagram - CVT - FTS .....      | <a href="#">CVT-89</a>  |
| Wiring diagram - CVT - L/USSV .....   | <a href="#">CVT-167</a> |
| Wiring diagram - CVT - LPSV .....     | <a href="#">CVT-117</a> |
| Wiring diagram - CVT - MMSW .....     | <a href="#">CVT-133</a> |
| Wiring diagram - CVT - NONDTC .....   | <a href="#">CVT-182</a> |
| Wiring diagram - CVT - PNP/SW .....   | <a href="#">CVT-82</a>  |
| Wiring diagram - CVT - POWER .....    | <a href="#">CVT-154</a> |
| Wiring diagram - CVT - PRIPS .....    | <a href="#">CVT-146</a> |
| Wiring diagram - CVT - PRSCVT .....   | <a href="#">CVT-94</a>  |
| Wiring diagram - CVT - SECPS .....    | <a href="#">CVT-138</a> |
| Wiring diagram - CVT - SECPSV .....   | <a href="#">CVT-128</a> |
| Wiring diagram - CVT - SESCVT .....   | <a href="#">CVT-99</a>  |
| Wiring diagram - CVT - SPSW .....     | <a href="#">CVT-179</a> |
| Wiring diagram - CVT - STM .....      | <a href="#">CVT-173</a> |
| Wiring diagram - CVT - STSIG .....    | <a href="#">CVT-75</a>  |
| Wiring diagram - CVT - TCV .....      | <a href="#">CVT-109</a> |
| Wiring Diagram (Cell code) list ..... | <a href="#">PG-55</a>   |
| Wiring diagrams .....                 | <a href="#">GI-14</a>   |
| WT-T/WARN - Wiring diagram .....      | <a href="#">WT-11</a>   |

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L

IDX