



# insider info

## Erratic Tail Light Operation

If you encounter a customer concern of inoperative tail lights unless the parking switch on top of the steering column is turned on, check for a poor connection at the parking switch harness connector.

The battery power comes from the Main Fuse Box (under the hood) fuse #7 to the parking switch, before being switched out to the tail light illumination relay.