



insider info

Inoperative Keyless Entry Remote

If a keyless entry remote fob is not functioning, first check that the battery is good. Next, inspect the battery contacts in the remote for oxidation, a common cause of failure. SOA says lightly buffing the battery terminals and remote contacts with a coarse cloth will remove most oxidation for best results. After these simple steps, a determination can be made to replace the battery or remote.