

SERVICE BULLETIN

APPLICABILITY

1992 LEGACY AND SVX

DATE

12-16-92

SUBJECT:**SERVICE MANUAL CORRECTIONS**

The attached Fuse To Load Charts should be used in Sections 6-3 of the service manuals.

An "Additional Information Label" should be attached to 6-3, page reference number [0501] in the Legacy Service Manual and 6-3, page reference number [0401] in the SVX Service Manual.

CAUTION

VEHICLE SERVICING PERFORMED BY UNTRAINED PERSONS COULD RESULT IN SERIOUS INJURY TO THOSE PERSONS OR TO OTHERS. Subaru Service Bulletins are intended for use by professional technicians ONLY. They are written to inform those technicians of conditions that may occur in some vehicles, or to provide information that could assist in the proper servicing of the vehicle. Properly trained technicians have the equipment, tools, safety instructions, and know-how to do the job correctly and safely. If a condition is described, DO NOT assume that this Service Bulletin applies to your vehicle, or that your vehicle will have that condition.

Fuse Chart of 92MY Legacy

NO.	LOAD
MB-3	IGNITION RELAY: FIG 28-1, 29-1 FUEL PUMP RELAY: FIG 28-1, 29-1 INJECTORS: FIG 29-1
MB-4	P/W AND SUNROOF CIRCUIT BREAKER: FIG 52, 53, 60 AUTOMATIC SHOULDER BELT CONTROL UNIT: FIG 67, 68
MB-5	HEADLIGHT LH: FIG 31, 32
MB-6	DIODE (LIGHTING): FIG 31, 31 LIGHTING SWITCH: FIG 31 DRL CONTROL UNIT: FIG 32
MB-7	HEADLIGHT RH: FIG 31, 32 COMBINATION METER: FIG 31, 32
MB-8	RADIO: FIG 61, 62 HEIGHT CONTROL UNIT: FIG 66 SPOT LIGHT: FIG 60 ROOM LIGHT: FIG 34, 35, 36 STEP LIGHT: FIG 34, 36 LUGGAGE LOOM LIGHT: FIG 34, 35, 36 TRUNK LOOM LIGHT: FIG 39 COMBINATION METER: FIG 34, 35, 36
MB-9	A/C FUSE: FIG 44

NO.	LOAD
SBF-1	HYDRAULIC UNIT: FIG 70, 71
SBF-2	A/S COMPRESSOR: FIG 66
ALT-1	COMBINATION METER: FIG 26, 48 DRL CONTROL UNIT: FIG 32
ALT-2	DIODE (MPFI): FIG 28-1, 29-1 IGNITION COIL: FIG 28-1, 29-1
IG-1	INHIBITOR SWITCH: FIG 27, 28-1 29-1, 32 STARTER INTERLOCK RELAY: FIG 27, 32 MPFI CONTROL UNIT: FIG 28-1, 29-1
IG-2	BLANK
FB-1	STOP AND BRAKE SWITCH: FIG :FIG 37, 41, 42, 43, 54, 55 STOP LIGHT SWITCH: FIG 37, 41, 42, 43, 70, 71
FB-2	HORN RELAY: FIG 59

Fuse Chart of 92MY Legacy (Cont'd)

NO.	LOAD
FB-3	HYDRAULIC UNIT: FIG 70, 71
FB-4	BLOWER MOTOR RELAY: FIG 44, 63
FB-5	A/S COMPRESSOR RELAY: FIG 66 A/S CHARGE SOLENOID: FIG 66 A/S DISCHARGE SOLENOID: FIG 66 A/S SOLENOIDS: FIG 66
FB-6	FRONT DOOR LOCK SWITCH LH: FIG 56, 57, 58
FB-7	SHIFT LOCK CONTROL UNIT: FIG 43 KEY WARNING SWITCH: FIG 43, 67 68, 69 POWER ANTENNA: FIG 61, 62 AUTOMATIC SHOULDER BELT CONTROL UNIT: FIG 67, 68
FB-8	HAZARD SWITCH: FIG 38
FB-9	FRONT WASHER MOTOR: FIG 45
FB-10	FRONT WIPER MOTOR: FIG 45 FRONT WIPER SWITCH: FIG 45 REAR WASHER MOTOR: FIG 46 REAR WIPER RELAY: FIG 46

NO.	LOAD
	REAR WIPER MOTOR: FIG 46 SHIFT LOCK CONTROL UNIT: FIG 43
FB-11	CIGARETTE LIGHTER: FIG 59 VANITY MIRROR LIGHT: FIG 60
FB-12	REMOTE CONTROLLED REARVIEW MIRROR SWITCH: FIG 64, 65
FB-13	RADIO: FIG 61, 62
FB-14	DIODE (A/C): FIG 44 A/C PRESSURE SWITCH: FIG 44 MPFI CONTROL UNIT: FIG 30, 44
FB-15	A/C SHORT CONNECTOR: FIG 30, 44 MAIN FAN MOTOR: FIG 30, 44
FB-16	A/C MAIN FAN RELAY: FIG 44
FB-17	AT CONTROL UNIT: FIG 41, 42 MPFI CONTROL UNIT: FIG 28-1, 29-1

Fuse Chart of 92MY Legacy (Cont'd)

NO.	LOAD
FB-18	REAR DEFOGGER SWITCH: FIG 47 CONDENSOR (REAR DEFOGGER): FIG 47 REAR DEFOGGER (HEAT WIRE): FIG 47
FB-19	REAR DEFOGGER SWITCH: FIG 47
FB-20	INHIBITOR SWITCH: FIG 40 BACK-UP LIGHT SWITCH: FIG 40
FB-21	SHIFT LOCK CONTROL UNIT: FIG 43
FB-22	HAZARD SWITCH: FIG 38
FB-23	ABS-G SENSOR: FIG 70 ABS CONTROL UNIT: FIG 70 MAIN RELAY: FIG 54 CRUISE CONTROL MAIN SWITCH: FIG 54 AIRBAG CONNECTOR: FIG 72
FB-24	COMBINATION METER: FIG 26, 28-1 29-1, 41, 42, 48, 49, 51, 67, 68 69, 70, 71 AUTOMATIC SHOULDER BELT CONTROL UNIT: FIG 67, 68 HEIGHT CONTROL UNIT: FIG 66 MODE CONTROL PANEL: FIG 63 SEAT BELT TIMER: FIG 69 DELAY AMP.: FIG 49

NO.	LOAD
FB-25	CHECK CONNECTOR: FIG 41, 42, 66 EVAPORATION THERMO SWITCH: FIG 44 BLOWER MOTOR RELAY: FIG 44, 63 HEIGHT CONTROL UNIT: FIG 66 FRESH/RECIRC ACTUATOR: FIG 63 DRL UNIT: FIG 32 DRL RELAY: FIG 32 HIGH BEAM RELAY: FIG 32 P/W AND SUNROOF RELAY: FIG 52, 53, 60
FB-26	AT CONTROL UNIT: FIG 41, 42 FUEL PUMP RELAY: FIG 28-1, 29-1 MPFI CONTROL UNIT: FIG 28-1, 29-1 IGNITER: FIG 29-2 AIRBAG CONNECTOR: FIG 72
FB-27	LIGHTING SWITCH: FIG 33
FB-28	PARKING SWITCH: FIG 33
FB-29	ILLMINATION LIGHTS: FIG 33 COMBINATION METER: FIG 33
FB-31	PARKING SWITCH: FIG 33
FB-32	PARKING SWITCH: FIG 33 FRONT CLEARANCE LIGHT: FIG 33

Fuse Chart of 92MY Legacy (Cont'd)

NO.	LOAD	NO.	LOAD
FB-33	SIDE MARKER LIGHTS: FIG 33		
FB-34	REAR COMBINATION LIGHTS (TAIL): FIG 33 LICENSE PLATE LIGHT: FIG 33 SIDE MARKER LIGHT: FIG 33		
FB-35	COMBINATION METER: FIG 72		
FB-36	CRUISE CONTROL MAIN SWITCH: FIG 55 MAIN RELAY: FIG 55 ABS-G SENSOR: FIG 71 ABS CONTROL UNIT: FIG 71		

Fuse Chart of 92MY SVX

NO.	LOAD
MB-1	MAIN RELAY: FIG 38-1 FUEL PUMP RELAY: FIG 38-1
MB-2	AUTOMATIC SHOULDER BELT CONTROL UNIT: FIG 27 POWER WINDOW CIRCUIT BREAKER: FIG 44, 59
MB-3	FOG LIGHT RELAY: FIG 42 HEADLIGHT LH (LO & HI): FIG 42,43 COMBINATION METER: FIG 43
MB-4	LIGHTING SWITCH: FIG 42 DIMMER DIODE: FIG 42 DRL DIODE: FIG 43
MB-5	COMBINATION METER: FIG 42 HEADLIGHT RH (LO & HI): FIG 42,43
MB-6	RADIO: FIG 26 CLOCK: FIG 26 COURTESY LIGHT LH/RH: FIG 32 KEY ILLUMINATION LIGHT: FIG 32 DOOR KEY HOLE ILLUMINATION LIGHT: FIG 32

NO.	LOAD
MB-6	POWER STEERING UNIT: FIG 37 AUTO A/C CONTROL UNIT: FIG 49-1 SPOT & ROOM LIGHT: FIG 55 REAR ROOM LIGHT: FIG 55 TIME CONTROL UNIT: FIG 60 TRUNK ROOM LIGHT: FIG 61 STEP LIGHT LH/RH: FIG 55
MB-7	FUSE (FAN LH/RH): FIG 49-1
SBF-6	HYDRAULIC UNIT: FIG 23
ALT-1	ABS CONTROL UNIT: FIG 23 COMBINATION METER: FIG 29, 37, 46, 58
IG-1	STARTER INTERRUPT RELAY ADAPTER: FIG 38-1, 57 INHIBITOR SWITCH (P & N): FIG 38-1, 57 DRL CONTROL UNIT: FIG 43
IG-2	RELAY 8 (HEAD): FIG 42, 43 FOG LIGHT RELAY: FIG 43

Fuse Chart of 92MY SVX (Cont'd)

NO.	LOAD
FB-1	STOP & BRAKE SWITCH: FIG 23, 24, 25, 58
FB-2	HORN RELAY: FIG 33, 34, 41 STOP & BRAKE SWITCH: FIG 33, 34
FB-3	HYDRAULIC UNIT: FIG 23
FB-4	OFF RELAY: FIG 49-2
FB-5	HAZARD SWITCH: FIG 62
FB-6	TELEPHONE: (OP)
FB-7	REAR WIPER RELAY: FIG 51 REAR WIPER MOTOR: FIG 51
FB-8	KEY WARNING SWITCH: FIG 25, 27 A/T SHIFT LOCK CONTROL UNIT: FIG 25 POWER ANTENNA: FIG 26 AUTOMATIC SHOULDER BELT CONTROL UNIT: FIG 27
FB-9	EMPTY
FB-10	EMPTY

NO.	LOAD
FB-11	A/T SHIFT LOCK CONTROL UNIT: FIG 25 FRONT WASHER MOTOR: FIG 39 FRONT WIPER CONTROL UNIT: FIG 39 REAR WASHER MOTOR: FIG 51 REAR WIPER RELAY: FIG 51
FB-12	CLOCK: FIG 26 CIGARETTE LIGHTER: FIG 41 AUTO A/C CONTROL UNIT: FIG 49-1 VANITY MIRROR LIGHT LH & RH: FIG 55
FB-13	OUTSIDE MIRROR DEFOGGER SWITCH: FIG 52 REMOTE CONTROL MIRROR SWITCH: FIG 52 TIME CONTROL UNIT: FIG 60
FB-14	RADIO: FIG 26
FB-15	EMPTY
FB-16	EMPTY
FB-17	EMPTY
FB-18	DOOR LOCK TIMER: FIG 35 DOOR LOCK ACTUATOR: FIG 36

Fuse Chart of 92MY SVX (Cont'd)

NO.	LOAD
FB-19	A/T CONTROL UNIT: FIG 24
FB-20	EMPTY
FB-21	EMPTY
FB-22	CONDENSOR (REAR DEFOGGER): FIG 50 REAR DEFOGGER: FIG 50
FB-23	TIME CONTROL UNIT: FIG 50
FB-24	INHIBITOR SWITCH (R): FIG 28
FB-25	A/T SHIFT LOCK CONTROL UNIT: FIG 25
FB-26	HAZARD SWITCH: FIG 62
FB-27	AIRBAG CONTROL UNIT: FIG 56
FB-28	COMBINATION METER: FIG 23, 24, 27, 29, 38-1, 40, 45, 46, 54, 56, 58 VEHICLE SPEED SENSOR 2: FIG 24, 33, 34, 37, 38-1, 39 44-1, 54 DRL RELAY 1: FIG 43 DRL CONTROL UNIT: FIG 43

NO.	LOAD
FB-28	DRL RELAY 2: FIG 43 TIME CONTROL UNIT: FIG 60
FB-29	AUTOMATIC SHOULDER BELT CONTROL UNIT: FIG 27 LIGHTING SWITCH: FIG 44 POWER WINDOW RELAY: FIG 48, 59 AUTO A/C CONTROL UNIT: FIG 49-2 INTAKE DOOR ACTUATOR: FIG 49-2 OFF RELAY: FIG 49-2 HI RELAY: FIG 49-2
FB-30	COMBINATION METER: FIG 23, 24, 27, 29, 37, 38-1, 40, 45, 46, 54, 56, 58
FB-31	AIRBAG CONTROL UNIT: FIG 56
FB-32	LIGHTING SWITCH: FIG 44
FB-33	PARKING LIGHT SWITCH: FIG 44
FB-34	A/T CONTROL UNIT: FIG 24 FUEL PUMP RELAY: FIG 38-1 MPFI CONTROL UNIT: FIG 38-1 DIODE (MPFI): FIG 38-1 IGNITION COIL (#1~#6): FIG 38-1

Fuse Chart of 92MY SVX (Cont'd)

NO.	LOAD
FB-35	COMBINATION METER: FIG 44 ILLUMINATION LIGHT (GLOVE BOX, ASH TRAY, CIGARETTE LIGHTER, CD, RADIO, AUTO A/C UNIT, SWITCH BOX IN & OUT, REMOTE CONTROL MIRROR SWITCH, PARKING LIGHT/ MIRROR HEATER SWITCH, A/T SELECTOR LEVER, SPOT/ROOM LIGHT SWITCH: FIG 44 TIME CONTROL UNIT: FIG 60
FB-36	EMPTY
FB-37	STARTER INTERRUPT RELAY: FIG 38-1 SECURITY MODULE: FIG 44, 53 PARKING LIGHT SWITCH: FIG 44
FB-38	SECURITY MODULE: FIG 44 PARKING LIGHT SWITCH: FIG 44
FB-39	FRONT SIDE MARKER LIGHT LH & RH: FIG 44
FB-40	TAIL LIGHT LH & RH: FIG 44 REAR SIDE MARKER LIGHT LH & RH: FIG 44 LICENSE PLATE LIGHT: FIG 44
FB-41	FOG LIGHT LH & RH: FIG 42, 43

NO.	LOAD
FB-42	ABS CONTROL UNIT: FIG 23 CRUISE CONTROL MAIN SWITCH: FIG 33, 34 CRUISE CONTROL MAIN RELAY: FIG 33, 34 POWER STEERING UNIT: FIG 37 SELECT MONITOR CONNECTOR: FIG 38-1 SECURITY MODULE: FIG 53
FB-43	FRONT WIPER CONTROL UNIT: FIG 39