


## C: ON-BOARD DIAGNOSTICS

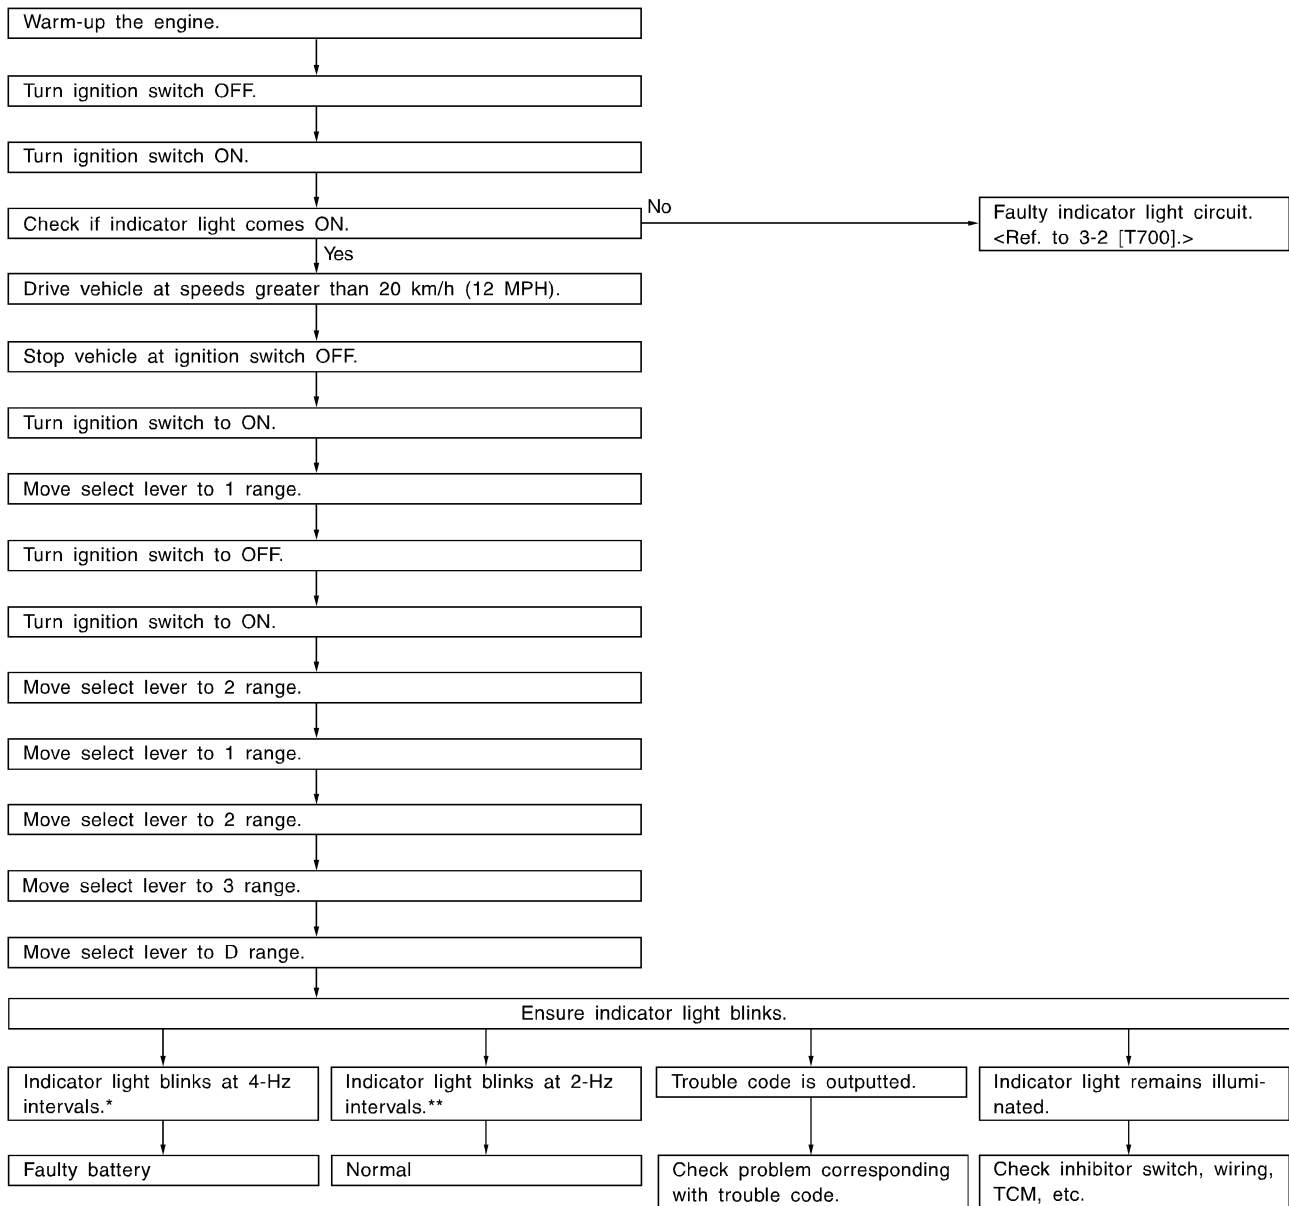

\* : Blinks every 0.125 (1/8) seconds (until ignition switch is turned OFF).

\*\* : Blinks every 0.25 (1/4) seconds (until ignition switch is turned OFF).

## 8. Diagnostic Chart with Trouble Code

### A: LIST OF TROUBLE CODE

#### 1. TROUBLE CODE

Trouble code	Item	Content of diagnosis	Title index No.
11	Engine speed signal	Detects open or shorted input signal circuit.	<Ref. to 3-2 [T8C0].>
27	ATF temperature sensor	Detects open or shorted input signal circuit.	<Ref. to 3-2 [T8D0].>
31	Throttle position sensor	Detects open or shorted input signal circuit.	<Ref. to 3-2 [T8E0].>
33	Vehicle speed sensor 2 (Front)	Detects open or shorted input signal circuit.	<Ref. to 3-2 [T8F0].>
36	Torque converter turbine speed sensor	Detects open or shorted input signal circuit.	<Ref. to 3-2 [T8G0].>
38	Torque control signal	Detects open or shorted input signal circuit.	<Ref. to 3-2 [T8H0].>
45	Intake manifold pressure signal	Detects open or shorted input signal circuit.	<Ref. to 3-2 [T8I0].>
71	Shift solenoid 1	Detects open or shorted output signal circuit.	<Ref. to 3-2 [T8J0].>
72	Shift solenoid 2	Detects open or shorted output signal circuit.	<Ref. to 3-2 [T8K0].>
73	Low clutch timing solenoid	Detects open or shorted output signal circuit.	<Ref. to 3-2 [T8L0].>
74	2-4 brake timing solenoid	Detects open or shorted output signal circuit.	<Ref. to 3-2 [T8M0].>
75	Line pressure duty solenoid	Detects open or shorted output signal circuit.	<Ref. to 3-2 [T8N0].>
76	2-4 brake duty solenoid	Detects open or shorted output signal circuit.	<Ref. to 3-2 [T8O0].>
77	Lock-up duty solenoid	Detects open or shorted output signal circuit.	<Ref. to 3-2 [T8P0].>
79	Transfer duty solenoid	Detects open or shorted output signal circuit.	<Ref. to 3-2 [T8Q0].>
93	Vehicle speed sensor 1 (Rear)	Detects open or shorted input signal circuit.	<Ref. to 3-2 [T8R0].>