


5. Spark Plugs

A: REPLACEMENT

- 1) Remove the intake duct and intake chamber.
- 2) Remove the washer tank and put it aside.
- 3) Disconnect the spark plug cord.
- 4) Remove the spark plug with a plug-wrench.

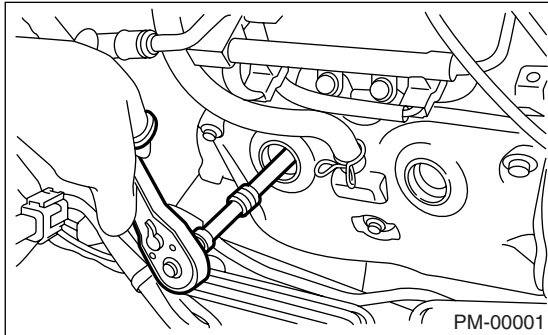

- 5) Set the new spark plug.

Spark plug:

Non-turbo model

CHAMPION RC10YC4

NGK BKR6E-11 (Alternate)

NGK BKR5E-11 (Alternate)

Turbo model

NGK PFR6G

Spark plug gap:

Non-turbo model

1.0 — 1.1 mm (0.039 — 0.043 in)

Turbo model

0.7 — 0.8 mm (0.028 — 0.031 in)

- 6) Tighten the spark plug lightly with hand, and then secure with a plug-wrench to the specified torque.

Tightening torque:

20.6 N·m (2.10 kgf·m, 15.19 ft·lb)

NOTE:

- Be sure to place the gasket between the cylinder head and spark plug.
- If a torque wrench is not available, tighten the spark plug until gasket contacts cylinder head; then tighten further 1/4 to 1/2 turns.