
46.Harness Components Location

A: LOCATION

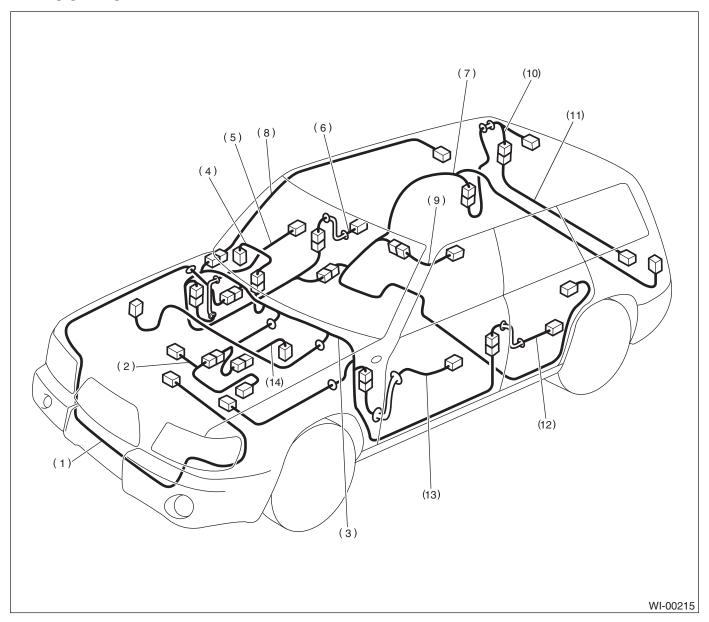

- (1) Front wiring harness
- (2) Engine wiring harness
- (3) Bulkhead wiring harness
- (4) Instrument panel wiring harness
- (5) Front door cord RH

- (6) Rear door cord RH
- (7) Rear wiring harness
- (8) Roof cord
- (9) Fuel tank cord
- (10) Rear gate cord

- (11) Trunk lid cord
- (12) Front door cord LH
- (13) Transmission cord