


## 5. Spark Plugs

### A: REPLACEMENT

- 1) Disconnect battery ground cable.
- 2) Remove intake duct and intake chamber.
- 3) Remove washer tank and put it aside.
- 4) Disconnect spark plug cord.
- 5) Remove spark plug with a plug-wrench.

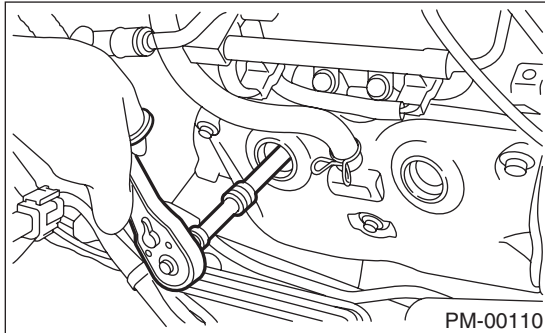

- 6) Set new spark plug.

#### **Recommended spark plug:**

**Non-TURBO model;**

**CHAMPION RC10YC4**

**NGK BKR5E-11**

**NGK BKR6E-11**

**TURBO model;**

**NGK PFR6G**

**Spark plug gap**

**0.7 — 0.8 mm (0.028 — 0.031 in)**

- 7) Tighten spark plug lightly with hand, and then secure with a plug-wrench to the specified torque.

#### **Tightening torque:**

**24 N·m (2.4 kgf·m, 18 ft·lb)**

#### **NOTE:**

- Be sure to place the gasket between the cylinder head and spark plug.
- If torque wrench is not available, tighten spark plug until gasket contacts cylinder head; then tighten further 1/4 to 1/2 turns.