

## **8. Fuel Line**

### **A: INSPECTION**

The fuel line is located mostly internally, so check pipes, areas near pipes, and engine compartment piping for rust, hose damage, loose bands, etc. If faulty parts are found, repair or replace them. <Ref. to FU(H4SO)-72, Fuel Delivery, Return and Evaporation Lines.>