

# FRONT CATALYTIC CONVERTER

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

---

## 2. Front Catalytic Converter

### A: REMOVAL

Front catalyst is built in center exhaust pipe. Therefore, the removal procedure is the same as that for the center exhaust pipe. <Ref. to EX(H4SO)-8, REMOVAL, Center Exhaust Pipe.>

### B: INSTALLATION

Front catalyst is built in center exhaust pipe. Therefore, the installation procedure is the same as that for the center exhaust pipe. <Ref. to EX(H4SO)-8, INSTALLATION, Center Exhaust Pipe.>

### C: INSPECTION

- 1) Make sure there are no exhaust leaks from connections and welds.
- 2) Make sure there are no holes or rusting.