

REAR CATALYTIC CONVERTER

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

3. Rear Catalytic Converter

A: REMOVAL

Rear catalyst is built in center exhaust pipe. Therefore, the removal procedure is the same as that for the center exhaust pipe. <Ref. to EX(H4SO)-8, REMOVAL, Center Exhaust Pipe.>

B: INSTALLATION

Rear catalyst is built in center exhaust pipe. Therefore, the installation procedure is the same as that for the center exhaust pipe.<Ref. to EX(H4SO)-8, INSTALLATION, Center Exhaust Pipe.>

C: INSPECTION

- 1) Make sure there are no exhaust leaks from connections and welds.
- 2) Make sure there are no holes or rusting.