


CANISTER

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)


4. Canister

A: REMOVAL


- 1) Lift-up the vehicle.
- 2) Disconnect connector (A) from drain valve.
- 3) Disconnect evaporation hoses (B) and (C) from canister.

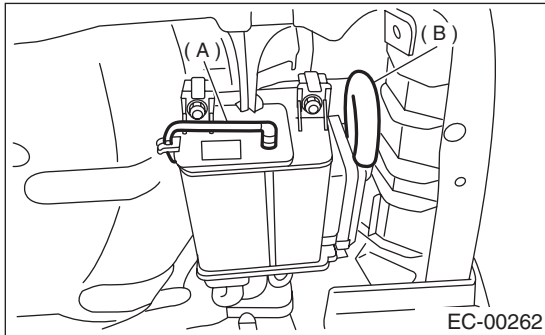

- 4) Disconnect quick connector (A) from canister.
- 5) Disconnect evaporation hoses (B) and (C) from canister.

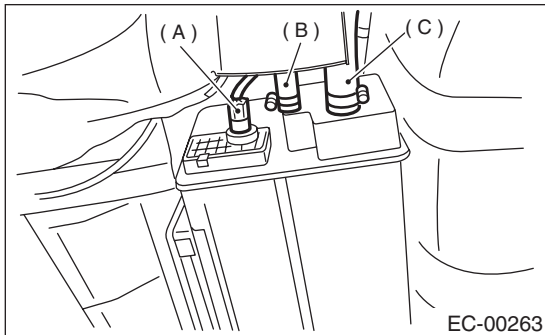

- 6) Remove the canister from vehicle.

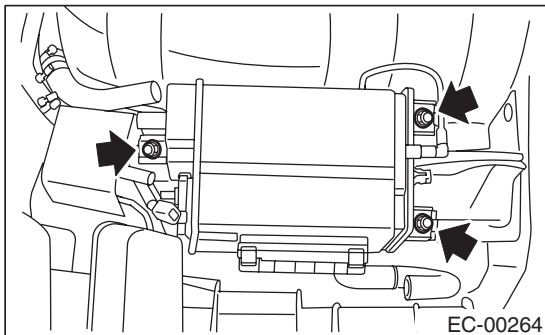


B: INSTALLATION

- 1) Install in the reverse order of removal.

Tightening torque:

23 N·m (2.3 kgf-m, 17 ft-lb)

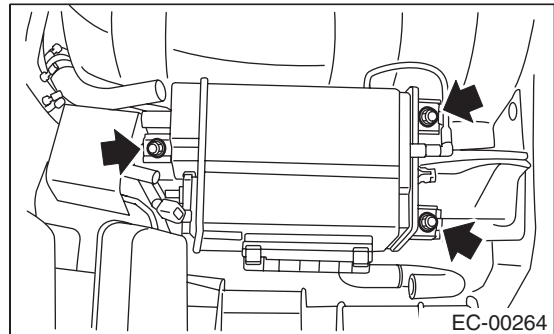

C: INSPECTION

Make sure the canister and canister hoses are not cracked or loose.