


# TRANSMISSION CONTROL MODULE (TCM) I/O SIGNAL

ENGINE (DIAGNOSTICS)

## 7. Transmission Control Module (TCM) I/O Signal

### A: ELECTRICAL SPECIFICATION

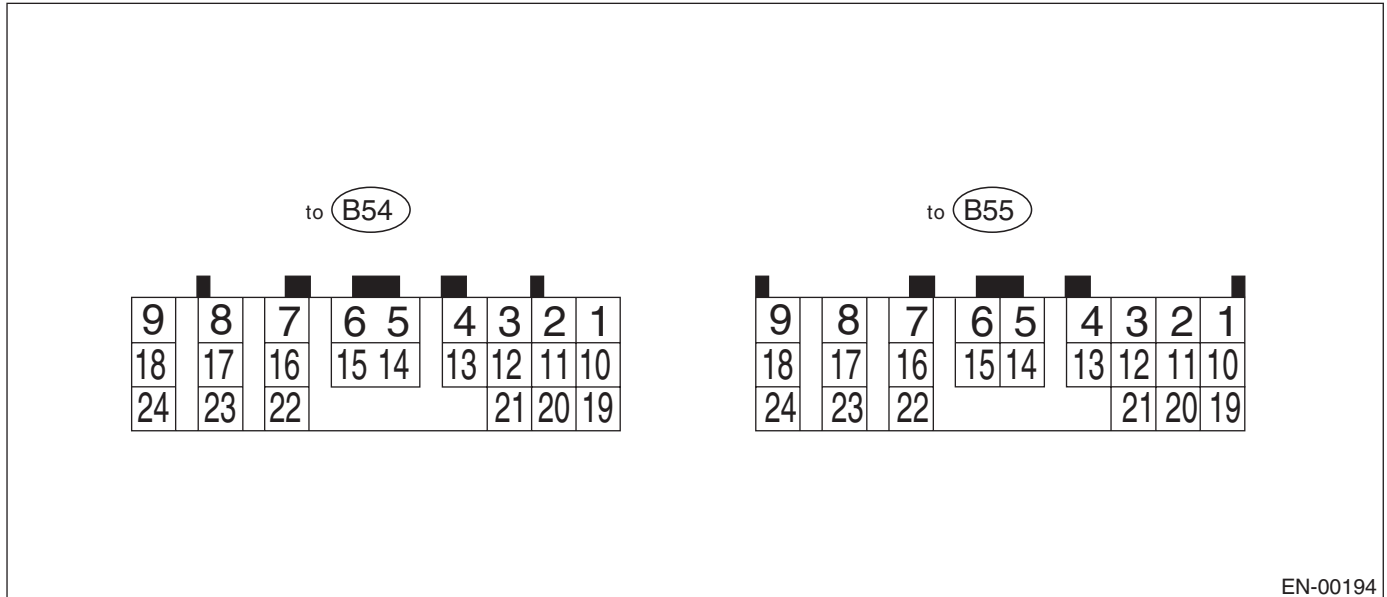

EN-00194

**NOTE:**

Check with ignition switch ON.

Content		Connector No.	Terminal No.	Measuring conditions	Voltage (V)
Back-up power supply		B55	6	Ignition switch OFF	10 — 16
Ignition power supply		B54	23	Ignition switch ON (with engine OFF)	10 — 16
		B54	24		
Inhibitor switch	"P" range switch	B55	23	Selector lever in "P" range	Less than 1
				Selector lever in any other than "P" range	More than 8
	"N" range switch	B55	22	Selector lever in "N" range	Less than 1
				Selector lever in any other than "N" range	More than 8
	"R" range switch	B55	17	Selector lever in "R" range	Less than 1
				Selector lever in any other than "R" range	More than 9.5
	"D" range switch	B55	8	Selector lever in "D" range	Less than 1
				Selector lever in any other than "D" range	More than 9.5
	"3" range switch	B55	18	Selector lever in "3" range	Less than 1
				Selector lever in any other than "3" range	More than 9.5
"2" range switch	B54	10	Selector lever in "2" range	Less than 1	
			Selector lever in any other than "2" range	More than 9.5	
"1" range switch	B54	1	Selector lever in "1" range	Less than 1	
			Selector lever in any other than "1" range	More than 9.5	
Brake switch		B55	24	Brake pedal depressed	More than 10.5
				Brake pedal released	Less than 1
ABS signal		B54	19	ABS switch ON	Less than 1
				ABS switch OFF	More than 6.5

# TRANSMISSION CONTROL MODULE (TCM) I/O SIGNAL

ENGINE (DIAGNOSTICS)

Content	Connector No.	Terminal No.	Measuring conditions	Voltage (V)	Resistance to body (ohms)
Throttle position sensor	B55	1	Throttle fully closed.	0.3 — 0.7	—
			Throttle fully open.	4.3 — 4.9	
Throttle position sensor power supply	B55	2	Ignition switch ON (with engine OFF)	4.8 — 5.3	—
ATF temperature sensor	B55	11	ATF temperature 20°C (68°F)	2.9 — 4.0	2.1 k — 2.9 k
			ATF temperature 80°C (176°F)	1.0 — 1.4	275 — 375
Rear vehicle speed sensor	B55	3	Vehicle stopped.	0	450 — 650
			Vehicle speed at least 20 km/h (12 MPH)	More than 1 (AC range)	
Front vehicle speed sensor	B55	5	Vehicle speed at most 10 km/h (6 MPH)	Less than 1 ← → More than 4	—
Torque converter turbine speed sensor	B55	12	Vehicle stopped.	0	450 — 650
			Vehicle speed at least 20 km/h (12 MPH)	More than 1 (AC range)	
Vehicle speed output signal	B55	13	Vehicle speed at most 10 km/h (6 MPH)	Less than 1 ← → More than 4	—
Engine speed signal	B55	4	Ignition switch ON (with engine OFF).	More than 10.5	—
			Ignition switch ON (with engine ON).	8 — 11	
Cruise set signal	B54	11	When cruise control is set (SET lamp ON).	Less than 1	—
			When cruise control is not set (SET lamp OFF).	More than 6.5	
Torque control 1 signal	B54	13	Ignition switch ON (with engine ON)	More than 9	—
Torque control 2 signal	B54	21	Ignition switch ON (with engine ON)	More than 9	—
Torque control cut signal	B54	2	Ignition switch ON	8	—
AT load signal	B55	20	Engine idling after warm-up	1.2 — 1.8	—
Shift solenoid 1	B54	7	1st or 4th gear	More than 9	10 — 16
			2nd or 3rd gear	Less than 1	
Shift solenoid 2	B54	6	1st or 2nd gear	More than 9	10 — 16
			3rd or 4th gear	Less than 1	
Line pressure duty solenoid	B54	9	Throttle fully closed (with engine OFF) after warm-up.	1.5 — 4.0	2.0 — 4.5
			Throttle fully open (with engine OFF) after warm-up.	Less than 0.5	
Dropping resistor	B54	18	Throttle fully closed (with engine OFF) after warm-up.	More than 8.5	9 — 15
			Throttle fully open (with engine OFF) after warm-up.	Less than 0.5	
Lock-up duty solenoid	B54	16	When lock up occurs.	More than 8.5	10 — 17
			When lock up is released.	Less than 0.5	
Transfer duty solenoid	B54	15	Fuse on FWD switch	More than 8.5	10 — 17
			Fuse removed from FWD switch (with throttle fully open and with select lever in 1st gear).	Less than 0.5	

# TRANSMISSION CONTROL MODULE (TCM) I/O SIGNAL

## ENGINE (DIAGNOSTICS)

Content	Connector No.	Terminal No.	Measuring conditions	Voltage (V)	Resistance to body (ohms)
2-4 brake duty solenoid	B54	8	Throttle fully closed (with engine OFF) after warm-up.	1.5 — 4.0	2.0 — 4.5
			Throttle fully open (with engine OFF) after warm-up.	Less than 0.5	
2-4 brake duty solenoid resistor	B54	17	Throttle fully closed (with engine OFF) after warm-up.	More than 8.5	9 — 15
			Throttle fully open (with engine OFF) after warm-up.	Less than 0.5	
2-4 brake timing solenoid	B54	5	3rd gear	More than 9	10 — 16
			1st gear	Less than 1	
Low clutch timing solenoid	B54	14	2nd gear	Less than 1	10 — 16
			4th gear	More than 9	
Sensor ground line 1	B55	10	—	0	Less than 1
Sensor ground line 2	B55	21	—	0	Less than 1
System ground line	B55	9	—	0	Less than 1
		19			
FWD switch	B55	14	Fuse removed.	6 — 9.1	—
			Fuse installed.	Less than 1	
FWD indicator lamp	B54	12	Fuse on FWD switch	Less than 1	—
			Fuse removed from FWD switch.	More than 9	
Data link signal (Subaru Select Monitor)	B55	7	—	—	—
		16	—	—	
AT diagnosis signal	B54	4	Ignition switch ON	Less than 1 ↔ More than 4	—