

# MUFFLER

## EXHAUST


### 5. Muffler

#### A: REMOVAL

1) Separate muffler from rear exhaust pipe.

#### CAUTION:

Be careful, exhaust pipe is hot.

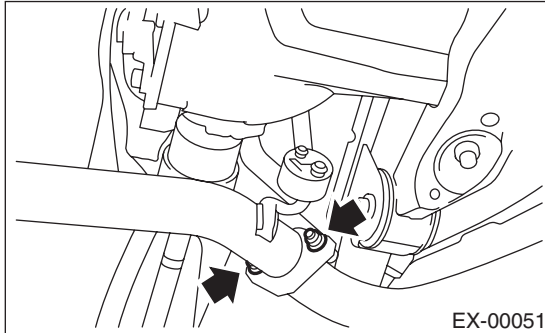

2) Remove left and right cushion rubbers.


#### CAUTION:

Be careful not to drop the muffler during removal.

#### NOTE:

To facilitate removal, apply a coat of SUBARU CRC to mating area of cushion rubbers in advance.

**SUBARU CRC (Part No. 004301003)**

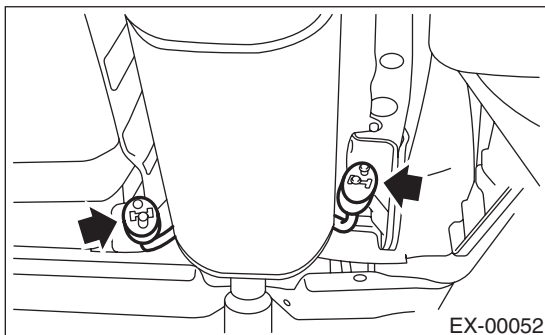


3) Remove front cushion rubber, and detach muffler assembly.

#### NOTE:

To facilitate removal, apply a coat of SUBARU CRC to mating area of cushion rubber in advance.

**SUBARU CRC (Part No. 004301003)**

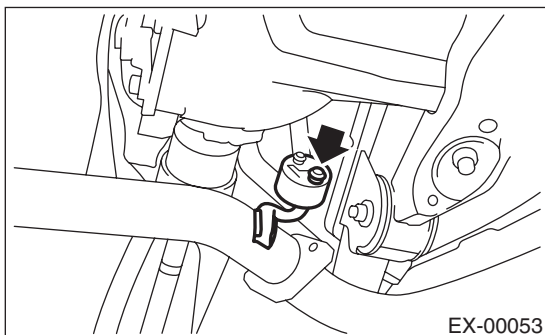

#### B: INSTALLATION


1) Install in the reverse order of removal.

#### NOTE:

Replace gasket and self-locking nuts with new ones.

#### Tightening torque:

**48 N·m (4.9 kgf-m, 35.4 ft-lb)**

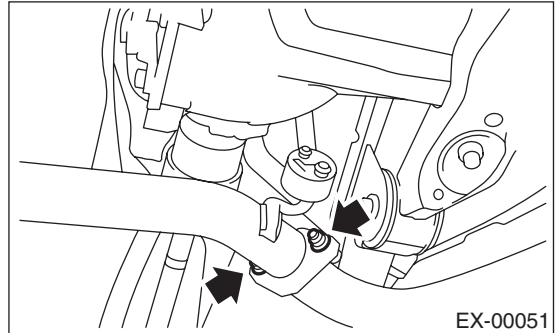

#### C: INSPECTION

1) Make sure there are no exhaust leaks from connections and welds.

2) Make sure there are no holes or rusting.

3) Make sure the cushion rubber is not worn or cracked.