


19. Fuel Pump Relay


A: REMOVAL

1) Disconnect ground cable from battery.

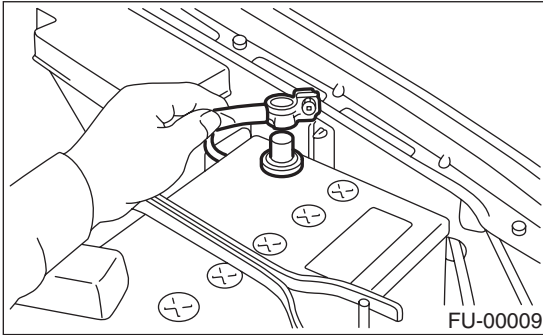

2) Remove lower cover. <Ref. to EI-37, REMOVAL, Instrument Panel Assembly.>

3) Disconnect connector from fuel pump relay.

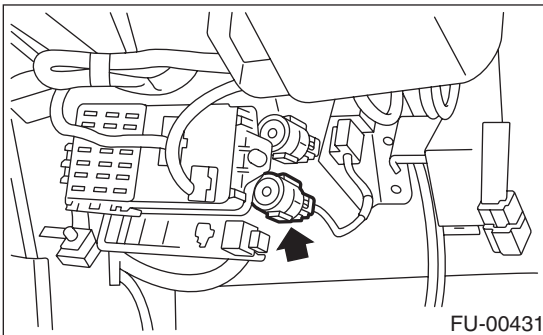

4) Remove fuel pump relay from mounting bracket.

B: INSTALLATION

Install in the reverse order of removal.