

### 26. Fuel Filter

#### A: REMOVAL

##### WARNING:

- Place “NO FIRE” signs near the working area.
- Be careful not to spill fuel on the floor.


##### NOTE:

The fuel filter is built in fuel pump assembly.


1) Release the fuel pressure. <Ref. to FU(H4SO)-48, RELEASING OF FUEL PRESSURE, OPERATION, Fuel.>

2) Remove the fuel pump assembly. <Ref. to FU(H4SO)-66, REMOVAL, Fuel Pump.>

3) Disconnect the ground cable from filter holder.

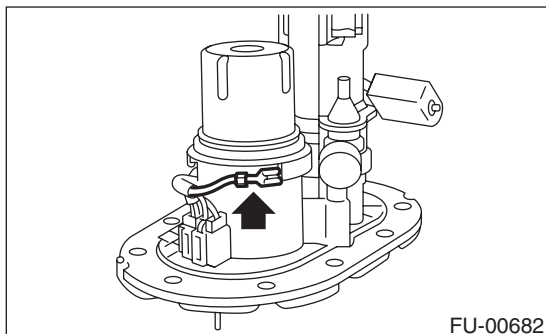

4) Remove the filter holder by turning it to the left from the body pawls, and then take out the filter.

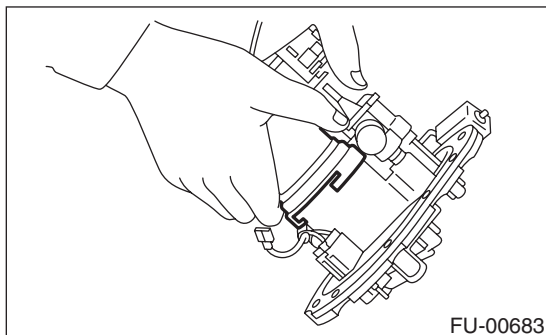


#### B: INSTALLATION


##### NOTE:

- If the fuel hoses are damaged at the connecting portion, replace it with a new one.
- If the clamps are badly damaged, replace with new ones.
- Replace the o-ring with new ones.

1) Set the O-ring on the filter holder, and then install by turning to the right.

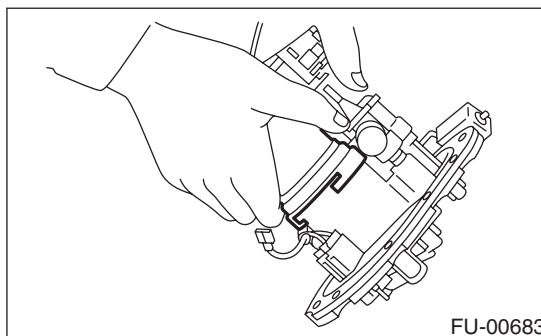

2) Connect the ground cable to filter holder.

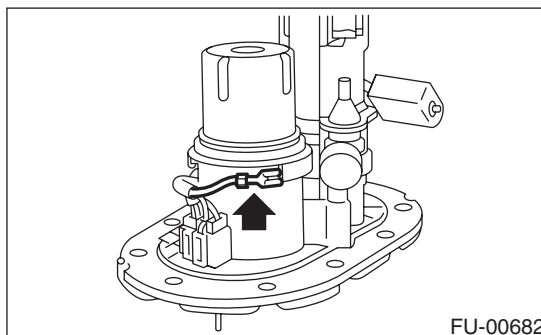

3) Install the fuel pump assembly. <Ref. to FU(H4SO)-66, INSTALLATION, Fuel Pump.>

#### C: INSPECTION

- 1) Check the inside of fuel filter for dirt and water sediment.
- 2) If it is clogged, or if replacement interval has been reached, replace it.