


## 27. Fuel Cut Valve

### A: REMOVAL

- 1) Remove fuel tank. <Ref. to FU(H4SO)-51, REMOVAL, Fuel Tank.>
- 2) Move clip and disconnect evaporation hose from fuel cut valve.

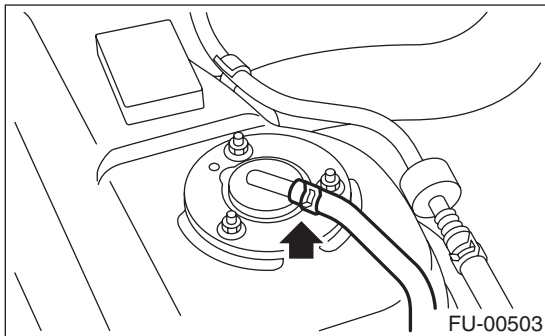

- 3) Remove bolts which install fuel cut valve.

### B: INSTALLATION

Install in the reverse order of removal.

#### **Tightening torque:**

**4.4 N·m (0.45 kgf-m, 3.3 ft-lb)**

