

CYLINDER HEAD ASSEMBLY

MECHANICAL


20. Cylinder Head Assembly

A: REMOVAL

- 1) Remove V-belt. <Ref. to ME(H4SO)-40, REMOVAL, V-belt.>
- 2) Remove crankshaft pulley. <Ref. to ME(H4SO)-42, REMOVAL, Crankshaft Pulley.>
- 3) Remove timing belt cover. <Ref. to ME(H4SO)-43, REMOVAL, Timing Belt Cover.>
- 4) Remove timing belt. <Ref. to ME(H4SO)-44, REMOVAL, Timing Belt.>
- 5) Remove camshaft sprocket. <Ref. to ME(H4SO)-49, REMOVAL, Camshaft Sprocket.>
- 6) Remove intake manifold. <Ref. to FU(H4SO)-15, REMOVAL, Intake Manifold.>
- 7) Remove bolt which installs A/C compressor bracket on cylinder head.
- 8) Remove valve rocker assembly. <Ref. to ME(H4SO)-51, REMOVAL, Valve Rocker Assembly.>
- 9) Remove camshaft. <Ref. to ME(H4SO)-53, REMOVAL, Camshaft.>
- 10) Remove cylinder head bolts in alphabetical sequence shown in figure.


NOTE:

Leave bolts (a) and (c) engaged by three or four threads to prevent cylinder head from falling.

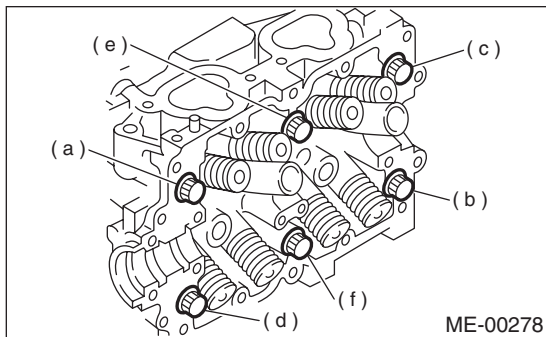

11) While tapping cylinder head with a plastic hammer, separate it from cylinder block.

12) Remove bolts (a) and (c) to remove cylinder head.

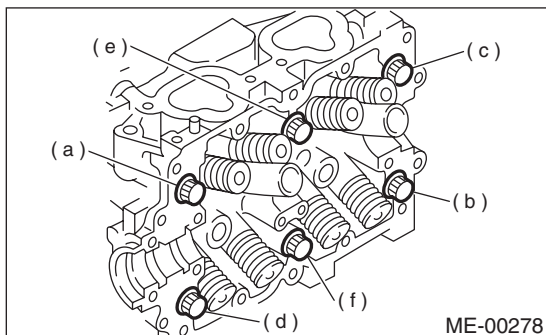

13) Remove cylinder head gasket.

CAUTION:

Do not scratch the mating surface of cylinder head and cylinder block.

14) Similarly, remove right side cylinder head.

B: INSTALLATION

1. CYLINDER HEAD

1) Install cylinder head and gaskets on cylinder block.

CAUTION:

- Use new cylinder head gaskets.
- Be careful not to scratch the mating surface of cylinder block and cylinder head.

2) Tighten cylinder head bolts.

(1) Apply a thin coat of engine oil to washers and bolt threads.

(2) Tighten all bolts to 29 N·m (3.0 kgf·m, 22 ft·lb) in alphabetical sequence.

Then tighten all bolts to 69 N·m (7.0 kgf·m, 51 ft·lb) in alphabetical sequence.

(3) Back off all bolts by 180° with reversing order of assembly and after that back them off by 180° again.

(4) Tighten all bolts to 42 N·m (4.3 kgf·m, 31 ft·lb).

(5) Tighten all bolts by 80 to 90° in alphabetical sequence.

(6) Tighten all bolts by 40 to 45° in alphabetical sequence.


CAUTION:

Make sure that the tightening angle of bolt does not exceed 45°.

(7) Further tighten bolts (a) and (b) by 40 to 45°.

CAUTION:

Ensure that the total “re-tightening angle” [in the steps 6 and 7], do not exceed 90°.

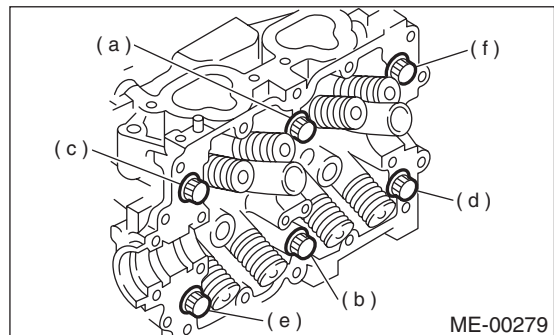

3) Install camshaft. <Ref. to ME(H4SO)-54, INSTALLATION, Camshaft.>

4) Install valve rocker assembly. <Ref. to ME(H4SO)-51, INSTALLATION, Valve Rocker Assembly.>

5) Install A/C compressor bracket on cylinder head.


- 6) Install intake manifold. <Ref. to FU(H4SO)-18, INSTALLATION, Intake Manifold.>
- 7) Install camshaft sprocket. <Ref. to ME(H4SO)-49, INSTALLATION, Camshaft Sprocket.>
- 8) Install timing belt. <Ref. to ME(H4SO)-45, INSTALLATION, Timing Belt.>
- 9) Install timing belt cover. <Ref. to ME(H4SO)-43, INSTALLATION, Timing Belt Cover.>
- 10) Install crankshaft pulley. <Ref. to ME(H4SO)-42, INSTALLATION, Crankshaft Pulley.>
- 11) Install V-belt. <Ref. to ME(H4SO)-40, INSTALLATION, V-belt.>

C: DISASSEMBLY

- 1) Place cylinder head on ST.
ST 498267800 CYLINDER HEAD TABLE
- 2) Set ST on valve spring. Compress valve spring and remove the valve spring retainer key. Remove each valve and valve spring.
ST 499718000 VALVE SPRING REMOVER

CAUTION:


- Mark each valve to prevent confusion.
- Use extreme care not to damage the lips of the intake valve oil seals and exhaust valve oil seals.

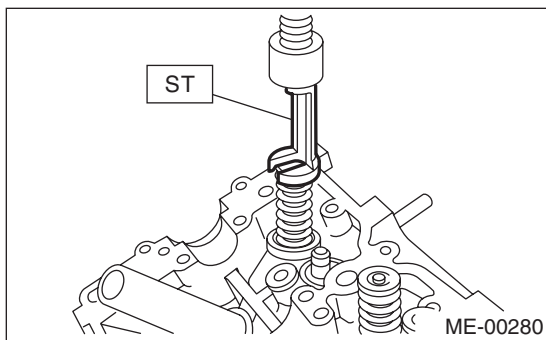

CYLINDER HEAD ASSEMBLY

MECHANICAL

D: ASSEMBLY

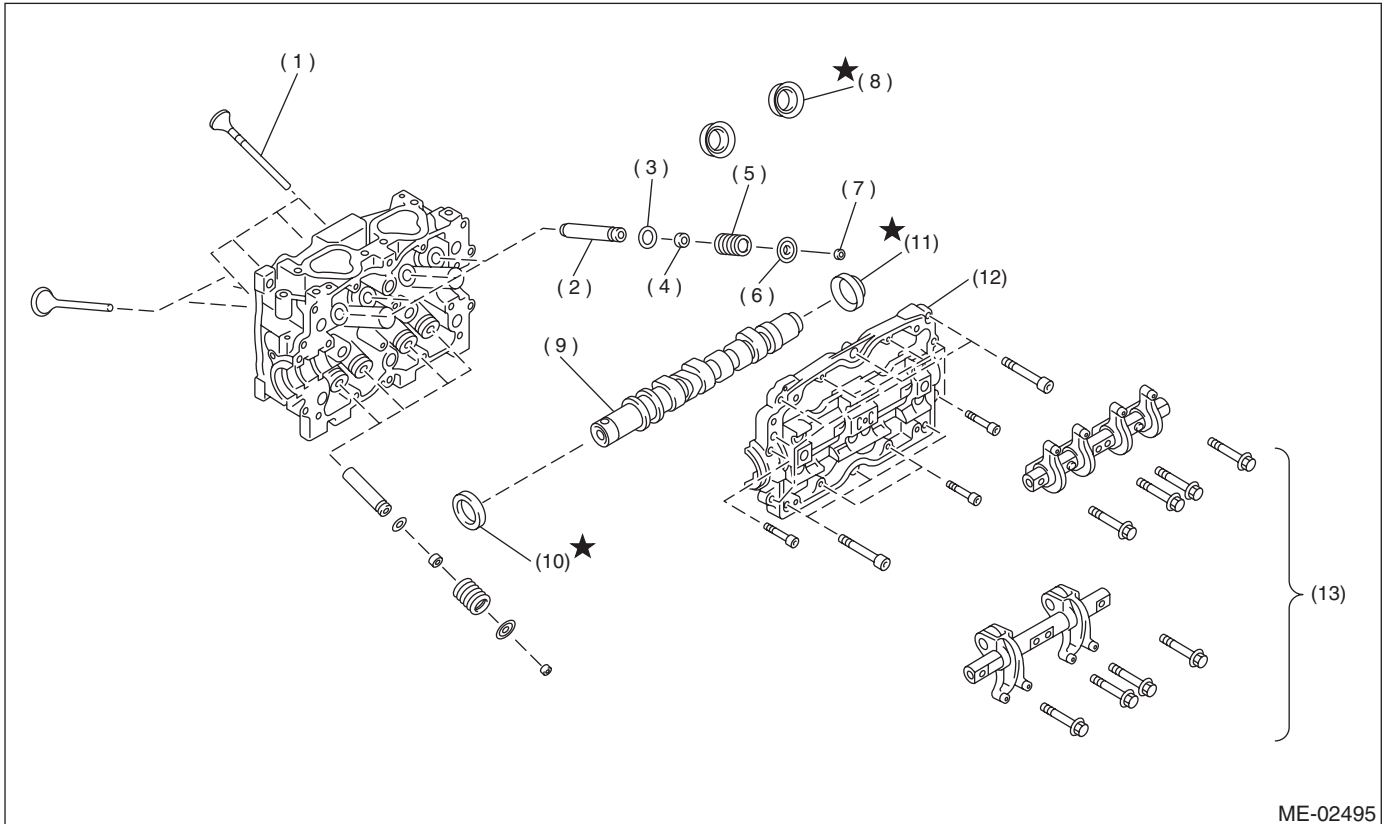

ME-02495

- | | | |
|-----------------------|----------------------------|------------------------|
| (1) Valve | (6) Retainer | (11) Plug |
| (2) Valve guide | (7) Retainer key | (12) Camshaft cap |
| (3) Valve spring seat | (8) Spark plug pipe gasket | (13) Valve rocker ASSY |
| (4) Oil seal | (9) Camshaft | |
| (5) Valve spring | (10) Oil seal | |

1) Installation of valve spring and valve

(1) Place cylinder head on ST.

ST 498267800 CYLINDER HEAD TABLE

(2) Coat stem of each valve with engine oil and insert valve into valve guide.

NOTE:

When inserting valve into valve guide, use special care not to damage the oil seal lip.


(3) Install valve spring and retainer.

NOTE:

Be sure to install the valve springs with their close-coiled end facing the seat on the cylinder head.


(4) Set ST on valve spring.

ST 499718000 VALVE SPRING REMOVER

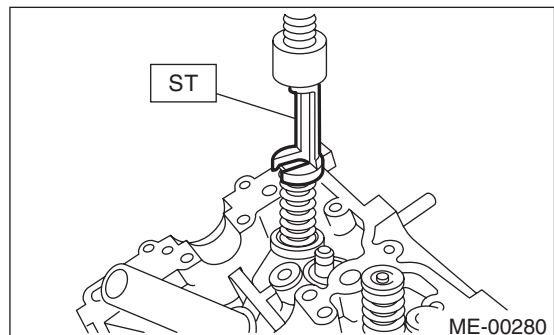

ME-00280

(5) Compress valve spring and fit retainer key.

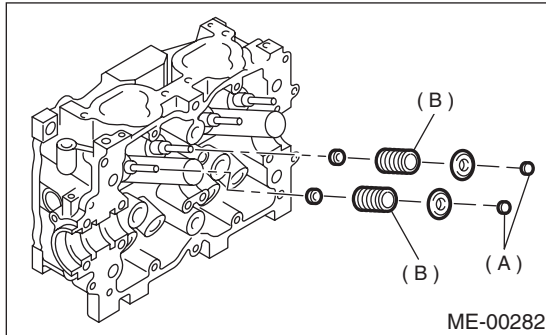

- (A) Retainer key
- (B) Painted face

(6) After installing, tap valve spring retainers lightly with wooden hammer for better seating.


E: INSPECTION

1. VALVE SPRING

1) Check valve springs for damage, free length, and tension. Replace valve spring if it is not to the specifications presented below.

2) To measure the squareness of the valve spring, stand the spring on a surface plate and measure its deflection at the top using a try square.

Free length	54.30 mm (2.1378 in)
Squareness	2.5°, 2.4 mm (0.094 in)
Tension/spring height	214 — 246 N (22 — 25 kgf, 48 — 55 lb)/ 45.0 mm (1.772 in)
	526 — 582 N (54 — 59 kgf, 119 — 130 lb)/34.7 mm (1.366 in)

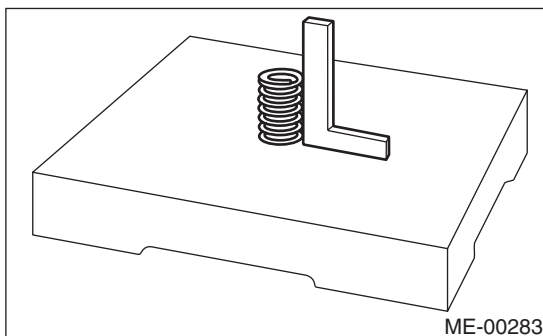

2. INTAKE AND EXHAUST VALVE OIL SEAL

If following conditions are found, use pliers to pinch oil seal and remove it from valve, and replace it new one.

- Lip is damaged
 - Spring out of place
 - Reconditioning of surfaces for valve and valve seat is necessary
 - Replacement of valve guide is necessary
- 1) Place cylinder head on ST1.
 - 2) Press-fit oil seal to the specified dimension indicated in the figure using ST2.

CAUTION:


- **Apply engine oil to oil seal before press-fitting.**
- **When press-fitting oil seal, do not use hammer or strike in.**
- **Differentiate between intake valve oil seal and exhaust valve oil seal by noting their difference in color.**

ST1 498267800 CYLINDER HEAD TABLE
ST2 498857100 VALVE OIL SEAL GUIDE

Color of rubber part:

Intake [Gray]

Exhaust [Green]

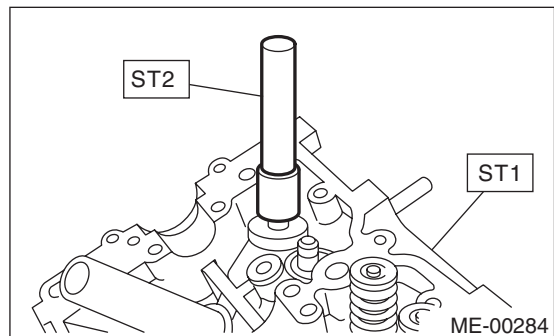

CYLINDER HEAD ASSEMBLY

MECHANICAL

F: ADJUSTMENT

1. CYLINDER HEAD

1) Make sure that no crack or other damage exists. In addition to visual inspection, inspect important areas by means of red lead check.

Also make sure that gasket installing surface shows no trace of gas and water leaks.

2) Place cylinder head on ST.

ST 498267800 CYLINDER HEAD TABLE

3) Measure the warping of the cylinder head surface that mates with crankcase using a straight edge and thickness gauge.

If the warping exceeds 0.05 mm (0.0020 in), regrind the surface with a surface grinder.

Warping limit:

0.035 mm (0.0014 in)

Grinding limit:


0.1 mm (0.004 in)

Standard height of cylinder head:

97.5 mm (3.839 in)

NOTE:

Uneven torque for the cylinder head bolts can cause warping. When reassembling, pay special attention to the torque so as to tighten evenly.

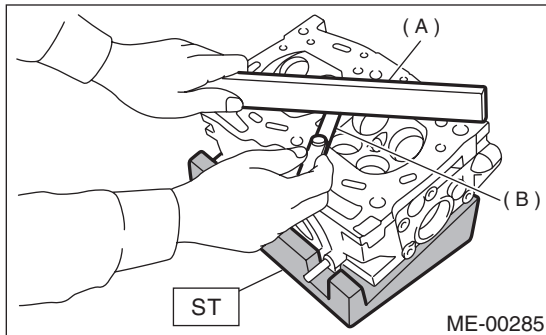

- (A) Straight edge
- (B) Thickness gauge

2. VALVE SEAT

Inspect intake and exhaust valve seats, and correct the contact surfaces with valve seat cutter if they are defective or when valve guides are replaced.

Valve seat width: *W*

Intake (A)



Standard 0.14 — 0.8 mm (0.0055 — 0.0315 in)

Limit 1.8 mm (0.071 in)

Exhaust (B)

Standard 1.2 — 1.8 mm (0.047 — 0.071 in)

Limit 2.2 mm (0.087 in)

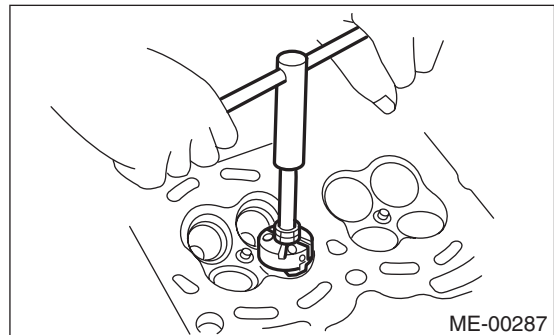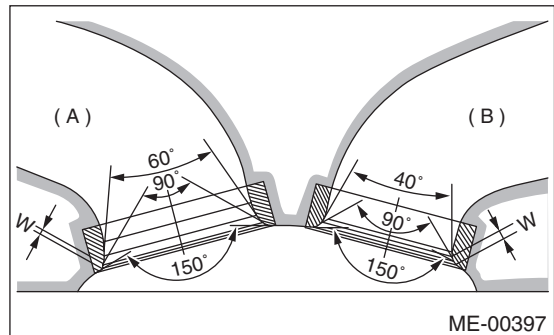

3. VALVE GUIDE

1) Check the clearance between valve guide and stem. The clearance can be checked by measuring the outside diameter of valve stem and the inside diameter of valve guide with outside and inside micrometers respectively.

Clearance between the valve guide and valve stem:



Standard

Intake 0.035 — 0.062 mm (0.0014 — 0.0024 in)

Exhaust 0.040 — 0.067 mm (0.0016 — 0.0026 in)

Limit

0.15 mm (0.0059 in)

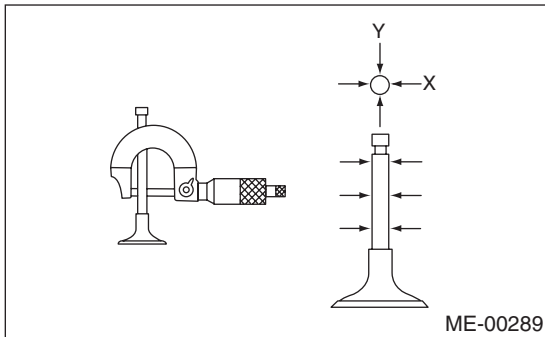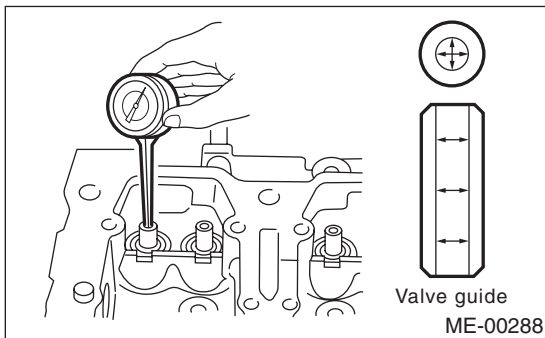

2) If the clearance between valve guide and stem exceeds the limit, replace valve guide or valve itself whichever shows greater amount of wear. See following procedure for valve guide replacement.

Valve guide inner diameter:

6.000 — 6.012 mm (0.2362 — 0.2367 in)

Valve stem outer diameters:

Intake

5.950 — 5.965 mm (0.2343 — 0.2348 in)


Exhaust

5.945 — 5.960 mm (0.2341 — 0.2346 in)

(1) Place cylinder head on ST1 with the combustion chamber upward so that valve guides enter the holes in ST1.

(2) Insert ST2 into valve guide and press it down to remove valve guide.

ST1 498267800 CYLINDER HEAD TABLE
ST2 499767200 VALVE GUIDE REMOVER

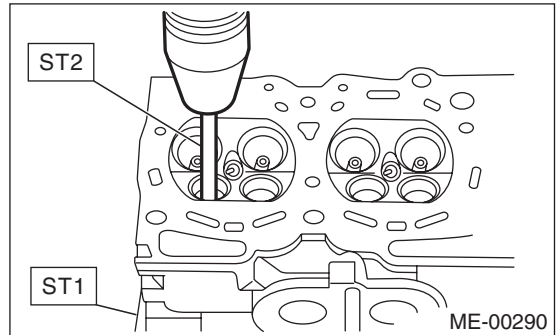


(3) Turn cylinder head upside down and place ST as shown in the figure.

Intake side:

ST 499767700 VALVE GUIDE ADJUSTER

Exhaust side:

ST 499767800 VALVE GUIDE ADJUSTER

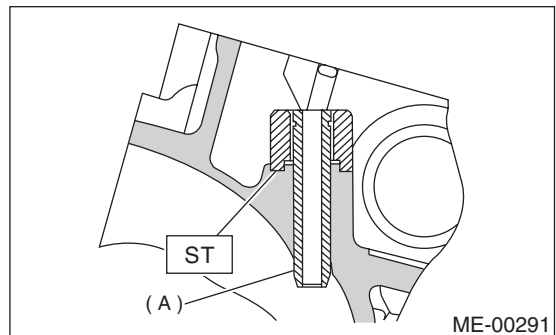

(A) Valve guide

CYLINDER HEAD ASSEMBLY

MECHANICAL

(4) Before installing new oversize valve guide, make sure that neither scratches nor damages exist on the inside surface of the valve guide holes in cylinder head.

(5) Put new valve guide, coated with sufficient oil, in cylinder, and insert ST1 into valve guide. Press in until the valve guide upper end is flush with the upper surface of ST2.


ST1 499767200 VALVE GUIDE REMOVER

Intake side:

ST2 499767700 VALVE GUIDE ADJUSTER

Exhaust side:

ST2 499767800 VALVE GUIDE ADJUSTER

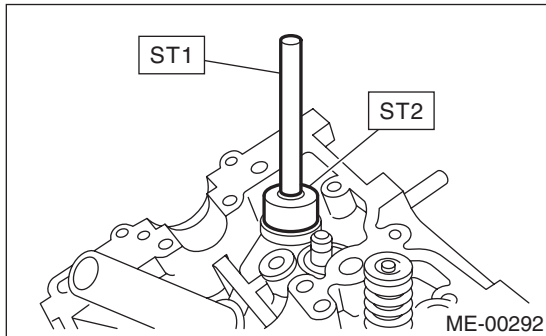

(6) Check the valve guide protrusion.


Valve guide protrusion: L

Intake

20.0 — 21.0 mm (0.787 — 0.827 in)

Exhaust

16.5 — 17.5 mm (0.650 — 0.689 in)

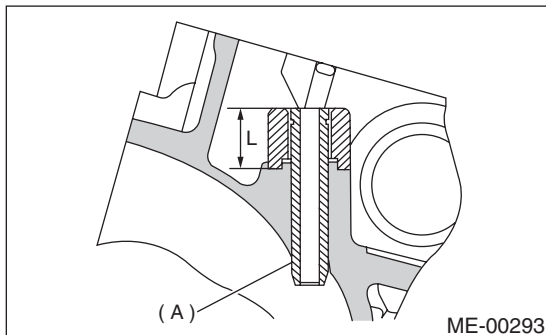


(A) Valve guide

(7) Ream the inside of valve guide with ST. Slowly rotate the reamer clockwise while pressing it lightly into valve guide, and return it also rotating clockwise. After reaming, clean valve guide to remove chips.

CAUTION:

- Apply engine oil to the reamer when reaming.
- If the inner surface of the valve guide is torn, the edge of the reamer should be slightly ground with an oil stone.
- If the inner surface of the valve guide becomes lustrous and the reamer does not chip, use a new reamer or remedy the reamer.

ST 499767400 VALVE GUIDE REAMER

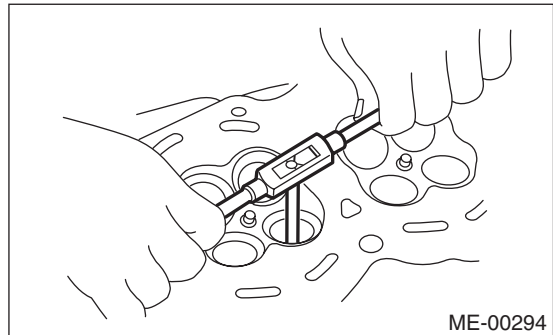

(8) Recheck the contact condition between valve and valve seat after replacing valve guide.

4. INTAKE AND EXHAUST VALVE

1) Inspect the flange and stem of valve, and replace if damaged, worn, or deformed, or if "H" is less than the specified limit.

H:

Intake

Standard 0.8 — 1.2 mm (0.031 — 0.047 in)

Limit 0.6 mm (0.024 in)

Exhaust

Standard 1.0 — 1.4 mm (0.039 — 0.055 in)

Limit 0.6 mm (0.024 in)


Valve overall length:

Intake

120.6 mm (4.75 in)

Exhaust

121.7 mm (4.79 in)

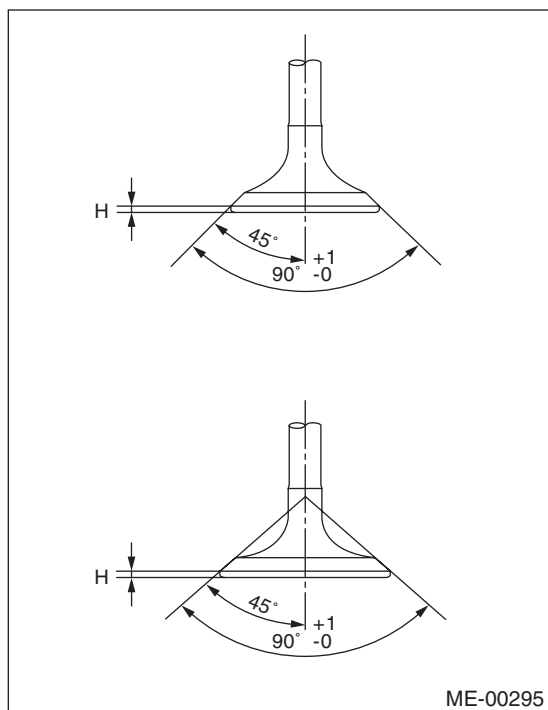

2) Put a small amount of grinding compound on the seat surface and lap the valve and seat surface. <Ref. to ME(H4SO)-62, VALVE SEAT, ADJUSTMENT, Cylinder Head Assembly.> Install a new intake valve oil seal after lapping.