


10. Reservoir Tank

A: REMOVAL

- 1) Disconnect the overflow hose from the radiator filler neck position.
- 2) Pull out the reservoir tank to direction of arrow while pushing the pawl (A).

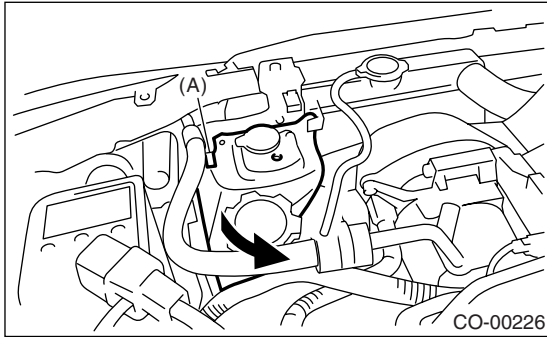

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Refer to COMPONENT for tightening torque. <Ref. to CO(H4DOTC)-3, COMPONENT, General Description.>

C: INSPECTION

Make sure the engine coolant level is between full and low.