

# REAR CATALYTIC CONVERTER


EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

---

## 3. Rear Catalytic Converter

### A: REMOVAL

- 1) Remove the center exhaust pipe. <Ref. to EX(H4DOTC)-9, REMOVAL, Center Exhaust Pipe.>
- 2) Separate the rear catalytic converter (B) from front catalytic converter (A).

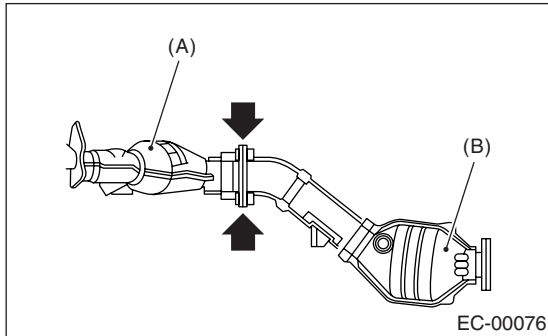

### B: INSTALLATION

NOTE:

- Replace the gaskets with new ones.
- Install in the reverse order of removal.

### C: INSPECTION

- 1) Make sure there are no exhaust leaks from connections and welds.
- 2) Make sure there are no holes or rusting.