

MAIN FUEL LEVEL SENSOR

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

6. Main Fuel Level Sensor

A: REMOVAL

For work procedures, refer to FU(H4DOTC) section. <Ref. to FU(H4DOTC)-70, REMOVAL, Fuel Level Sensor.>

B: INSTALLATION

For work procedures, refer to FU(H4DOTC) section. <Ref. to FU(H4DOTC)-70, INSTALLATION, Fuel Level Sensor.>