

SUB FUEL LEVEL SENSOR

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

8. Sub Fuel Level Sensor

A: REMOVAL

For work procedures, refer to “FU(H4DOTC)” section. <Ref. to FU(H4DOTC)-71, REMOVAL, Fuel Sub Level Sensor.>

B: INSTALLATION

For work procedures, refer to “FU(H4DOTC)” section. <Ref. to FU(H4DOTC)-71, INSTALLATION, Fuel Sub Level Sensor.>