


6. Muffler

A: REMOVAL

1) Separate the muffler from rear exhaust pipe.

CAUTION:

Be careful, the exhaust pipe is hot.

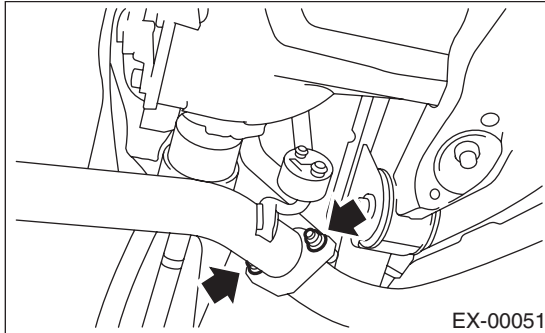

2) Remove the rubber cushions, and detach the muffler.



CAUTION:

Be careful not to drop the muffler during removal.

NOTE:

To facilitate removal, apply a coat of SUBARU CRC to the mating area of rubber cushions in advance.

SUBARU CRC (Part No. 004301003)

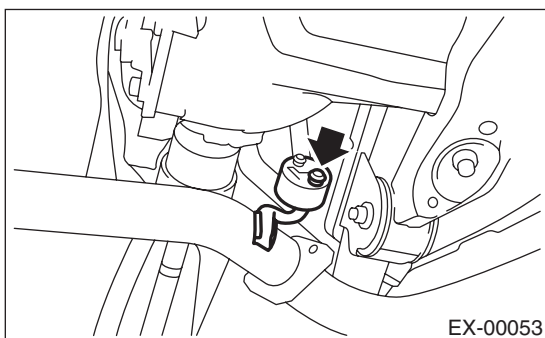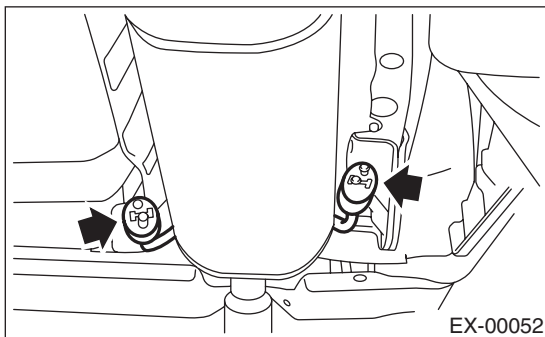

B: INSTALLATION


Install in the reverse order of removal.

NOTE:

Replace the gasket and self-locking nut with a new one.

Tightening torque:

48 N·m (4.9 kgf-m, 35.4 ft-lb)

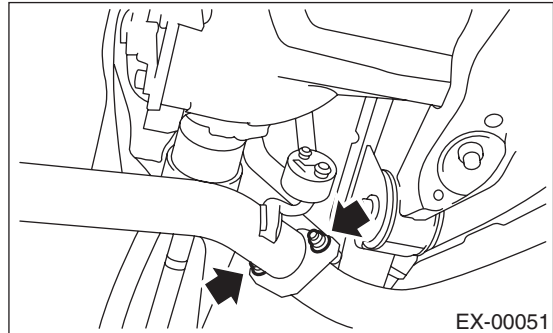

C: INSPECTION

- 1) Make sure there are no exhaust leaks from connections and welds.
- 2) Make sure there are no holes or rusting.
- 3) Make sure the cushion rubber is not worn or cracked.

MUFFLER

EXHAUST

MEMO: