

TUMBLE GENERATOR VALVE POSITION SENSOR

FUEL INJECTION (FUEL SYSTEMS)

13. Tumble Generator Valve Position Sensor

A: Specification

Do not remove tumble generator valve position sensor from tumble generator valve assembly because it cannot be adjusted when installed.

<Ref. to FU(H4DOTC)-34, REMOVAL, Tumble Generator Valve Assembly.>

<Ref. to FU(H4DOTC)-34, INSTALLATION, Tumble Generator Valve Assembly.>