


# EXHAUST TEMPERATURE SENSOR

FUEL INJECTION (FUEL SYSTEMS)

## 17. Exhaust Temperature Sensor

### A: REMOVAL

- 1) Disconnect the ground cable from battery.

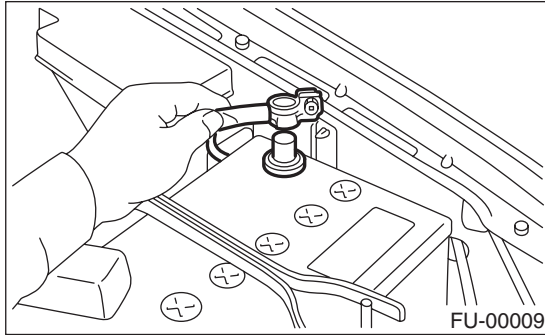


- 2) Remove the joint pipe. <Ref. to EX(H4DOTC)-13, REMOVAL, Joint Pipe.>
- 3) Apply SUBARU CRC or its equivalent to the threaded portion of exhaust temperature sensor, and leave it for one minute or more.

**SUBARU CRC (Part No. 004301003)**

- 4) Remove the exhaust temperature sensor.

#### CAUTION:

**When removing the exhaust temperature sensor, wait until joint pipe cools, otherwise it will damage exhaust pipe.**

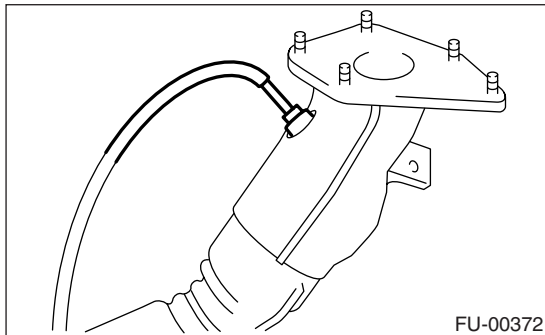

### B: INSTALLATION

- 1) Before installing exhaust temperature sensor, apply anti-seize compound only to the threaded portion of exhaust temperature sensor to make the next removal easier.

#### CAUTION:

**Never apply anti-seize compound to protector of exhaust temperature sensor.**

**Anti-seize compound:**

**SS-30 by JET LUBE**


- 2) Install the exhaust temperature sensor.

#### NOTE:

Align the harness (A) of exhaust temperature sensor to the marking (B) of joint pipe, and tighten the screws.

#### Tightening torque:

**21 N·m (2.1 kgf-m, 15.2 ft-lb)**

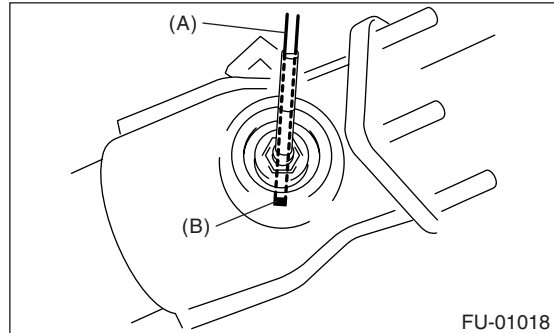

- 3) Install the joint pipe. <Ref. to EX(H4DOTC)-13, INSTALLATION, Joint Pipe.>

- 4) Connect the battery ground cable to battery.

