


MAIN RELAY

FUEL INJECTION (FUEL SYSTEMS)


19.Main Relay

A: REMOVAL

1) Disconnect the ground cable from battery.

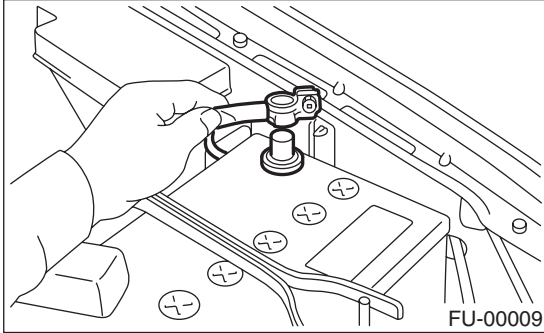

- 2) Remove the driver's side lower cover.
- 3) Disconnect the connectors from the main relay.
- 4) Remove the main relay from the bracket.

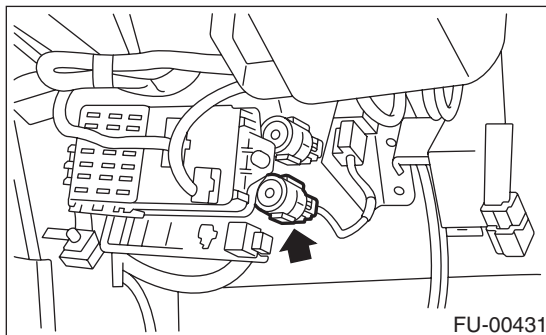

B: INSTALLATION

Install in the reverse order of removal.