



20. Fuel Pump Relay

A: REMOVAL

- 1) Disconnect the ground cable from battery.

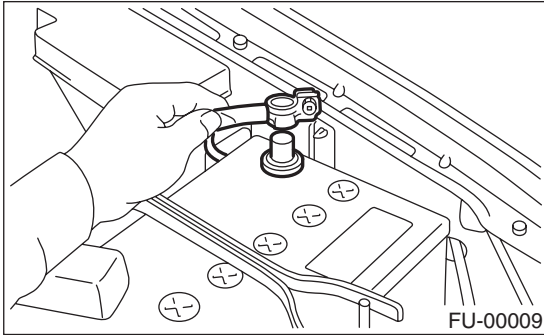

- 2) Remove the driver's side lower cover.
- 3) Disconnect the connector from the fuel pump relay.
- 4) Remove the fuel pump relay from the bracket.

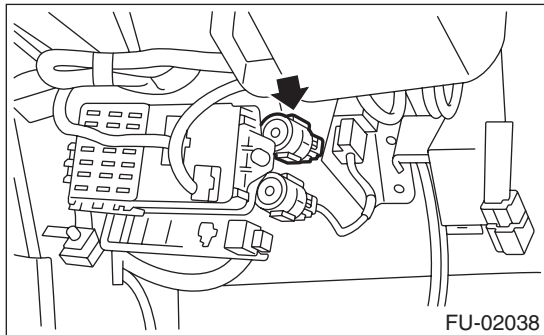

B: INSTALLATION

Install in the reverse order of removal.