


## 22. Fuel Pump Control Unit


### A: REMOVAL

1) Disconnect the ground cable from battery.

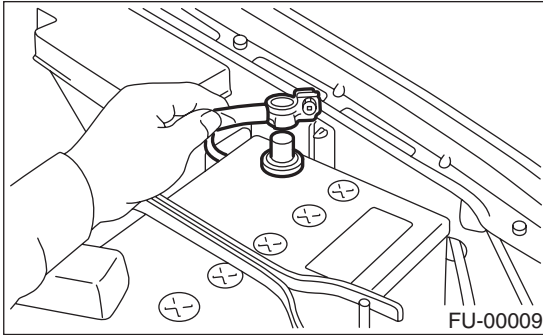

2) Remove the rear pillar trim. <Ref. to EI-52, REMOVAL, Rear Pillar Trim.>

3) Remove the fuel pump control unit bracket from the vehicle body.

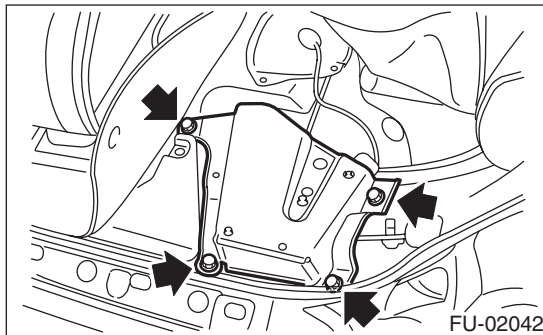

4) Disconnect the connector from the fuel pump control unit.

5) Remove the fuel pump control unit.

### B: INSTALLATION

Install in the reverse order of removal.