

## FUEL DAMPER VALVE

FUEL INJECTION (FUEL SYSTEMS)


---

### 31. Fuel Damper Valve

#### A: REMOVAL

1) Release the fuel pressure. <Ref. to FU(H4DOTC)-48, RELEASING OF FUEL PRESSURE, OPERATION, Fuel.>

2) Remove the fuel damper valve from the fuel delivery line and return line.

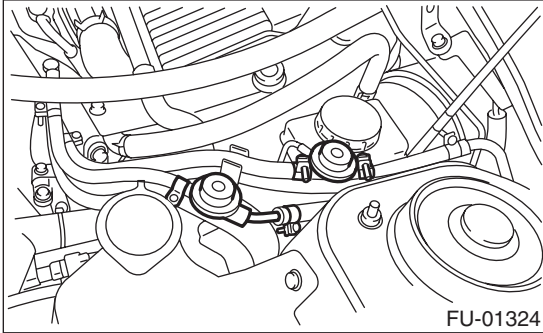

#### B: INSTALLATION

Install in the reverse order of removal.

**Tightening torque:**

**1.25 N·m (0.13 kgf·m, 0.94 ft·lb)**