



## 6. Camshaft Position Sensor

### A: REMOVAL

- 1) Disconnect the ground cable from battery.

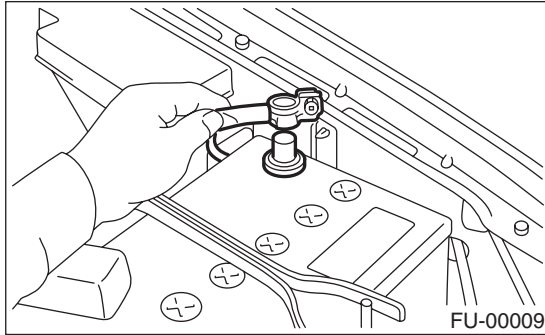

- 2) Disconnect the connector from the camshaft position sensor RH.
- 3) Remove the camshaft position sensor RH from the backside of cylinder head.

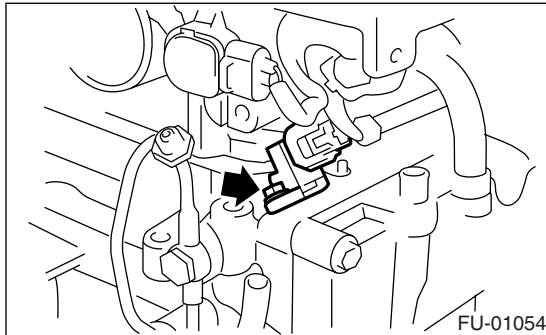

- 4) Remove the camshaft position sensor LH same as RH side.

### B: INSTALLATION

Install in the reverse order of removal.

#### **Tightening torque:**

**T: 6.4 N·m (0.65 kgf·m, 4.7 ft·lb)**

