

## 10.Engine Mounting

### A: REMOVAL

- 1) Remove the engine assembly. <Ref. to ME(H4DOTC)-34, REMOVAL, Engine Assembly.>
- 2) Remove the engine mounting from engine assembly.

### B: INSTALLATION

Install in the reverse order of removal.

#### *Tightening torque:*

##### *Engine mounting;*

*35 N·m (3.6 kgf-m, 25.8 ft-lb)*

### C: INSPECTION

Make sure there are no cracks or other damage.