


6. Engine Oil Pressure

Tightening torque:


25 N·m (2.5 kgf·m, 18.1 ft·lb)

A: INSPECTION

- 1) Remove the oil pressure switch from engine cylinder block. <Ref. to LU(H4DOTC)-19, Oil Pressure Switch.>
- 2) Connect the oil pressure gauge hose to cylinder block.
- 3) Connect the battery ground cable to battery.

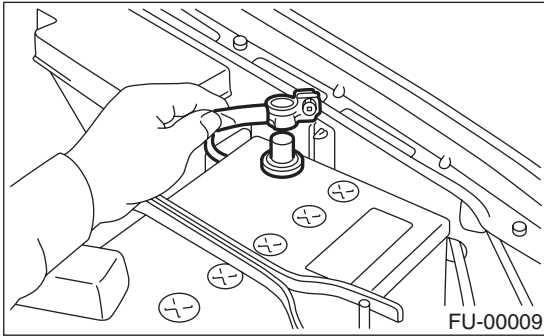

- 4) Start the engine, and then measure the oil pressure.

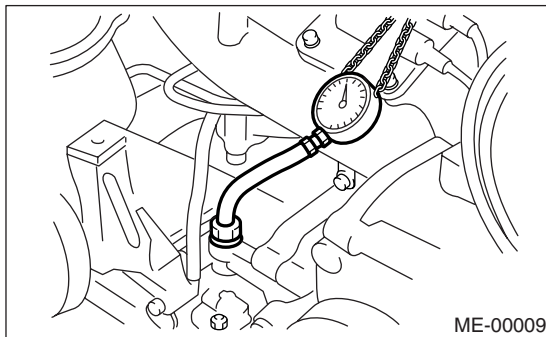

Oil pressure:

98 kPa (1.0 kgf/cm², 14 psi) or more at 600 rpm

294 kPa (3.0 kgf/cm², 43 psi) or more at 5,000 rpm

CAUTION:

- If the oil pressure is out of specification, check oil pump, oil filter and lubrication line. <Ref. to LU(H4DOTC)-23, INSPECTION, Engine Lubrication System Trouble in General.>
- If the oil pressure warning light is turned ON and oil pressure is in specification, replace the oil pressure switch. <Ref. to LU(H4DOTC)-19, Oil Pressure Switch.>

NOTE:

The specified data is based on an engine oil temperature of 80°C (176°F).

- 5) After measuring the oil pressure, install the oil pressure switch. <Ref. to LU(H4DOTC)-19, INSTALLATION, Oil Pressure Switch.>