

EXTENSION CASE OIL SEAL

AUTOMATIC TRANSMISSION

11. Extension Case Oil Seal

A: INSPECTION

Make sure the ATF does not leak from the joint of transmission and propeller shaft. If so, replace the oil seal. <Ref. to 4AT-48, REPLACEMENT.>

B: REPLACEMENT


- 1) Clean the transmission exterior.
- 2) Drain the ATF completely.

NOTE:

Tighten the ATF drain plug after draining the ATF.

Tightening torque:

25 N·m (2.5 kgf·m, 18.1 ft·lb)

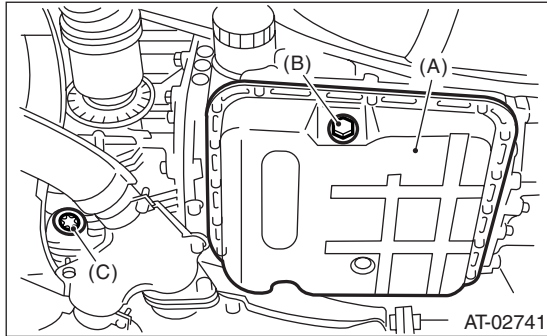

- (A) Oil pan
- (B) Drain plug
- (C) Differential oil drain plug

- 3) Remove the rear exhaust pipe and muffler.

NON-TURBO model

<Ref. to EX(H4SO)-9, REMOVAL, Rear Exhaust Pipe.> and <Ref. to EX(H4SO)-10, REMOVAL, Muffler.>

TURBO model

<Ref. to EX(H4DOTC)-14, REMOVAL, Rear Exhaust Pipe.> and <Ref. to EX(H4DOTC)-15, REMOVAL, Muffler.>

- 4) Remove the heat shield cover. (If equipped)
- 5) Remove the propeller shaft. <Ref. to DS-15, REMOVAL, Propeller Shaft.>
- 6) Using the ST, remove the oil seal.
ST 398527700 PULLER ASSY
- 7) Using the ST, install the oil seal.
ST 498057300 INSTALLER
- 8) Install the propeller shaft. <Ref. to DS-16, INSTALLATION, Propeller Shaft.>
- 9) Install the heat shield cover. (If equipped)

- 10) Install the rear exhaust pipe and muffler.

NON-TURBO model

<Ref. to EX(H4SO)-9, INSTALLATION, Rear Exhaust Pipe.> and <Ref. to EX(H4SO)-10, INSTALLATION, Muffler.>

TURBO model

<Ref. to EX(H4DOTC)-14, INSTALLATION, Rear Exhaust Pipe.> and <Ref. to EX(H4DOTC)-15, INSTALLATION, Muffler.>

- 11) Pour ATF and check the ATF level. <Ref. to 4AT-31, Automatic Transmission Fluid.>