

15. Rear Vehicle Speed Sensor


A: REMOVAL

1. NON-TURBO MODEL

When removing the rear vehicle speed sensor, refer to "Front Vehicle Speed Sensor". <Ref. to 4AT-54, REMOVAL, Front Vehicle Speed Sensor.>


2. TURBO MODEL

- 1) Set vehicle on a lift.
- 2) Disconnect ground cable from battery.
- 3) Lift up the vehicle.
- 4) Disconnect rear vehicle speed sensor connector.

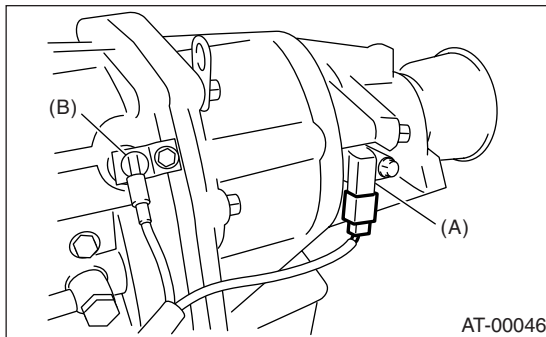

- (A) Rear vehicle speed sensor
(B) Front vehicle speed sensor

- 5) Remove rear vehicle speed sensor.

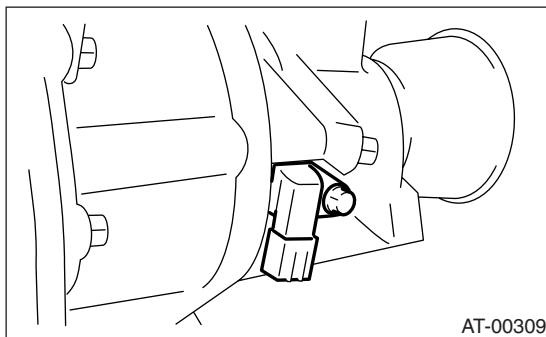

B: INSTALLATION

1. NON-TURBO MODEL

When installing the rear vehicle speed sensor, refer to "Front Vehicle Speed Sensor". <Ref. to 4AT-56, INSTALLATION, Front Vehicle Speed Sensor.>

2. TURBO MODEL

Install in the reverse order of removal.

NOTE:

Replace O-ring with a new one.

Tightening torque:

7 N·m (0.7 kgf-m, 5.1 ft-lb)