

TORQUE CONVERTER TURBINE SPEED SENSOR

AUTOMATIC TRANSMISSION

16. Torque Converter Turbine Speed Sensor

A: REMOVAL

When removing the torque converter turbine speed sensor, refer to "Front Vehicle Speed Sensor."
<Ref. to 4AT-54, REMOVAL.>

B: INSTALLATION

When installing the torque converter turbine speed sensor, refer to "Front Vehicle Speed Sensor."
<Ref. to 4AT-56, INSTALLATION.>