


35. Parking Pawl

A: REMOVAL


- 1) Remove the transmission assembly from the vehicle. <Ref. to 4AT-39, REMOVAL.>
- 2) Remove rear vehicle speed sensor and separate transmission case and extension case sections. <Ref. to 4AT-85, REMOVAL.>
- 3) Remove the reduction drive gear. (MPT model) <Ref. to 4AT-99, REMOVAL.>
- 4) Remove the center differential carrier. (VTD model) <Ref. to 4AT-101, REMOVAL.>
- 5) Remove the parking pawl, return spring and shaft.

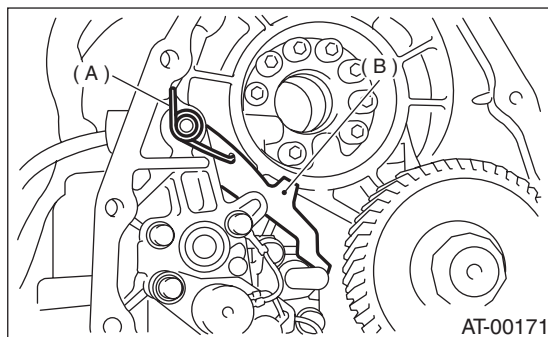

- (A) Return spring
(B) Parking pawl

B: INSTALLATION

- 1) Install the parking pawl, shaft and return spring.

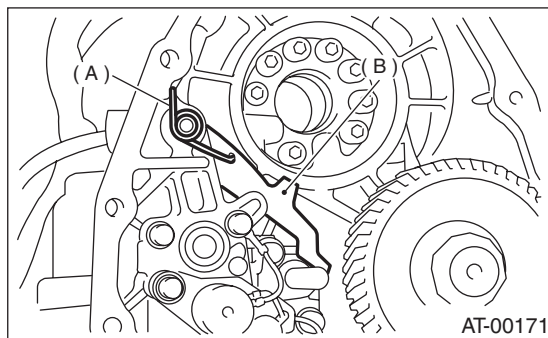

- (A) Return spring
(B) Parking pawl

- 2) Install the reduction drive gear. <Ref. to 4AT-99, INSTALLATION.>
- 3) Install the center differential carrier. (VTD model) <Ref. to 4AT-101, INSTALLATION.>
- 4) Install the rear vehicle speed sensor and extension case. <Ref. to 4AT-85, INSTALLATION.>
- 5) Install the transmission assembly to the vehicle. <Ref. to 4AT-42, INSTALLATION.>

C: INSPECTION

Make sure that the tab of the packing pole on the reduction gear is not worn or otherwise damaged.