

TRANSFER CLUTCH PRESSURE TEST

AUTOMATIC TRANSMISSION

8. Transfer Clutch Pressure Test

A: INSPECTION

• MPT MODEL

Check the transfer clutch pressure in accordance with the following chart in the same manner as with line pressure. <Ref. to 4AT-36, Line Pressure Test.>

ST 498897700 OIL PRESSURE ADAPTER SET


ST 498575400 OIL PRESSURE GAUGE ASSY

AWD mode: "D" range

FWD mode: "P" range, engine speed 2,000 rpm

NOTE:

Before setting in FWD mode, install the spare fuse on FWD mode switch.

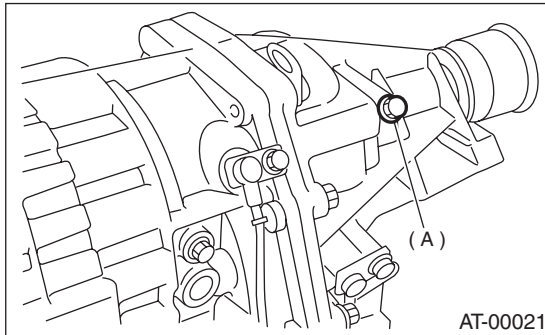


(A) Test plug

• VTD MODEL

Check transfer clutch pressure using the following chart. <Ref. to 4AT-36, Line Pressure Test.>

ST 498897700 OIL PRESSURE ADAPTER SET

ST 498575400 OIL PRESSURE GAUGE ASSY

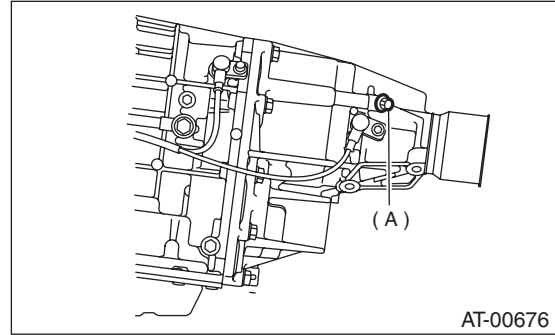

(A) Test plug

Range position	ON Duty ratio (%)	Accelerator pedal opening	Standard of transfer clutch pressure kPa (kg/cm ² , psi)
2	95	Fully open	1,000 — 1,200 (10.20 — 13.26, 145.0 — 188.5)
2	60	Adjusts so that an ON duty ratio may become 60%.	500 — 700 (5.10 — 7.14, 72.5 — 101.5)
N or P	5	Fully closed	0 (0, 0)

NOTE:

If oil pressure is not produced or if it does not change in the AWD mode, the transfer duty solenoid or transfer valve assembly may be malfunctioning. If oil pressure is produced in the FWD mode, the problem is similar to that in the AWD mode.

Standard transfer clutch pressure kPa (kg/cm ² , psi)				
Range position	ON Duty ratio (%)	Throttle position	AWD mode	FWD mode
2	95	Fully open	910 — 1,070 (9.28 — 10.91, 132.0 — 155.2)	—
2	60	Adjusts so that an ON duty ratio may become 60%.	410 — 490 (4.18 — 5.00, 59.5 — 71.1)	—
2	5	Fully closed	—	0 (0, 0)
N or P	5	Fully closed	0 (0, 0)	—