

7. Read Diagnostic Trouble Code (DTC)

A: OPERATION

Refer to Subaru Select Monitor for information about how to obtain and understand DTC. <Ref. to 4AT(D)-14, OPERATION.>

NOTE:

DTC can not be read through AT OIL TEMP warning light.