

## 9. Clear Memory Mode

### A: OPERATION

#### 1. WITHOUT SUBARU SELECT MONITOR

Current diagnostic trouble codes (DTC) shown on display are cleared by turning the ignition switch to OFF after conducting on-board diagnostics operation. Previous diagnostic trouble codes (DTC), however, cannot be cleared since they are stored in the TCM memory which is operating on back-up power supply. These diagnostic trouble codes (DTC) can be cleared by removing the TCM connector for at least two minutes.

#### **CLEAR MEMORY:**

##### ***Removal of TCM connector (B56) (for at least two minutes)***

- The TCM connector (B56) is located in the line to memory back-up power supply of TCM. Removal of this connector clears the previous diagnostic trouble codes (DTC) stored in TCM memory.
- Be sure to remove the TCM connector (B56) for at least the specified length of time. Otherwise, the diagnostic trouble codes (DTC) may not be cleared.

#### 2. WITH SUBARU SELECT MONITOR

Refer to Subaru Select Monitor for information about how to clear DTC.

<Ref. to 4AT(D)-16, CLEAR MEMORY MODE.>