9. General Diagnostic

A: INSPECTION

Symptom	Problem parts
Shift lock does not function.	Stop light switch Shift lock solenoid Integrated module
Shift lock cannot be released.	Stop light switch Shift lock solenoid Integrated module Inhibitor switch
Key interlock does not function.	Key warning switch"P" position switchKey lock solenoidIntegrated module
Key interlock cannot be released.	Key warning switch"P" position switchKey lock solenoidIntegrated module
Starter does not run.	Inhibitor switch Select cable Starter circuit
Back-up light does not light up.	Inhibitor switch Select cable Back-up light circuit