

### 7. Rear Tone Wheel

#### A: REMOVAL

Refer to Rear Drive Shaft, because rear tone wheel is integrated with rear drive shaft.

<Ref. to DS-37, REMOVAL, Rear Drive Shaft.>

#### B: INSTALLATION

Refer to Rear Drive Shaft, because rear tone wheel is integrated with rear drive shaft.

<Ref. to DS-37, INSTALLATION, Rear Drive Shaft.>

#### C: INSPECTION

Visually check tone wheels teeth (44 pieces) for cracks or dents. If necessary, replace tone wheel with a new one.

#### NOTE:

Replace BJ assembly with new one as a single unit if there are any defects found on tone wheel is unitized with BJ assembly of drive shaft.