

BASIC DIAGNOSTIC PROCEDURE

ABS (DIAGNOSTICS)

1. Basic Diagnostic Procedure

A: PROCEDURE

CAUTION:

Remove foreign matter (dust, water, etc.) from the ABSCM&H/U connector during removal and installation.

NOTE:

- To check harness for broken wires or short circuits, shake it while holding it or the connector.
- Check list for interview. <Ref. to ABS-4, CHECK, Check List for Interview.>

Step	Check	Yes	No
1 CHECK PRE-INSPECTION. 1) Ask the customer when and how the trouble occurred using interview checklist. <Ref. to ABS-4, Check List for Interview.> 2) Before performing diagnosis, inspect unit which might influence the ABS problem. <Ref. to ABS-7, INSPECTION, General Description.>	Is unit that might influence the ABS problem normal?	Go to step 2.	Repair or replace each unit.
2 CHECK INDICATION OF TROUBLE CODE DISPLAY. 1) Turn ignition switch to OFF. 2) Connect the SUBARU SELECT MONITOR to data link connector. 3) Turn ignition switch to ON and SUBARU SELECT MONITOR to ON. NOTE: If the communication function of the select monitor cannot be executed normally, check the communication circuit. <Ref. to ABS-34, COMMUNICATION WITH SUBARU SELECT MONITOR IS IMPOSSIBLE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> 4) Read diagnostic trouble code (DTC). <Ref. to ABS-17, READ CURRENT DATA, OPERATION, Subaru Select Monitor.> 5) Record all diagnostic trouble codes (DTC) and frame data.	Is the DTC displayed?	Go to step 4.	Go to step 3.
3 PERFORM THE GENERAL DIAGNOSTICS. 1) Inspect using "General Diagnostics Table". <Ref. to ABS-101, General Diagnostics Table.> 2) Perform the clear memory mode. <Ref. to ABS-17, CLEAR MEMORY MODE, OPERATION, Subaru Select Monitor.> 3) Perform the inspection mode. <Ref. to ABS-20, Inspection Mode.> 4) Calling up the diagnostic trouble code (DTC). <Ref. to ABS-16, READ DIAGNOSTIC TROUBLE CODE (DTC), OPERATION, Subaru Select Monitor.> Confirm that no DTC is displayed.	Does ABS warning light remain off?	Complete the diagnosis.	Go to step 4.

BASIC DIAGNOSTIC PROCEDURE

ABS (DIAGNOSTICS)

Step	Check	Yes	No
<p>4</p> <p>PERFORM THE DIAGNOSIS.</p> <p>1) Inspect using "Diagnostics Chart with Subaru Select Monitor". <Ref. to ABS-34, Diagnostic Procedure with Diagnostic Trouble Code (DTC).></p> <p>NOTE: For diagnostic trouble code (DTC) list, refer to "List of Diagnostics Trouble Code (DTC)". <Ref. to ABS-32, LIST, List of Diagnostics Trouble Code (DTC).></p> <p>2) Repair trouble cause.</p> <p>3) Perform the clear memory mode. <Ref. to ABS-17, CLEAR MEMORY MODE, OPERATION, Subaru Select Monitor.></p> <p>4) Perform the inspection mode. <Ref. to ABS-20, Inspection Mode.></p> <p>5) Calling up the diagnostic trouble code (DTC). <Ref. to ABS-16, READ DIAGNOSTIC TROUBLE CODE (DTC), OPERATION, Subaru Select Monitor.></p> <p>Confirm that no DTC is displayed.</p>	<p>Does ABS warning light remain off?</p>	<p>Complete the diagnosis.</p>	<p>Inspect using "Diagnostics Chart with Subaru Select Monitor". <Ref. to ABS-<Ref. to ABS-34, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>, Diagnostics Chart with Subaru Select Monitor.></p>