

### **7. Read Diagnostic Trouble Code (DTC)**

#### **A: OPERATION**

Refer to SUBARU SELECT MONITOR for information about how to obtain and understand diagnostic trouble codes (DTC). <Ref. to ABS-16, Subaru Select Monitor.>