


11.Helper

A: REMOVAL

1) Jack-up the rear part of the vehicle, support it with safety stands (rigid racks).

2) Using ST, remove helper.

ST 20099AE030 HELPER SOCKET WRENCH

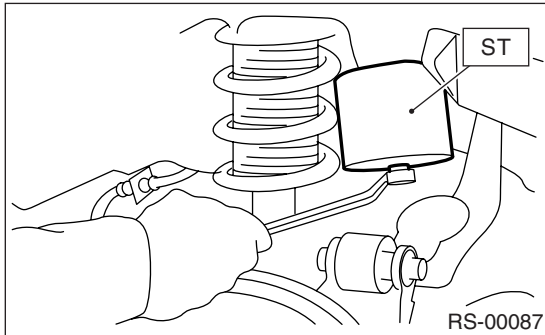

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

30 N·m (3.1 kgf·m, 22.4 ft·lb)

C: INSPECTION

Check helper for cracks, fatigue or damage.