



7. Spare Tire Hoist

A: REMOVAL

- 1) Remove spare tire from the vehicle.
- 2) Lift up the vehicle.
- 3) Remove spare tire guide.

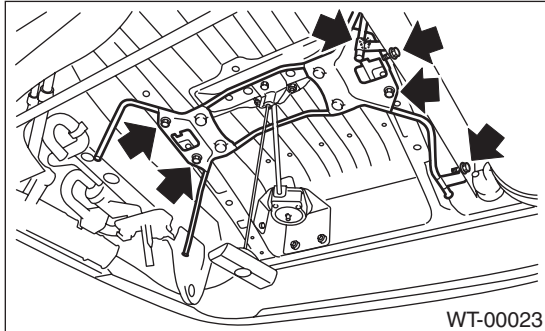

- 4) Remove spare tire hoist.

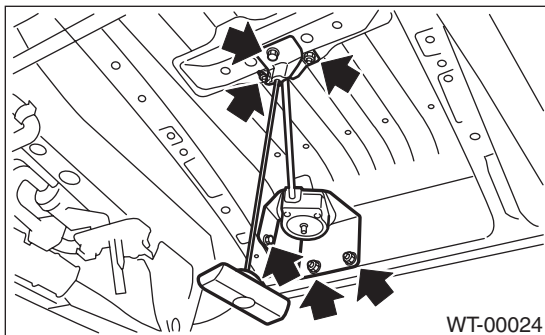

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

Spare guide to body;

18 N·m (1.8 kgf·m, 13.0 ft·lb)

Spare guide to heat shield plate;

13 N·m (1.3 kgf·m, 9.4 ft·lb)