

LIST OF DIAGNOSTIC TROUBLE CODE (DTC)

AIRBAG SYSTEM (DIAGNOSTICS)

11. List of Diagnostic Trouble Code (DTC)

A: LIST

| DTC | Memory function | Contents of diagnosis | Index No. |
|-----|-----------------|---|---|
| 11 | Provided. | <ul style="list-style-type: none"> • Airbag main harness circuit is open, shorted or shorted to ground. • Airbag module harness (driver) circuit is open, shorted or shorted to ground. • Roll connector circuit is open, shorted or shorted to ground. • Airbag control module is faulty. • Driver's airbag module is faulty. | <Ref. to AB-28, DTC 11, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| 12 | Provided. | <ul style="list-style-type: none"> • Airbag main harness circuit is open, shorted or shorted to ground. • Airbag module harness (passenger) circuit is open, shorted or shorted to ground. • Airbag control module is faulty. • Passenger's airbag module is faulty. | <Ref. to AB-30, DTC 12, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| 15 | Provided. | <ul style="list-style-type: none"> • Airbag main harness circuit (driver) is shorted to power supply. • Airbag module harness (driver) is shorted to power supply. • Roll connector is shorted to power supply. • Airbag control module is faulty. • Driver's airbag module is faulty. | <Ref. to AB-32, DTC 15, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| 16 | Provided. | <ul style="list-style-type: none"> • Airbag main harness circuit (passenger) is shorted to power supply. • Airbag module harness (passenger) is shorted to power supply. • Airbag control module is faulty. • Passenger's airbag module is faulty. | <Ref. to AB-34, DTC 16, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| 21 | Provided. | Airbag control module is faulty. | <Ref. to AB-35, DTC 21, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| 22 | Provided. | Front airbag module and seat belt pretensioner (LH/RH) are inflated. | <Ref. to AB-36, DTC 22, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| 23 | Not provided. | (AB6), (AB17) and (AB18) are not connected properly to airbag control module. | <Ref. to AB-37, DTC 23, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| 24 | Not provided. | <ul style="list-style-type: none"> • Airbag control module is faulty. • Airbag main harness circuit is open. • Fuse No. 11 (in joint box) is blown. • Body harness circuit is open. | <Ref. to AB-38, DTC 24, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| 25 | Provided. | <ul style="list-style-type: none"> • Airbag control module is faulty. • Airbag main harness circuit is open. • Fuse No. 6 (in joint box) is blown. • Body harness circuit is open. | <Ref. to AB-40, DTC 25, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| 31 | Provided. | <ul style="list-style-type: none"> • Front sub-sensor harness (RH) circuit is shorted. • Front sub-sensor harness (RH) circuit is open. • Front sub-sensor (RH) is faulty. • Airbag control module is faulty. | <Ref. to AB-42, DTC 31, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |

LIST OF DIAGNOSTIC TROUBLE CODE (DTC)

AIRBAG SYSTEM (DIAGNOSTICS)

| DTC | Memory function | Contents of diagnosis | Index No. |
|-----|-----------------|---|---|
| 32 | Provided. | <ul style="list-style-type: none"> • Front sub-sensor harness (LH) circuit is shorted. • Front sub-sensor harness (LH) circuit is open. • Front sub-sensor (LH) is faulty. • Airbag control module is faulty. | <Ref. to AB-46, DTC 32, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| 61 | Provided. | <ul style="list-style-type: none"> • Seat belt pretensioner (RH) circuit is open, shorted or shorted to ground. • Airbag control module is faulty. • Pretensioner is faulty. • Pretensioner harness is faulty. | <Ref. to AB-50, DTC 61, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| 62 | Provided. | <ul style="list-style-type: none"> • Seat belt pretensioner (LH) circuit is open, shorted or shorted to ground. • Airbag control module is faulty. • Pretensioner is faulty. • Pretensioner harness is faulty. | <Ref. to AB-52, DTC 62, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| 65 | Provided. | <ul style="list-style-type: none"> • Seat belt pretensioner (RH) circuit is shorted to power supply. • Pretensioner is faulty. • Pretensioner harness is faulty. • Airbag control module is faulty. | <Ref. to AB-54, DTC 65, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| 66 | Provided. | <ul style="list-style-type: none"> • Seat belt pretensioner (LH) circuit is shorted to power supply. • Pretensioner is faulty. • Pretensioner harness is faulty. • Airbag control module is faulty. | <Ref. to AB-56, DTC 66, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| 72 | Provided. | <ul style="list-style-type: none"> • Airbag harness is open, shorted or shorted to ground. • Airbag module harness (passenger) circuit is open, shorted or shorted to ground. • Airbag control module is faulty. • Passenger's airbag module is faulty. | <Ref. to AB-58, DTC 72, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| 76 | Provided. | <ul style="list-style-type: none"> • Airbag harness (passenger) is shorted or shorted to power supply. • Airbag module harness (passenger) is shorted to power supply. • Airbag control module is faulty. <p>Passenger's airbag module is faulty.</p> | <Ref. to AB-60, DTC 76, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |