

3. Cruise Control Module

A: NOTE


1. MODEL WITH ELECTRONIC CONTROL THROTTLE

Cruise control system is controlled by Engine Control Module (ECM).

B: REMOVAL

1. MODEL WITHOUT ELECTRONIC CONTROL THROTTLE

- 1) Disconnect ground cable from battery.
- 2) Remove glove box. <Ref. to EI-34, REMOVAL, Glove Box.>
- 3) Remove nut, then remove cruise control module (A) and the other electrical control module (B) while disconnecting connector.

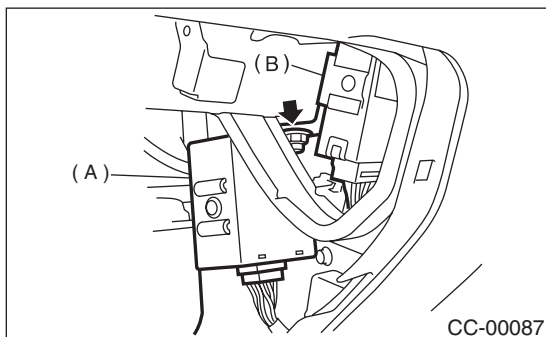

- 4) Disconnect cruise control module and the other electrical control module.

2. MODEL WITH ELECTRONIC CONTROL THROTTLE

<Ref. to FU(H4DOTC)-43, REMOVAL, Engine Control Module (ECM).>

C: INSTALLATION

1. MODEL WITHOUT ELECTRONIC CONTROL THROTTLE

Install is in the reverse order of removal.

2. MODEL WITH ELECTRONIC CONTROL THROTTLE

<Ref. to FU(H4DOTC)-43, INSTALLATION, Engine Control Module (ECM).>