

7. Clutch Switch

A: REMOVAL


- 1) Disconnect ground cable from battery.
- 2) Disconnect the connector from the clutch switch, and then remove the switch. <Ref. to CL-27, REMOVAL, Clutch Pedal.>

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Measure clutch switch resistance.

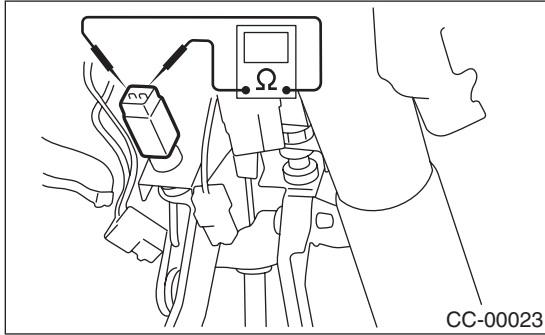

Switch	Pedal	Terminal No.	Standard
Clutch	Released	1 and 2	Less than 1 Ω
	Depressed	1 and 2	More than 1 M Ω

If NG, replace the clutch switch.